

# Baby Swing User Manual



Item : #384



Before installing and using, please follow the instructions carefully to ensure the safety of your child.

# WARNING

## PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFETY FOR YOUR CHILD

1. Always secure infant in restraint system provided.
2. Never leave infant unattended in the swing.
3. For ages 0-6 months
4. The maximum weight for this product is 25 lbs.
5. DO NOT move or lift the product from the toys or canopy.
6. DO NOT move or lift the product when the child is sitting in it.
7. DO NOT hang other items from the canopy except for the toys included in this product.
8. DO NOT place the product at an elevated surface (table, stairs, or any other elevated surface) to reduce fall risk.
9. Its dangerous to use this product on an elevated surface.
10. DO NOT use this product on anything soft such as a sofa or bed to avoid falling and asphyxiation.
11. If the child is able to sit up unassisted, please use this product under adult supervision.
12. This product is not classified as a toy.
13. DO NOT open or fold the product with the child inside of it.
14. When using the music player, please make sure to start at a low volume and to raise the volume gradually.
15. DO NOT use if any parts are missing or broken. Never substitute parts.
16. Keep the product away from fire.
17. Discontinue use of product when infant intends to climb out (approximately 9 months).

## FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Thank you for choosing Dream On Me and congratulations on joining The DOM Family, a family that has been transforming lives for 30 years! We appreciate your feedback and wish you the very best in the coming years with your new addition. If you have any questions or concerns please don't hesitate to reach out and a trusted DOM representative will assist you. Thank you again for entrusting us to supply you with the safest, functional and affordable baby products and accessories. Feel free to follow us on Facebook and Instagram for further opportunities and offers.


## ⚠ WARNING

- 1) Do not charge with non-rechargeable lithium batteries.
- 2) Practical in adult supervision.
- 3) When charging with adaptor, please take out the batteries.
- 4) Do not use with mixed batteries.
- 5) The battery should be placed in the correct polarity.
- 6) The exhausted battery should be removed from the product.
- 7) No short circuit of power terminals.
- 8) Forbid to use the non-matching adaptor ,the input voltage of adaptor is 100-240V/50/60HZ 0.3A
- 9) Keep the adaptor away from child while using.
- 10) Check the adaptor, accessory at regular period. If you find any damages of parts please stop using.

## Remote control

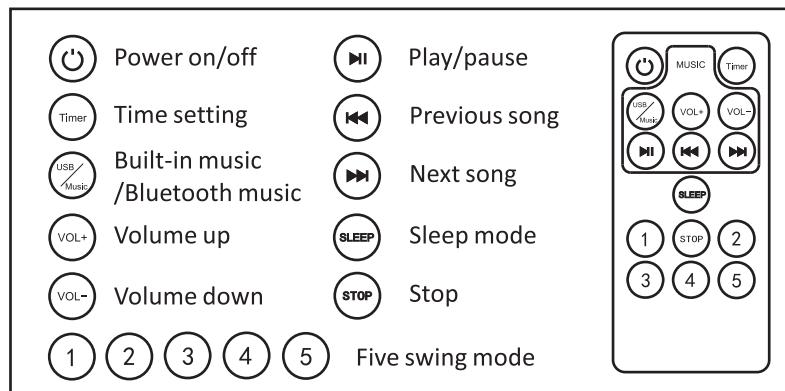


## Panel


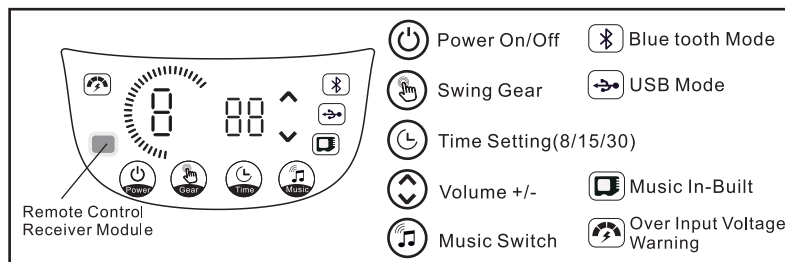 


## Batteries install

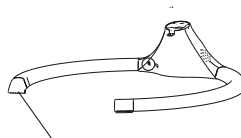 

  
 




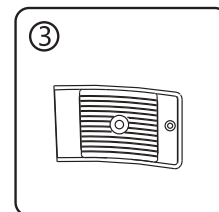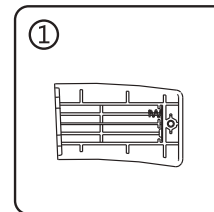

4\*AAA alkaline batteries



## Battery compartment

 


## User instructions

- 1) Power switch button: touch the  one time and see that the indicator light is on. Press the button a second time to turn off.
- 2) Touch the  to change the swing settings. There are 5 swing speeds indicated by the lights. the swing angels are 18, 21, 23, 25, and 31 degrees. the swing will stop automatically if the motor gets stuck.
- 3) Timer: touch the timer button . the first touch will have the swing chair swing for 8 minutes. the second touch will have it swing for 15 minutes, and the third will have it swing for 30 minutes.
- 4) This product can support a USB drive to play music. Insert the USB drive and touch the .
- 5) Music: 1) Touch  to play the built in music.  
2) Touch and hold  for 2 seconds to play the next song  
3) When the USB drive is pulled out, touch the  to play the built in music.
- 6) Press  to increase the volume. Press .
- 7) Bluetooth Connecting: Turn on the bluetooth on smart phone and connect with "BT-BABY". When the  lights up, the bluetooth is now connected.
- 8) If the swing shakes terribly, please check the safety lock and place the swing on a flat surface.

## Parts Instruction

Please check to make sure that all of the following parts listed are included in the box when opened. If there are any missing parts, please contact Dream On Me before using the product.

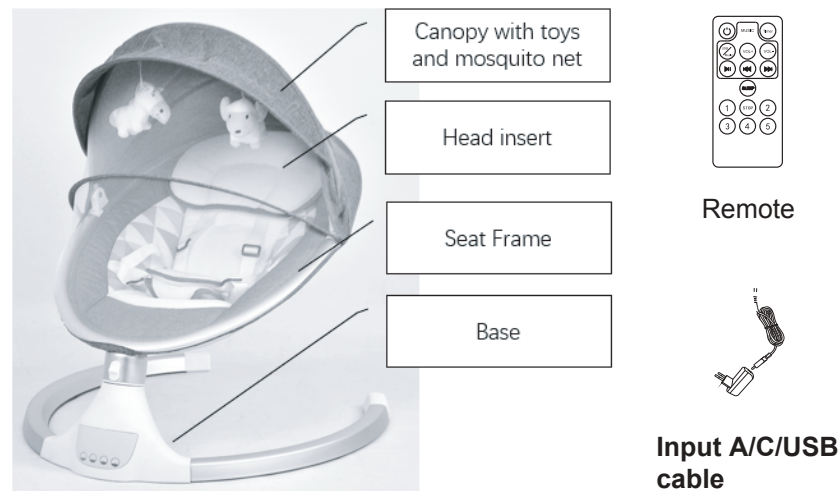

Please store your remote in the pocket located in back of seat (as shown in the image on the right)



## Cleaning&Maintenance

 
Seat Pad: Dismantle the seat and wash it by machine/hand in cool water.

Toy Bar & Toys: Scrub with a damp cloth and soft mild soap. Air dry. Do not wash them in water.


Filling: Fireproof hard ressin cotton. WARNING! DO NOT BLEACH.

## Assembling Detail

Put the frame in the base

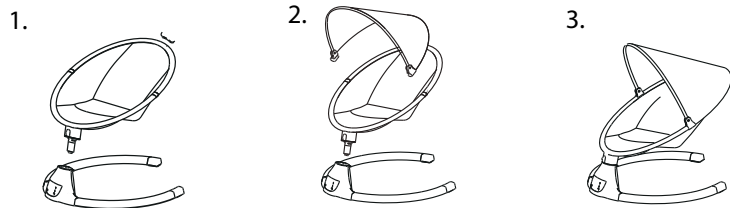

 Pull out the metal plate and pull up the seat when disassembling.

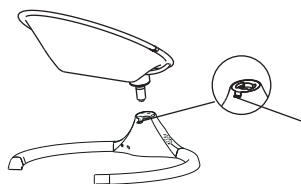

Pull out the metal plate and pull up the seat

## Safety Instruction

Buckle infant in the swing chair.

 


Adjusting the waist belt or shoulder belt.


Tighten the waist belt.



Loosen the waist belt.

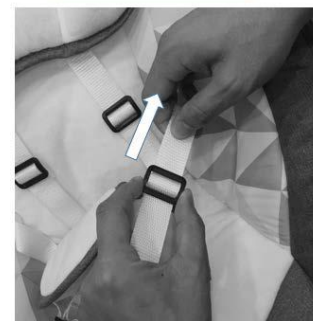

## Adaptor

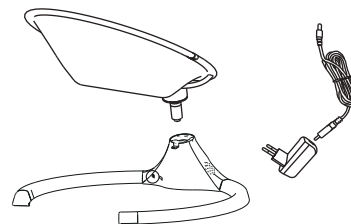 

Plug adapter into the swing chair.  
Only use the adapter that comes with this product.