




2 in 1 BABY WALKER

Model No.: #403

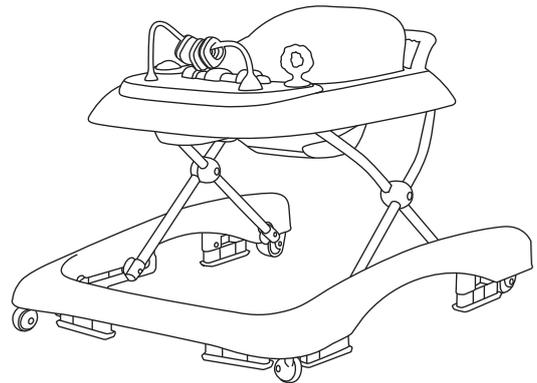

- broken or missing .
- 9) This baby walker should be used only for short periods of time (e.g.20 min).
 - 10) This baby walking frame is intended to be used by children who can sit unaided, approximately from 7 to 14 months. It is not intended for children weighing more than 25lbs (12kg).
 - 11) Do not use replacement parts other than those approved by the manufacturer or distributor.
 - 12) Should you have any questions about your baby walker or experience any difficulties, please contact the retailer from which you purchased the product, your local retailer is in the best position to promptly address any requirements.
 - 13) Executive standard: ASTM F977.
 - 14) Never leave child unattended. Always keep child in view while in walker.
 - 15) Use only on flat surfaces free of objects that could cause the walker to tip over.
 - 16) To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc..
 - 17) Each walker shall be labeled with a separate stairs warning visible to the consumer when placing the child in the walker.
 - 18) The product must be assembled by an adult.

Dream On Me Inc.
1532 S Washington Ave. Piscataway TWP, NJ 08854
Tel 732-752-7220 Fax 732-752-7221
MADE IN FUJIAN,CHINA

READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THE WALKER. KEEP INSTRUCTIONS FOR FUTURE USE.

Thank you for choosing Dream On Me and congratulations on joining The DOM Family, a family that has been transforming lives for 30 years! We appreciate your feedback and wish you the very best in the coming years with your new addition. If you have any questions or concerns please don't hesitate to reach out and a trusted DOM representative will assist you. Thank you again for entrusting us to supply you with the safest, functional and affordable baby products and accessories. Feel free to follow us on Facebook and Instagram for further opportunities and offers.

A.CARTON CONTENTS

Please check if all those parts are included when you open the carton, if there is any missing parts, please contact your local retailer.



Walker frame x1pc



Global wheels x2pcs
Shake-reducing stopper
Wheels x2pcs



Rubber pads x6pcs



Toy frame x1pc



Rotary toy x1pc



Plastic backrest x1pc



Handle x1pc



Fabric seat x1pc



Toy tray x1pc

Care and Maintenance:

- 1) Never force mechanisms or moving parts. If you are not sure what to do, refer to the instructions.
- 2) Clean plastic and metal parts with a damp cloth or a light detergent. Clean safety rubbers regularly to maintain stopping performance. Do not use solvents, ammonia or petrol.
- 3) Regularly check unit to ensure no parts are loose or broken.
- 4) Clean the rubber pad regularly to maintain stopping performance.


WARNING


STAIR HAZARD
Avoid serious injury or death
Block stairs/steps securely
before using walker.


WARNING

- 1) Never leave the child unattended.
- 2) Prevent access to stairs, steps and uneven surfaces.
- 3) Read the instructions carefully before use and keep them for future reference.
Your baby maybe get hurt if you do not follow these instructions.
- 4) The child will be able to reach further and move faster than before when in the baby walker.
- 5) Guard all fires, heating and cooking appliances.
- 6) Remove hot liquids, electrical flexes and other potential hazards from reach.
- 7) Prevent collision with glass in doors, windows and furniture.
- 8) Do not use the baby walker if any components are

5) Guide the baby to hold the hand reel and start to walk (See Fig C5).

D.FUNCTION:

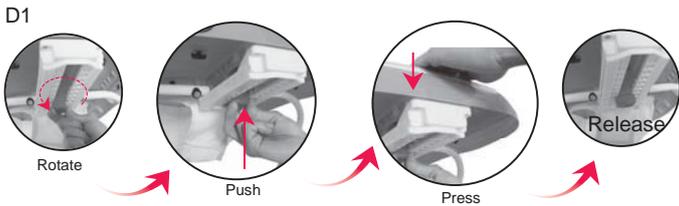


1.HEIGHT ADJUSTOR


To adjust walker to desired position (there are 3 positions available) put one hand on the top of walker, and turn the red button on the height adjustment mechanism beneath the top table by 90 degrees with the other hand, then push up the button to adjust height. When releasing the red button, it will return to original position. The mechanism is locked automatically, (See Fig D1).



B.ASSEMBLY INSTRUCTION

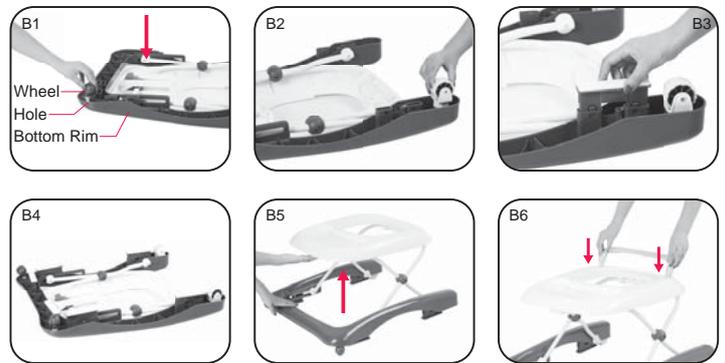


- 1) See Fig B1, insert 2 universal wheels into the holes front bottom.
- 2) See Fig B2, insert 4 straight wheels into the holes under rear bottom.
- 3) See Fig B3, insert 4 rubber pads into the holes at the bottom of base tray.
- 4) Unfolding of the walker:
As shown on Fig B5, pull the top tray like the arrow shows, the walker is fully opened when you hear the sound "click".
- 5) See Fig B6, insert handle into the 2 holes, the handle is fully installed when you hear the sound "click".
- 6) Assembly of the backrest:
Insert the two pins on both side of the backrest as the arrow shown, and press down, the backrest is firmly assembled when you hear a click. (See Fig B7).
- 7) Assemble of the fabric seat:
Insert all the pins into the holes on de upper tray, and

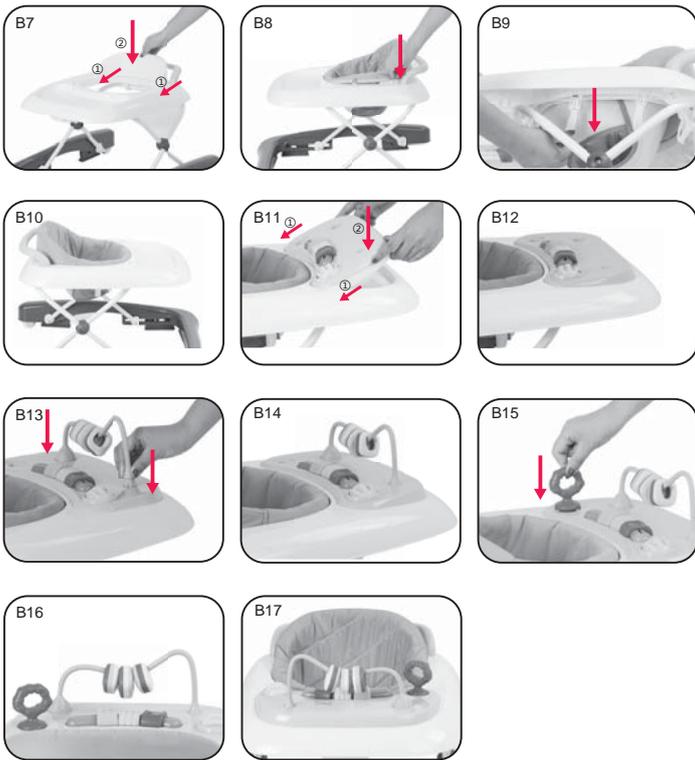

then pull out the buckles at the back of seat through the holes on the upper tray according to Fig B9. The fabric seat is fixed completely (See Fig B10).

8.) Assembly of toy tray:
 First, fix the toy tray onto the upper tray; (See Fig B11) second press down the both side of toy bracket to fix it (See Fig B13); last, press down the rotatable toy to fix it (See Fig B15).

C. Function introduction

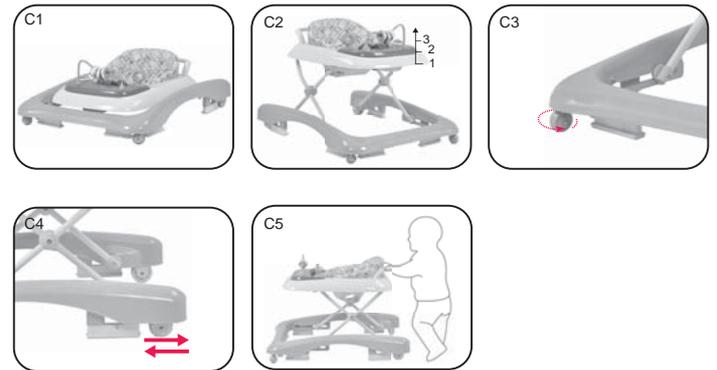

- 1) Foldable walker: The walker can be folded compactly to save space (See Fig C1).
- 2) To adjust walker to desired position (3 position available).
- 3) Universal front wheels:
 See Fig C3: Front wheels can rotate.
- 4) Straight wheels:
 See Fig C4: The straight wheels will automatically brake when baby walker moves backward too fast.