


KEEP INSTRUCTIONS FOR FUTURE REFERENCE

2-in-1 Walker & Rocker

item: #409

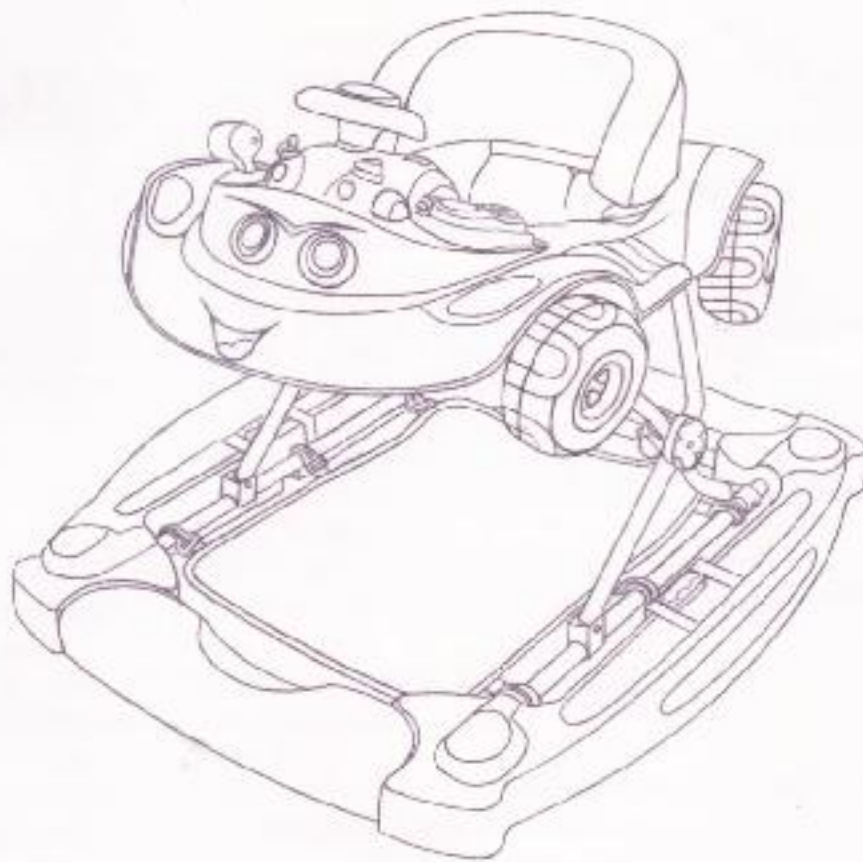

Baby walker with "new" car toy tray displaying lights and sounds to entertain baby. Features rocking movement function and height adjustable seat for growing babies.

Care and maintenance

- To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Removable fabric covers and trims must only be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from direct sunlight.
Clean grip pads regularly, using warm water with household soap or mild detergent to maintain stopping performance.
- Do not fold or store the product if it is damp or wet to avoid mold or mildew occurring. Always store the product in a well ventilated area.
- Check parts regularly for tightness of screws, nuts and other fasteners, tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only parts and accessories approved by Dream On Me.
- If the wheels squeak use a silicon based spray ensuring it penetrates the wheel and axle assembly.

Warning

Before assembling this walker read and understand the instructions. Incorrect assembly may make the walker unsafe. Do not use this walker if any part is broken, torn or missing. Keep these instructions in a safe place for future reference.

WARNING

ALWAYS FOLLOW THE MANUFACTURER'S INSTRUCTIONS. NEVER LEAVE YOUR CHILD UNATTENDED. ALWAYS KEEP CHILD IN VIEW WHILE IN WALKER. USE ONLY ON FLAT SURFACES FREE OF OBJECTS THAT COULD CAUSE THE WALKER TO TIP OVER TO AVOID BURNS, KEEP THE CHILD AWAY FROM HOT LIQUID, RANGES, RADIATORS SPACE HEATERS AND FIREPLACES ETC... AVOID SERIOUS INJURY OR DEATH, BLOCK STAIRS/STEPS SECURELY BEFORE USING WALKER.

Clean (friction components) regularly to maintain stopping performance.

Remove packaging from walker vicinity after it's assembly.

Always use the safety locks once the walker height is correctly adjusted.

Check that all safety locks are engaged before placing a child in the walker.

This walker should not be used by a child who can walk unaided.

This walker should not be used by a child who cannot sit unaided.

This walker should not be used by a child weighing less than 7kgs and 65cm in height.

A child should discontinue using this walker when weighing more than 11kgs and 82cm in height.

The walker is not suitable for babies under 6 months of age.

Electrical cords, heaters, fireplaces and other hot objects, or any other objects or substances that may be dangerous, should be guarded or put out of reach of a child using the walker.

Promptly replace worn out or broken parts.

The walker should not be used (whether indoors or outdoors) on surfaces that have any obstructions that could cause the walker to tip over.

The walker should not be carried with a child in it.

Adjust the height of the walker so that both feet of a child in the walker should be able to touch the ground.

Care must be taken while folding and unfolding the walker to prevent fingers being caught.

Keep medication, strings, elastics and small toys (other than the ones attached to the toybar) out of reach from any position of the walker.

The soft toys are not intended to be "mouthed" by the baby and should be positioned clearly out of reach of the baby's face and mouth.

Adjust the toys to avoid being too close to the baby. - The toys are suitable for all ages.

Always attach the toys tightly to the walker according to the instructions. Check frequently.

WARNING:

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadm

Do not charge non-rechargeable batteries.

Adult supervision is required when charging rechargeable batteries.

Always remove flat or exhausted batteries from the toy.

Do not short circuit the supply terminals.

Assembly instructions

To open the walker

1. Open the walker by raising the tray to the highest position. The secondary lock will engage automatically. Push the primary lock to a closed position (see fig 8b) to secure the mechanism.

Fig.1.

To attach the rear wheels

2. Insert the rear wheel into the moulded socket in the direction indicated by the arrow. Then push up firmly until it clicks into place and attaches.

Fig.2.

To attach the front wheels

3. Insert the castor wheel into the moulded socket in the direction indicated by the arrow. Then push up firmly until it clicks into place and attaches.

Fig.3.

To attach top tray car wheels

4. Attach the wheels to the side of the top tray. Press inward the wheels until they hear "click".

Fig.4.


Fitting the seat unit

5. Front of the seat

Repeat the procedure of locking the plastic pins into the keyholes.

Warning! Always ensure the seat unit is correctly fitted prior to use.

Fig.5a.

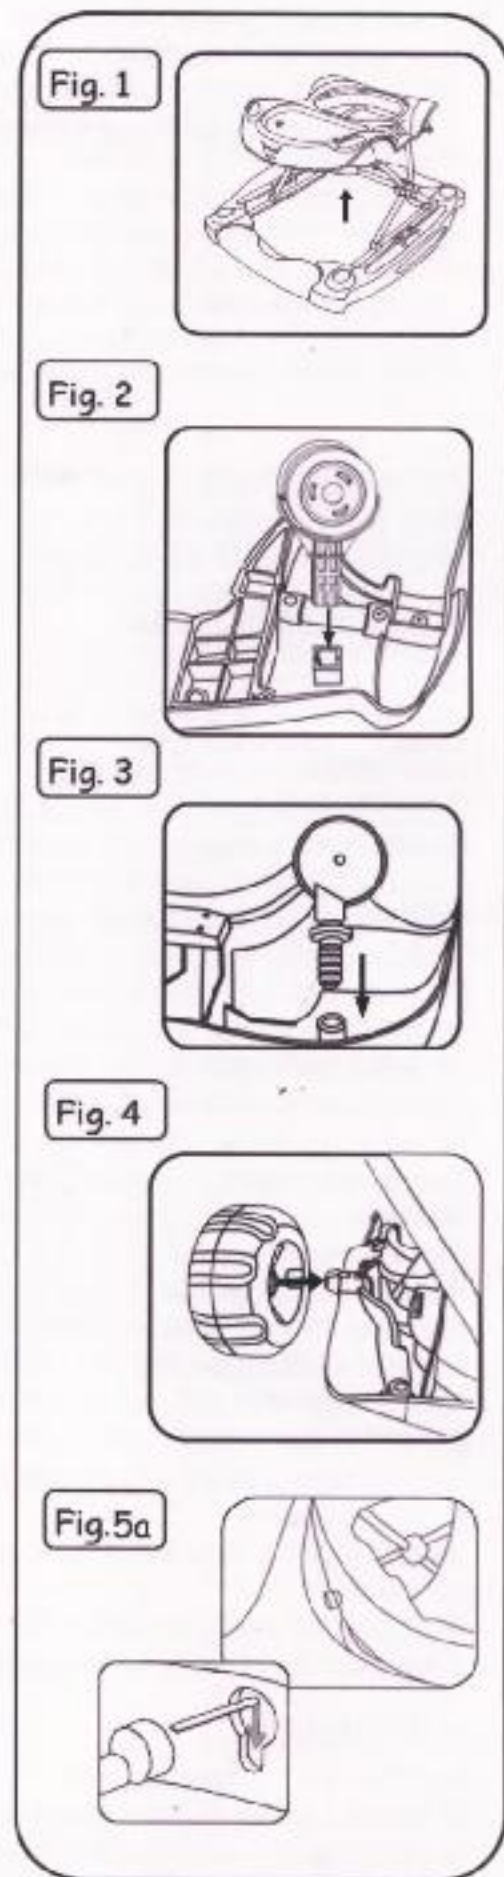

6. Thread the 4 seat clips through the corresponding holes in the top trays. Once the clips have been thread through the holes turn each of them 90 degrees on the underside of the tray. Please make sure each clip is fully secured. Fig.5b.

Attaching the toy tray

7. 2XAA size Alkaline batteries are needed for the toy tray (not included). Put batteries into the toy tray. Fig.6a.

8. Unfold the walker and place the toy tray into position. Push the locking keys located on the underside of the walker tray up and turn around to secure the toy tray to the walker. Fig.6b.

Done tray rocker

9. Push bottom done and turn side ward in 90 degree, then release bottom. Please make sure the function is in position. Fig.7.

Fig.5b

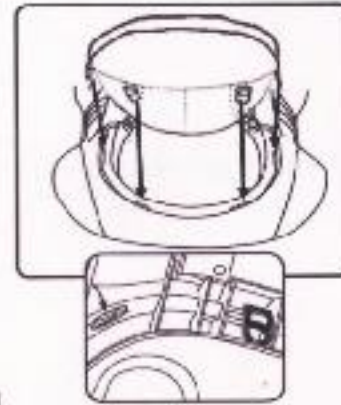


Fig. 6a

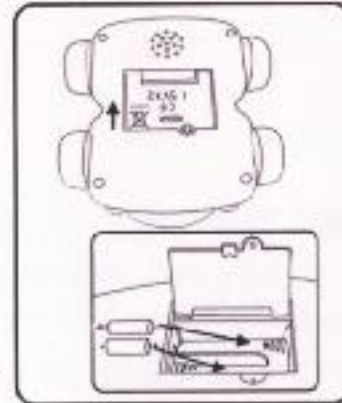


Fig.6b



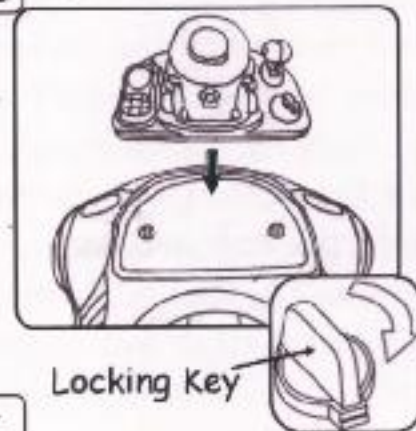


Fig. 7

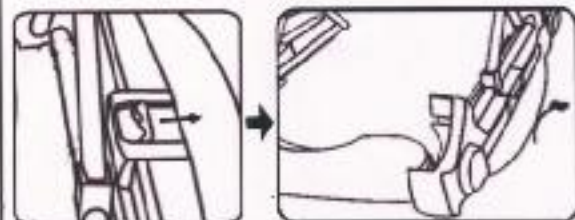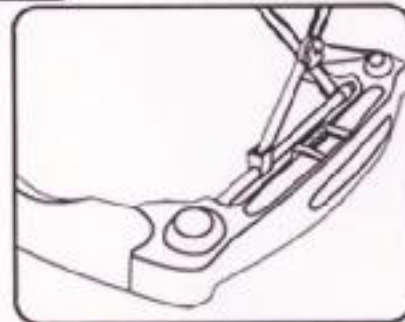


10. Hang the footrest on the bottom tray.

Fig.8.

To adjust the height of the walker.

11. The locking mechanism is located on the underside of the top tray. Push the primary lock forward. Push the secondary lock in and select the desired height for the walker and then release the secondary lock. Pull the primary lock back towards you to secure the walker into the new height. To close the walker do not allow the mechanism to close into a notch but to slide shut together in a downward motion.

Fig 9a. Fig 9b.

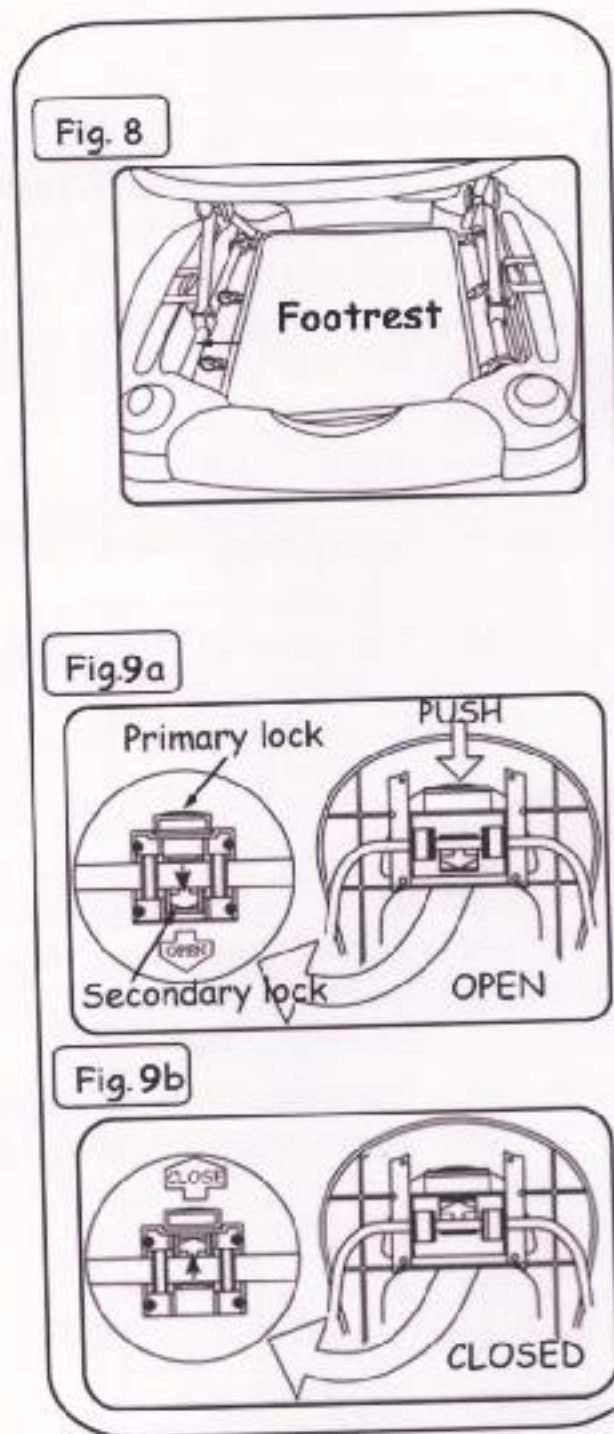

Dream On Me inc.
125 Helen street
South Plainfield NJ 07080

Made in Shen Zhen, China



1532, S. Washington Avenue
Piscataway, NJ 08854
E-mail: info@dreamonme.com

www.dreamonme.com

Follow us on



[@dreamonmeinc](https://www.facebook.com/dreamonmeinc)



[@dreamonmeinc](https://www.instagram.com/dreamonmeinc)

to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.



DOM
FAMILY

