

COCHE • STROLLER

“DUO RIDE”

Accessories can be sold separately or may not be available depending on the region. Please check the product before purchasing.

The images use in this instructions sheet are illustrative, it could change in accessories, colors or fashion.

Read and keep this instruction sheet for future references.



WARNING!

Avoid serious injury from falling or sliding out. Always use Restraint System. Your child's safety depends on you. Proper stroller use cannot be assured unless you follow these instructions. **DO NOT USE STROLLER UNTIL YOU READ AND UNDERSTAND THESE INSTRUCTIONS.**

IMPORTANT SAFETY INFORMATION

How to Keep Your Child Safe While Using this Stroller

- **ADULT ASSEMBLY REQUIRED.**
- **NEVER LEAVE YOUR CHILD UNATTENDED WHILE IN STROLLER.** Accidents can happen quickly while your back is turned. You must always keep your child in view while your child is in the stroller, even when sleeping. Do not use this product as a bed. Your child may become tangled in straps or pads and suffocate.
- Always use restraint system to keep child from standing up or falling out of the stroller. Do not use product without full 5-point restraint harness. Removing the shoulder straps will not adequately restrain your child.
- Always place your child in the front seat before placing your other child in the back seat. When removing children, always remove the child in the back seat first before removing the child in the front. Failure to do so may cause the stroller to become unstable and tip.
- Always lock the stroller open before allowing your child in or near the stroller. This prevents injuries caused by stroller collapsing.
- Only use this stroller with children who weigh less than 40 lbs. (18 kg) per seat. This stroller can hold a maximum of 80 lbs (36 kg.) dual occupancy. Using this stroller with heavier children may cause it to tip.
- Use this stroller in the reclined position until child can sit up unassisted.
- Always set the wheel brakes when you aren't pushing the stroller, especially on an incline. This prevents the stroller from rolling away.
- Always fasten the canopy onto the back of the seat when using the stroller in the reclined position.

WARNING!

What to Avoid While Using this Stroller:

- Always balance the weight of the stroller evenly. To prevent the stroller from becoming unstable or tipping:
 - Do not place parcels or accessory items on the stroller canopy, seat, or over the handle.
 - Do not put more than 10 lbs. (4.54 kg) in the basket.
 - Do not allow children to play with or hang onto the stroller.
 - When using this product with only 1 child, only use the seat in the front position.
 - Never use this stroller on stairways or escalators.
 - DO NOT lift by the front bars.
- **THIS IS NOT AN EXERCISE STROLLER!** Do not use this product while running, jogging, in-line skating or participating in other athletic activities.
- DO NOT put child in basket.

Parts List



Stroller Frame



Basket Tube



Stroller Handle



Parent Tray



Front Wheels (2)



Brake Assembly
with Rear Axle



Rear Wheels (2)



Washers (2)



Cotter Pins (2)



Reversible Seats



Front Bars



Hub Caps



Pins (2)



Screws (6)

HOW TO ASSEMBLE YOUR STROLLER

To Open Stroller



1. Remove any cardboard inserts or plastic ties used to protect the product during shipment.
2. Release the locking latch on the Stroller Frame.
3. Unfold to full open position.
4. Remove the sticker from the Front Wheel Assembly. Remove and discard both screws from the Front Wheel Assembly.
5. Rotate Front Wheel Assembly upward, until you hear a click.
6. Secure the Front Wheel Assembly into the stroller frame with 2 notched Pins.

To Attach Basket

1. Align the Basket Tube with the Basket Frame in the rear of the stroller as shown.



2. Press in spring loaded buttons on Basket Tube and slide into the Basket Frame until both buttons click into place.




3. Unroll the basket over center bar of stroller frame as shown.



4. In the middle & front of the stroller, secure the 4 sets of snaps on the basket around the stroller frame.



5. Secure the 6 sets of snaps at the back end of the basket around the Basket Tube as shown.

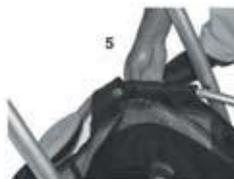

To Attach Stroller Handle



1. Slide the Stroller Handle down to the stroller frame until the holes on each side of the Stroller Handle can be seen in the frame.



2. Secure the Stroller Handle with a screw on each side of the frame.


To Attach Parent Tray



WARNING

Do not place more than 3 lbs. (1.36 kg) in this tray to avoid tipping. Do not place hot liquids in this tray. Hot liquids can burn your child.

1. Place the Parent Tray onto the bar underneath the Stroller Handle and align the Parent Tray into the 4 holes. The Parent Tray should be positioned so the lid opening is towards the handle.

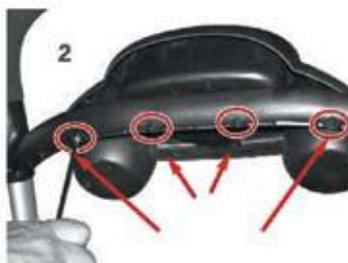

2. Secure the Parent Tray to the bar with 4 screws as shown.

To remove Parent Tray, simply unscrew from frame.
For cleaning, Parent Tray is top rack dishwasher safe.

To Attach Front Wheels



1. Align Front Wheel as shown.
2. Push Front Wheel up into the Front Wheel Assembly until a "Click" is heard.

3. Repeat for other wheel.
Tug firmly on each wheel assembly to be sure wheels are securely in place.



NOTE: To remove Front Wheels, twist the top of the Front Wheel Assembly as shown, and pull the wheel off.

To Assemble Rear Wheels


1. Turn stroller over as shown. Remove protective sleeve from ends of brake assembly with rear axle.
2. Position Brake Assembly as shown, with brake levers pointing towards stroller handle.






3. Push both brake assemblies onto rear leg tubes at the same time until spring loaded buttons click into place.

NOTE: If brake assemblies do not click and hold in place, the spring button may be stuck, not protruding through the hole in the tube. Use a screwdriver or pliers to move the button so that it protrudes out of the hole in the tube.

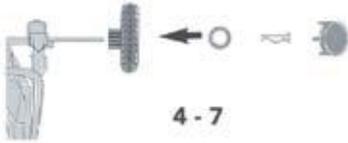

4. Slide Rear Wheel onto axle.

5. Slide Washer onto axle.

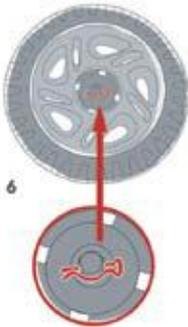

6. Fit the straight part of the Cotter Pin through hole on axle as shown.

7. Line up tabs in the Hub Cap with slots in the wheel, snap hub cap into place.


8. Repeat for second side.

To Attach Reversible Seats



WARNING

When using this product with only one child, only use the E seat position.

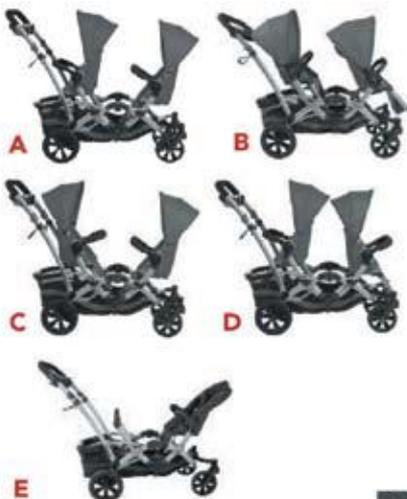

Reversible Seats can be positioned in these directions:

- A. Facing Parent
- B. Facing Away from Parent
- C. Facing Each Other
- D. Back to Back
- E. One child Use (Seat must be attached on front frame hub to avoid tipping)



1. Align Reversible Seat catches over frame hubs as shown and push Reversible Seat down onto the frame hubs until a "Click" is heard on both sides.

2. The button on the frame hubs should be seen through both Reversible Seat catches. Pull up on the seat to make sure the seat is securely attached.



3. Repeat steps 1 and 2 for the other reversible seat.

NOTE: To remove reversible seat, push both buttons on the frame hub in, that lift the Reversible seat up.

To Attach Front Bars



CAUTION

To prevent injury to your child, take care when inserting bar into frame.



1. Align Front Bar pins over the holes on the Seat Catch and push in until a "Click" is heard on both sides. Repeat this step for other Front Bar.

2. To let a child in/out of a Reversible Seat, push on one side of the Front Bar, release button, and pull the Front Bar out. The Front bar will now swivel outward. Repeat step 1 to reinsert Front Bar.



To remove Front Bar, push both Front Bar release buttons and pull out. Repeat step 1 to reinsert.

HOW TO PROPERLY USE YOUR NEW STROLLER

To Operate Brakes




1. Push levers on both rear wheels down to lock.
2. Pull levers up to unlock.

To Secure child in Stroller Seat




WARNING

Avoid serious injury from child falling or sliding out. Always use restraint system. Do not use product without full 5 point Harness Restraint.

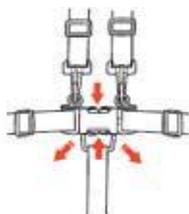

1. Lock foot brake to keep stroller from rolling.
2. Place child in stroller.
3. Hook shoulder straps to waist belt.

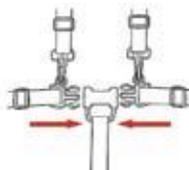


4. To fasten restraint system buckles – push together.
- Be sure both buckles are fastened to secure child safety.



5. To unsnap restraint system buckles – press tabs to release.
6. For proper fit, adjust shoulder straps and waist band as shown.

To Adjust Shoulder Strap Height

NOTE: For a secure fit, straps should be at or below the child's shoulder. Adjust straps to higher positions as your child grows.

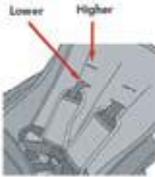

1. To readjust shoulder restraints, unbuckle the back of the seat and push the buckle back through



2. Position the buckle to a higher position and push the buckle through the slot as shown. Repeat for second side.



3. From the back side of the stroller, fasten buckles together to secure restraint.



To Install Infant Neck Roll



Infant neck roll is to be used with newborns who can not hold their head up. It should be used only when the seat is reclined. It can be removed when a child can hold their head up unassisted.



When using the infant neck roll, be sure that the shoulder restraint straps are fed through the holes on either side. Restraint must always be used with the infant neck roll.

To Adjust Footrest

Footrest can be adjusted for child's comfort. Push in side buttons to adjust.



To Recline Seat

WARNING

To avoid finger entrapment or pinching, do not adjust the back of the seat while child is in the stroller. To avoid head entrapment, always fasten the canopy to the back of the seat when using the stroller in the reclined position.




1. To recline seat, pull adjustment bar located on the top of the seat to one of 4 positions:

- Upright
- Middle (2 positions)
- Full Recline



NOTE: For both seats to recline fully, the seats are best positioned when facing parent or facing away from parent. Footrests may need to be adjusted for child's comfort.

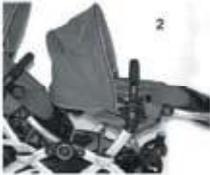

2. Make sure that the Velcro on the canopy is secured to the back of the seat while the seat is in the reclined position.

Hold-On Handles



Hold-on handles are designed to be used with older children walking beside parent.

2a




1. Lock the brakes.




2. For the tightest fold, either:

- a) Remove rear seat facing the handle. OR
- b) Remove front seat and make sure Rear Seat is facing forward.

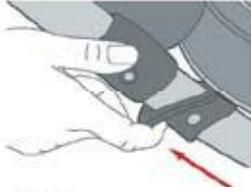

3. Close canopy.

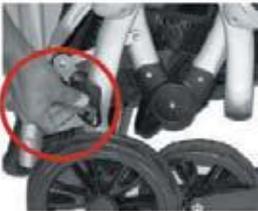

4. Pull up on triggers and push stroller handle forward slightly.



5. Step down on the basket lever with your foot and push the stroller handle forward, folding the stroller.

6. Engage locking latch.



7. Remove Reversible Seat restraint straps from pockets in basket.

8. Place the removed seat facing other seat and tuck it in front of the tray. Secure it with the belts to keep it in place. Make sure that the belts are secure especially when using to travel.



9. Stroller should be able to stand up right when folded properly.

Care and maintenance

To keep your stroller running smoothly and to avoid squeaky wheels, use a silicone or graphite based lubricant. It is important to get it into the axle and the wheel assembly.

Clean the metal parts with a damp cloth and wipe dry. Clean woven fabric or vinyl parts with mild soap and water solution. Dry the wet stroller with a soft cloth to prevent rusting.

When storing the stroller, never stack other items on top of it; this may damage the stroller.

Periodically check for worn parts, loose screws, torn materials or stitching. Replace any damaged parts immediately.

Thank you for choosing Dream On Me and congratulations on joining The DOM Family, a family that has been transforming lives for 30 years! We appreciate your feedback and wish you the very best in the coming years with your new addition. If you have any questions or concerns please don't hesitate to reach out and a trusted DOM representative will assist you. Thank you again for entrusting us to supply you with the safest, functional and affordable baby products and accessories. Feel free to follow us on Facebook and Instagram for further opportunities and offers.



Dream On Me Inc.
1532 S Washington Ave Piscataway Twp. NJ 08854
Tel: 732-752-7220
Fax: 732-752-7221