 


# ***MAPLE DOUBLE DRESSER***

## **Owner's Manual**

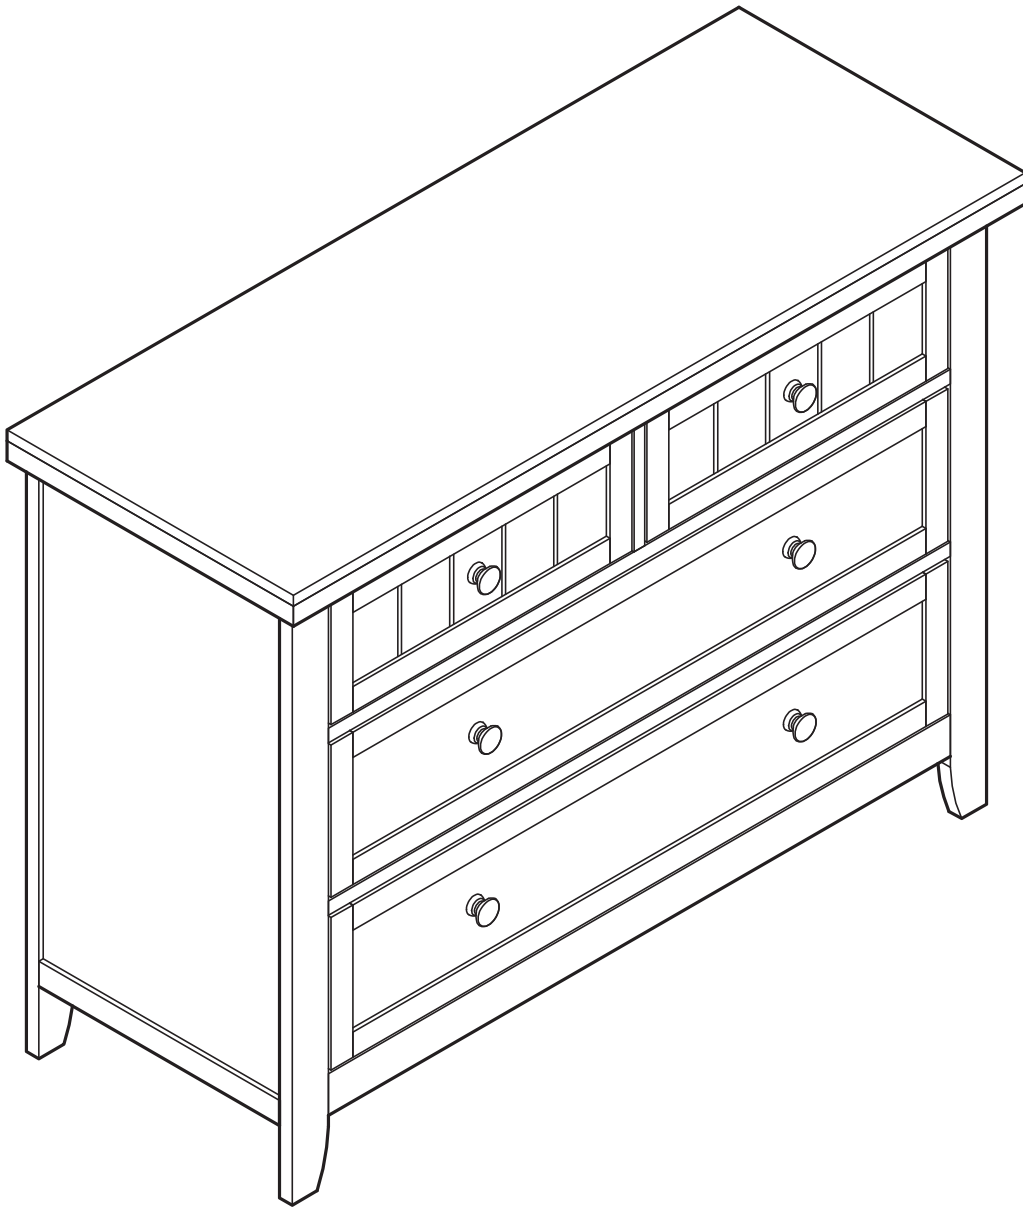

**Scan the QR code to register your product**  
<https://dreamonme.com/customer care/registration/>



Read all instructions before  
assembling and using product.  
**IMPORTANT** - Keep instructions for  
future use.



0222R1-598

# SAFETY TIPS



 
Adult Assembly  
Required.



Small parts may  
present choking  
hazard prior to  
assembly.




DO NOT use the  
product if it is  
damaged, broken,  
and/or components are  
missing or broken.

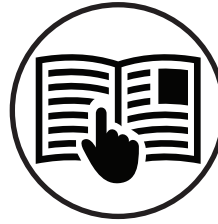

Please read the  
instructions  
thoroughly. Identify all  
parts & hardware.



 Improper or unsafe use  
of power drills/drivers  
can result in death or  
serious injury.

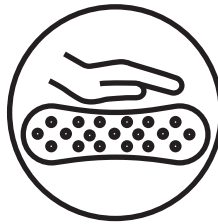

To protect your parts  
during assembly,  
please place them on a  
soft surface.



To clean surface, use  
only water on a damp  
cloth. Do not use  
window cleaner or  
cleaning abrasive as it  
will scratch the surface  
and could damage the  
protective coating.



Always monitor your  
child's activity in the  
nursery or near  
furniture.



Contact Dream On  
Me in case of any  
assistance needed.

# THANK YOU...

.... for choosing **Dream On Me** and congratulations on joining our family; a family that has been transforming lives for over 30 years!

We appreciate your feedback and wish you the very best in the coming years with your new addition. If you have any questions or concerns please don't hesitate to reach out to us. One of our trusted Customer Care representatives will be happy to assist you.

Thank you again for entrusting us to provide you with safe and affordable baby products and accessories.

## **LIMITED WARRANTY:**

- Dream On Me warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect.
- This warranty covers 1 year from the date of original purchase.
- This warranty is valid only upon presentation of proof of purchase.
- This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included.
- This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way.
- This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

# WARNINGS

 
- FAILURE TO FOLLOW THESE WARNINGS AND ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.
- CHECK THIS PRODUCT FOR DAMAGED HARDWARE, LOOSE JOINTS, MISSING PARTS OR SHARP EDGES BEFORE AND AFTER ASSEMBLY AND FREQUENTLY DURING USE.
- **DO NOT** USE THIS DRESSER IF ANY PARTS ARE MISSING, DAMAGED OR BROKEN. CONTACT **DREAM ON ME - 1532 S. WASHINGTON AVE, PISCATAWAY, NJ 08854** FOR REPLACEMENT PARTS.
- IF REFINISHING, USE A NON-TOXIC FINISH SPECIFIED FOR CHILDREN'S PRODUCTS.
- SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT THIS, PLACE THE HEAVIEST ITEMS ON THE LOWER SHELVES AND DRAWERS. DO NOT SET HEAVY OBJECTS ON TOP SHELVES AND DRAWERS.
- NEVER OPEN MORE THAN ONE DRAWER AT A TIME.
- THE USE OF TIP-OVER RESTRAINTS MAY REDUCE BUT NOT ELIMINATE THE RISK OF TIP-OVER.
- DO NOT SET TVs OR OTHER HEAVY OBJECTS ON TOP OF THIS PRODUCT.
- ALWAYS MONITOR YOUR CHILD'S ACTIVITY WHEN IN THE NURSERY.
- NEVER ALLOW CHILDREN TO CLIMB OR HANG ON DRAWERS, SHELVES, AND DOORS.
- DO NOT ALLOW CHILDREN STANDING IN DRAWERS.
- DO NOT ALLOW CHILDREN STANDING ON TOP OF THIS PRODUCT.
- TO AVOID HEAD INJURY, DO NOT ALLOW CHILDREN TO PLAY UNDERNEATH OPEN DRAWERS.
- DO NOT LEAVE DRAWERS OPEN WHEN IN USE.
- ACCESSORY ITEMS MUST BE SECURELY FASTENED TO THIS PRODUCT ACCORDING TO THE INSTRUCTIONS PROVIDED WITH THOSE ITEMS.

## **CHILDREN HAVE DIED FROM FURNITURE TIPOVER, TO REDUCE THE RISK OF TIPOVER :**


- ALWAYS INSTALL TIPOVER RESTRAINT PROVIDED.
- NEVER PUT A TV ON THIS PRODUCT.
- NEVER ALLOW CHILDREN TO STAND, CLIMB OR HANG ON DRAWERS, DOORS OR SHELVES.
- NEVER OPEN MORE THAN ONE DRAWER AT A TIME.
- PLACE HEAVIEST ITEMS IN THE LOWER DRAWERS.

# PARTS


If there are any missing parts, please contact **Dream On Me** before using the product.

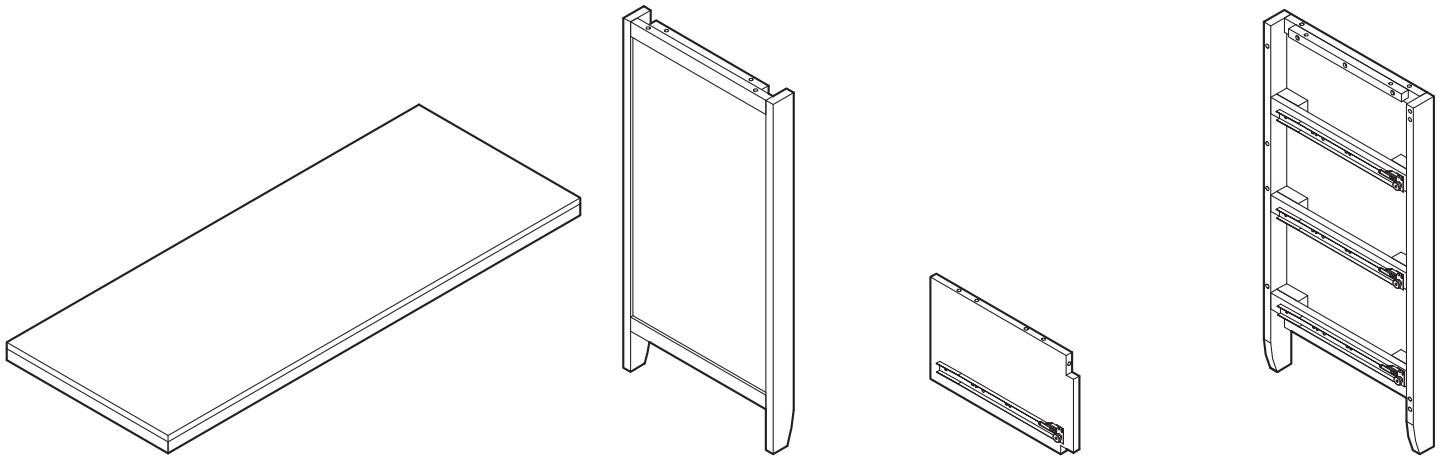

 - 1** Dresser Top Panel
- 2** Dresser Left Side Panel
- 3** Dresser Center Panel
- 4** Dresser Right Side Panel

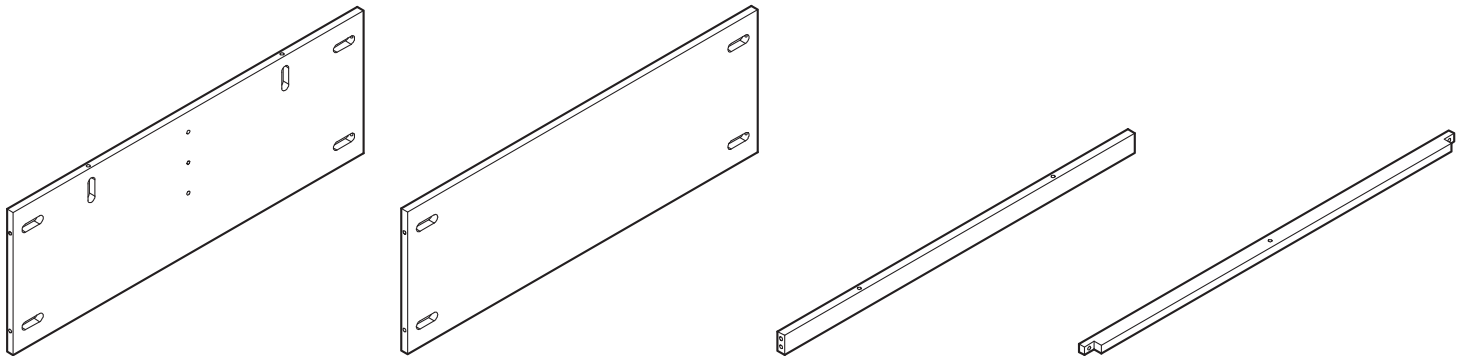

 
- 5** Dresser Top Back Panel
- 6** Dresser Bottom Back Panel
- 7** Dresser Top Rail
- 8** Dresser Center Rail I

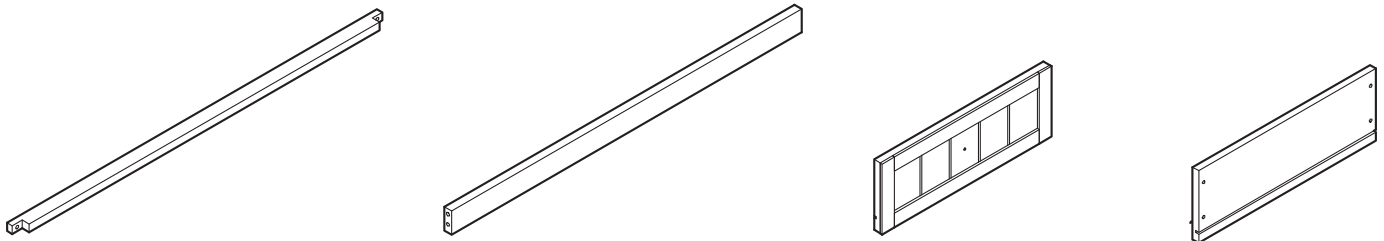


- 9** Dresser Center Rail II
- 10** Dresser Bottom Rail
- 11** Top Drawer Front Panel (x2)
- 12** Top Drawer Right Panel (x2)

## PARTS (cont.)

 
If there are any missing parts, please contact **Dream On Me** before using the product.

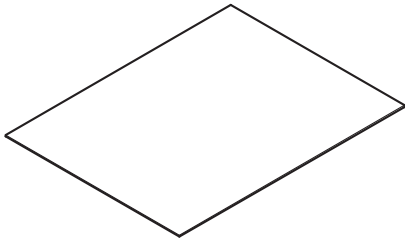


**13** Top Drawer Base Panel (x2)

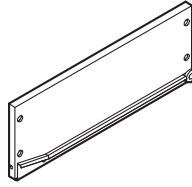 


**14** Top Drawer Left Panel (x2)

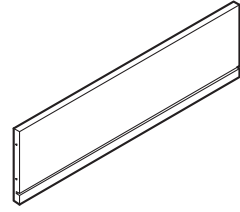 


**15** Top Drawer Back Panel (x2)

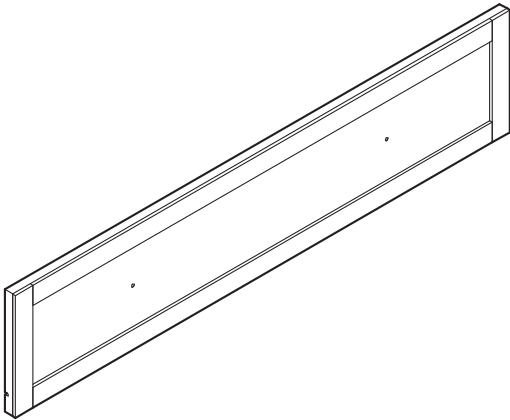 

 
**16** Center and Bottom Drawers Front Panel (x2)

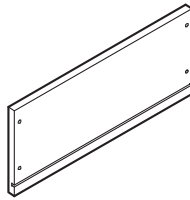

 
**17** Center and Bottom Drawers Right Panel (x2)

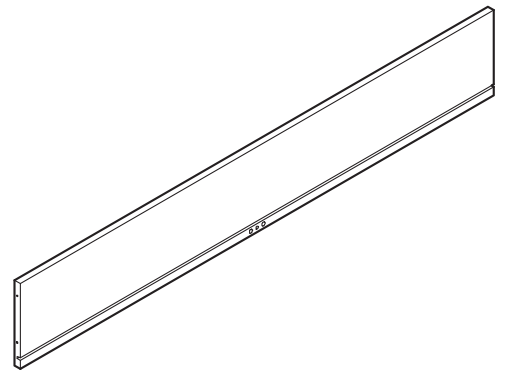

 
**18** Center and Bottom Drawers Back Panel (x2)

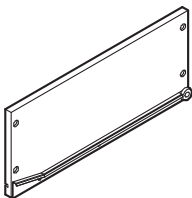

 **19** Center and Bottom Drawers Left Panel (x2)

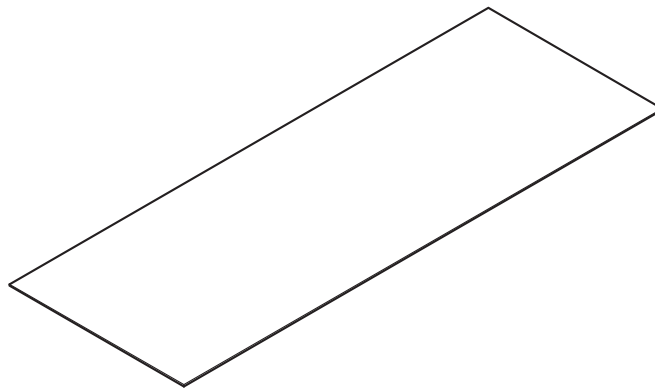

 
**20** Center and Bottom Drawers Base Panel (x2)

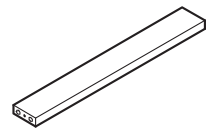


**21** Center and Bottom Drawers Support Rail (x2)

# HARDWARE

 If there are any missing parts, please contact **Dream On Me** before using the product.

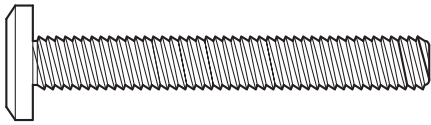


**A** Bolt 1-3/4" (x16)

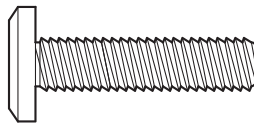 


**B** Bolt 1" (x12)



 **C** Wooden Dowel 1-1/8" (x13)

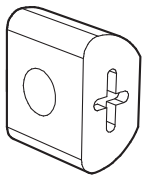


**D** Curve Washer (x16)

 


**E** Screw 1" (x34)



 
**F** Wooden Dowel 3/4" (x8)

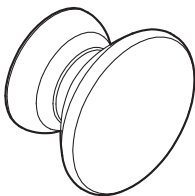


**G** Knob (x6)

 


**H** Screw 3/4" (x6)

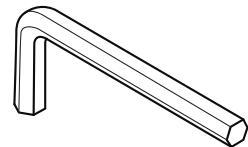 

**I** Allen Key (x1)

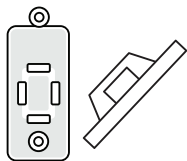 


**J** Bracket (x4)

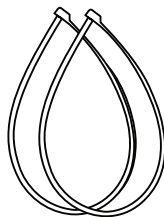 

**K** Straps (x2)



 **L** Screw 1-1/2" (x4)




**M** Screw 3/4" (x4)


## Tools Needed:



 Power drill - 3/32" drill bit  
(NOT INCLUDED)

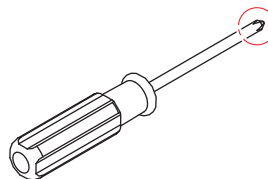



Philips Screw Driver  
(NOT INCLUDED)

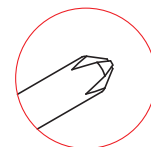 


# DRESSER ASSEMBLY - DRESSER FRAME ASSEMBLY

# 1

  - 1a. Place the Dresser Top Back Panel (5) on a soft surface, insert the Wooden Dowel (C) into three insertions on Center Panel (3) as shown in the diagram.
- 1b. Align the Center Panel (3) on the Top Back Panel (5), attach them with the Bolt (A), by inserting them from below, into the insertion provided at the center of Top Back Panel (5).
- 1c. Attach the Dresser Center Rail I (8) onto the Center Panel as in the illustration using the Bolt (A).
- 1d. Similarly, fix the Dresser Top Rail (7) into the Wooden Dowel at the Top of the Center Panel (3).

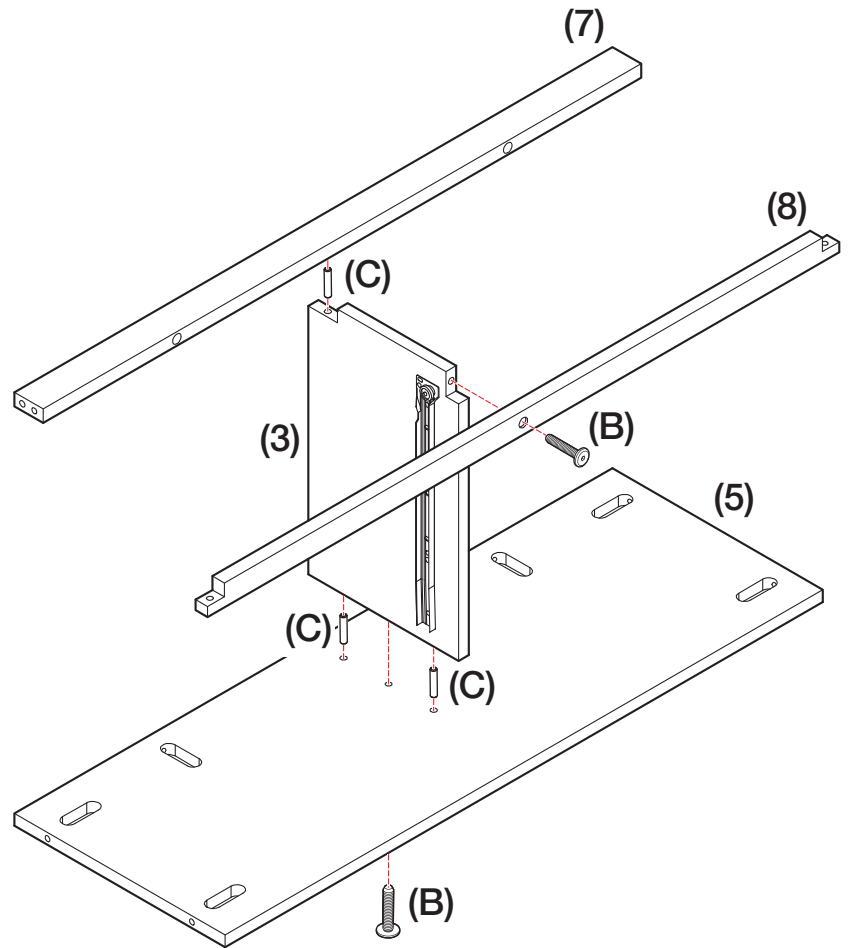

**B** Bolt 1" (x2)

 


**C** Wooden Dowel  
1-1/8" (x3)


# DRESSER ASSEMBLY - DRESSER FRAME ASSEMBLY
 
## 2

- 2a. Align the above made assembly, Dresser Right Side Panel (4), Left Side Panel (2), as shown in the illustration.
- 2b. Insert all the Bolts (A) into the Curve Washer (D), attach all the parts by inserting the assembled Bolts (A).
- 2c. Align the Dresser Bottom Rail (10) using the Wooden Dowels (C) on each side of the rail and inserting the same into the Left and Right Side Panels.
- 2d. Ensure to use the Wooden Dowels (C) in the right manner as shown in the illustration on each sides of Dresser Top Rail (7) and Dresser Bottom Rail (10).

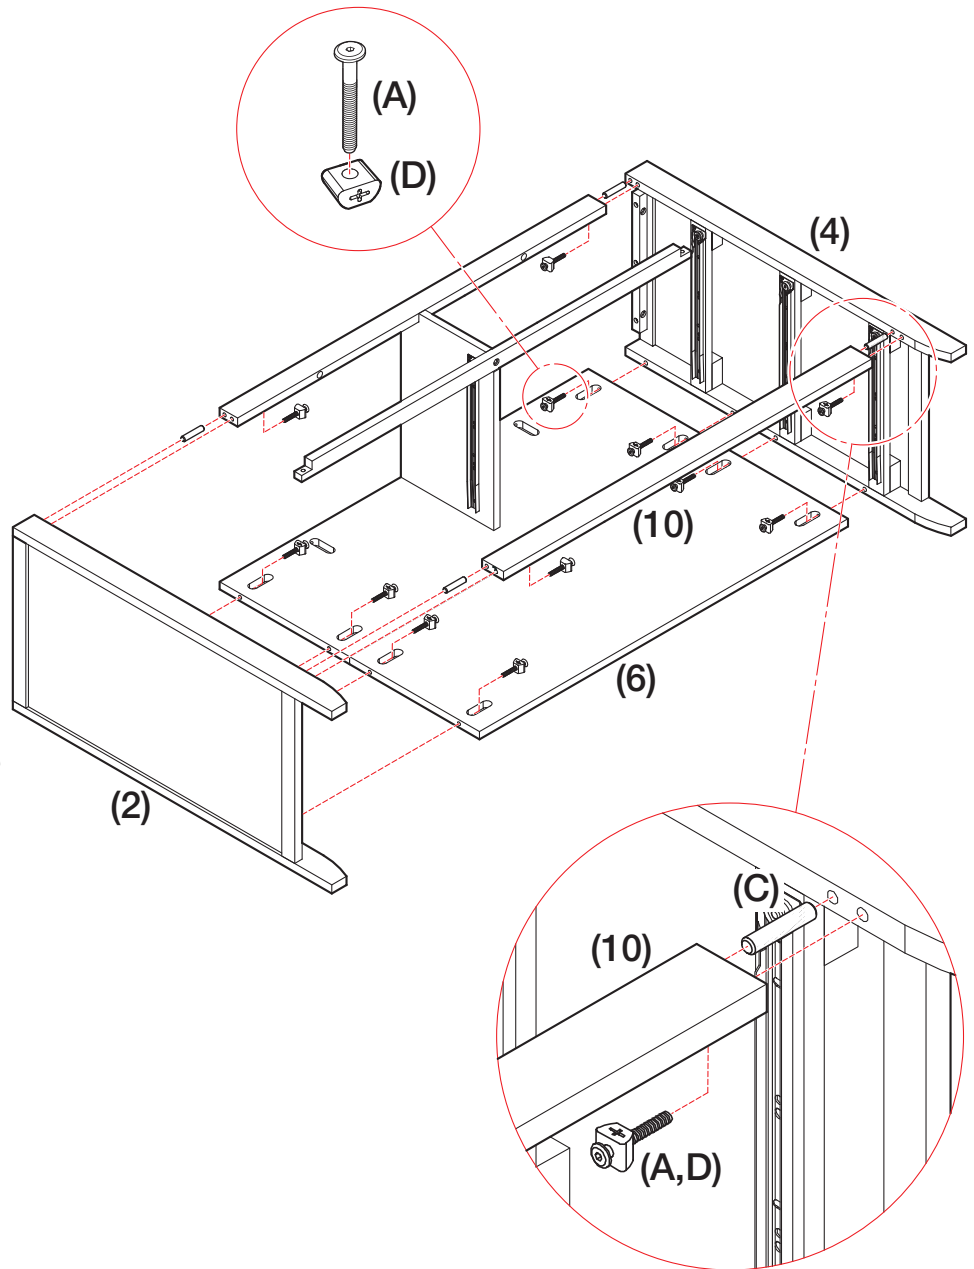


**Note:** Do not overtighten the Bolts.

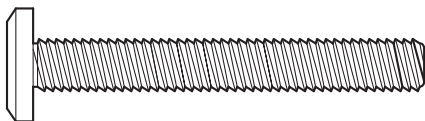 

**A** Bolt 1-3/4" (x12)



 **C** Wooden Dowel 1-1/8" (x4)


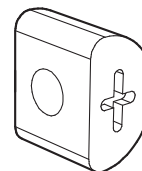


**D** Curve Washer (x12)



# DRESSER ASSEMBLY - DRESSER FRAME ASSEMBLY
  
## 3

- 3a. Align the Dresser Center Rail II (9) into the above assembled Frame as shown in the illustration.
- 3b. Insert the Bolts (B) on both sides, inside the Dresser Center Rails (8 and 9) from outside the frame and tighten them.

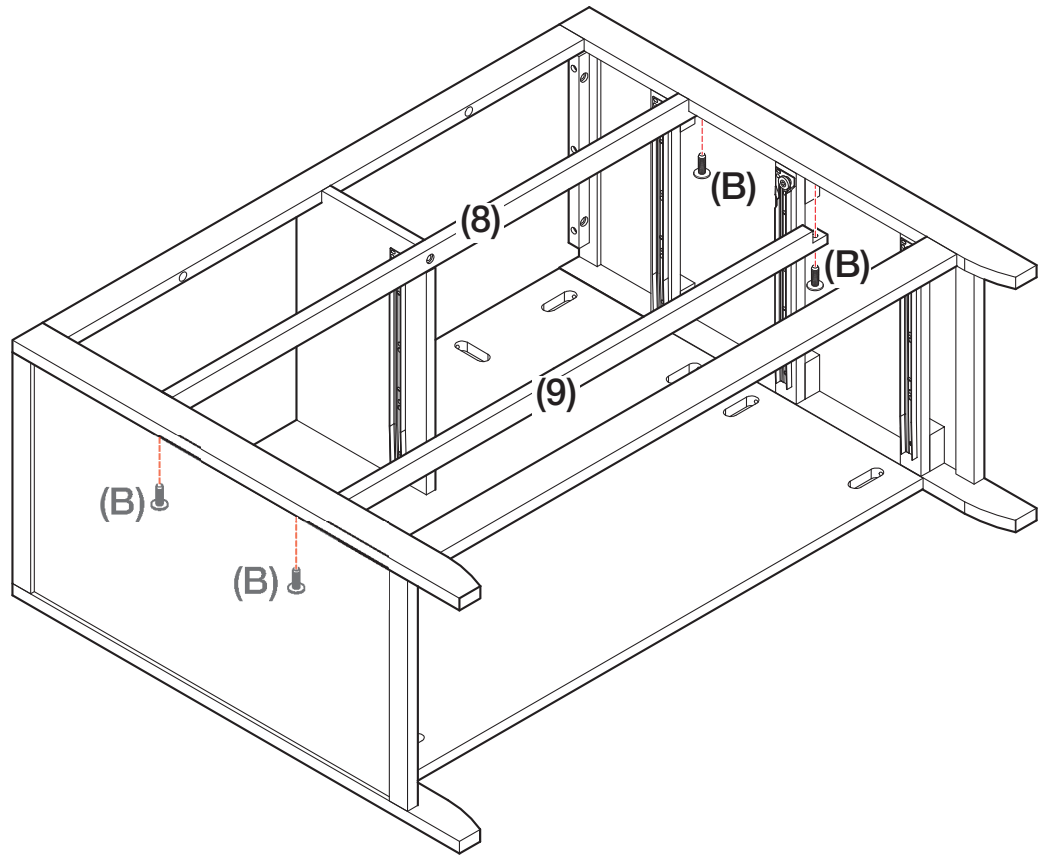

**(B)** Bolt 1" (x4)


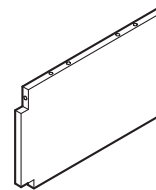 
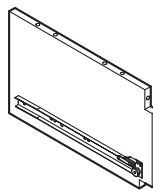 


# DRESSER ASSEMBLY - DRESSER FRAME ASSEMBLY


## 4

- 4a. Align the Dresser Top Panel (1) on the previously assembled frame. Refer to the diagram carefully and insert the two Wooden Dowels (C) each into the insertions on shorter right, center and left side on the top.
- 4b. Insert all the Curve Washers (D), into the Bolts (A) similar to the method followed under Step 2. Now insert them into the insertions on Dresser Center Panel (3) and Top Dresser Back Panel (5).
- 4c. Similarly, insert the Bolts (B) as shown into the Right and Left Panels (2 & 4), Dresser Top Rail (7), from below and tighten them.

   **Note:** Do not overtighten the Bolts.

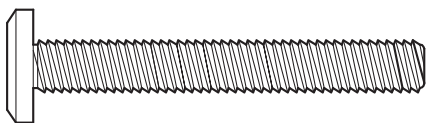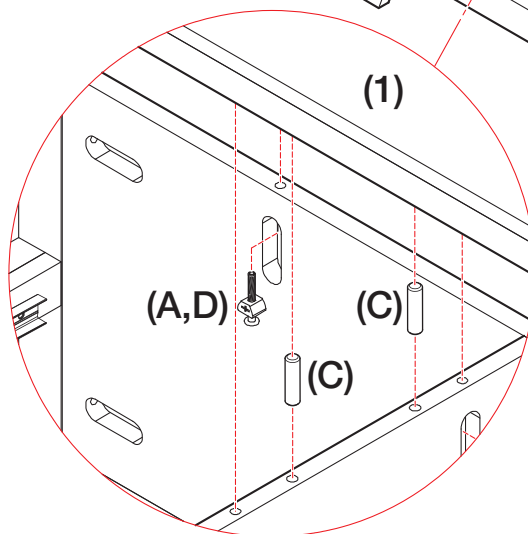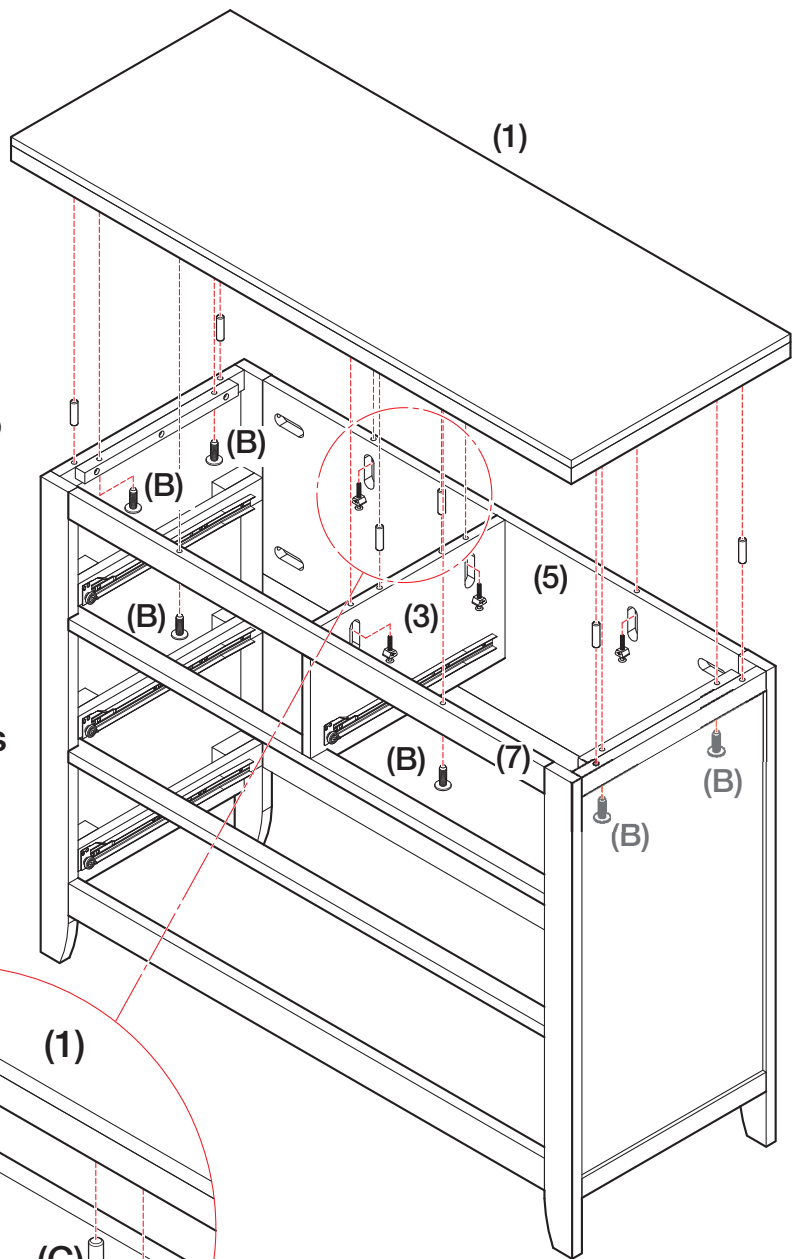


**A** Bolt 1-3/4" (x4)

 

**B** Bolt 1" (x6)



 **C** Wooden Dowel 1-1/8" (x6)



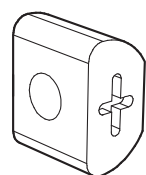


**D** Curve Washer (x4)

# DRESSER ASSEMBLY - TOP DRAWER ASSEMBLY
   
## 5

- 5a. Keep one of the Top Drawer Front Panels (11) on a soft surface, align the Front Panel (11), one of the Top Drawer Left and Right Panels (14 and 12). Attach them by inserting the Screws (E) from outside as shown in the illustration.
- 5b. Slide one of the Top Drawer Bottom Panels (13) into the grooves on Left and Right Panels.
- 5c. Follow the same steps for the other Top drawer.

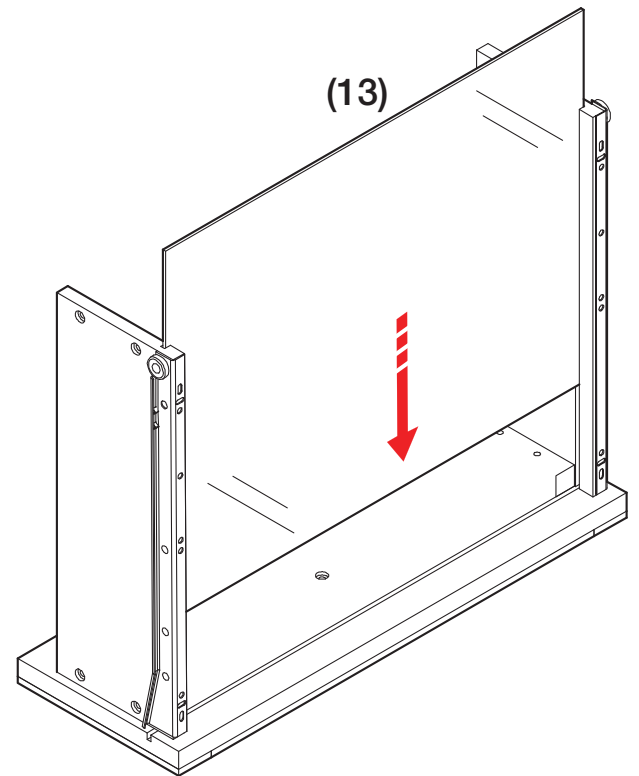
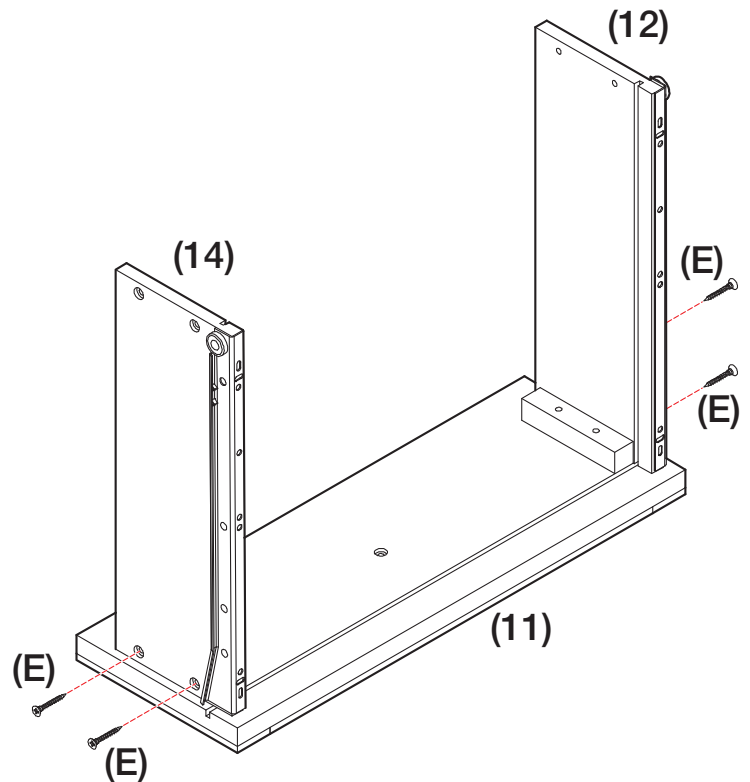


**E** Screw 1" (x4)


# DRESSER ASSEMBLY - TOP DRAWER ASSEMBLY
  
## 5


- 5d. Align one of the Top Drawer Back Panels (15) as shown onto the previously assembled frame and attach them using Screws (E) as shown in the illustration.
- 5e. Attach the Knob (G) onto the Top Drawer Front Panel (11) by inserting the Screw (H) from behind the Panel by passing it through the Knob.
- 5f. Similarly, follow the above steps for the other top drawer.

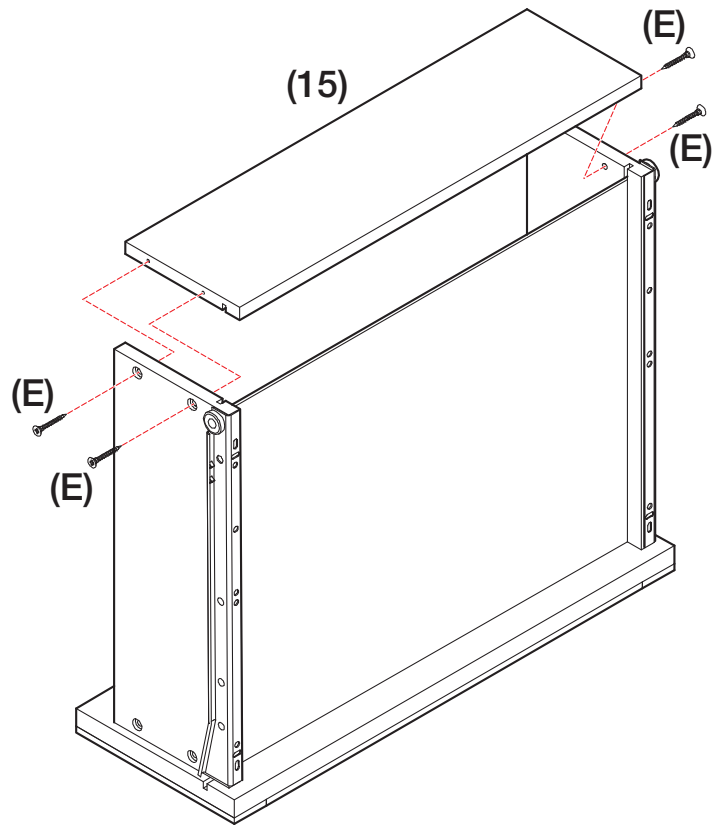


**E** Screw 1" (×4)

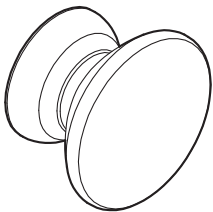 

**G** Knob (×1)

 



**H** Screw 3/4" (×1)

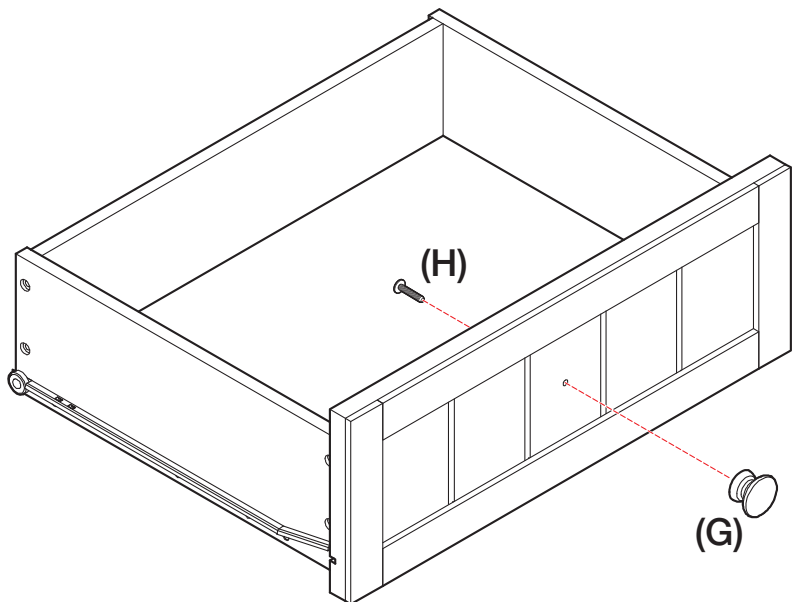 

# DRESSER ASSEMBLY - CENTER AND BOTTOM DRAWER ASSEMBLY

## 6

  - 6a. Align one of the Center and Bottom Drawers Front Panels (16), Center and Bottom Drawers Right Panels (17) and Center and Bottom Drawers Left Panels (19) as shown in the illustration on a softer surface. Attach them using the Screw (E).
- 6b. Attach one of the Center and Bottom Drawers Support Rails (21) at the center using the two Wooden Dowels (F) at the bottom of the rail.
- 6c. Slide one of the Center and Bottom Drawers Base Panels (20) into the grooves on the side panels.

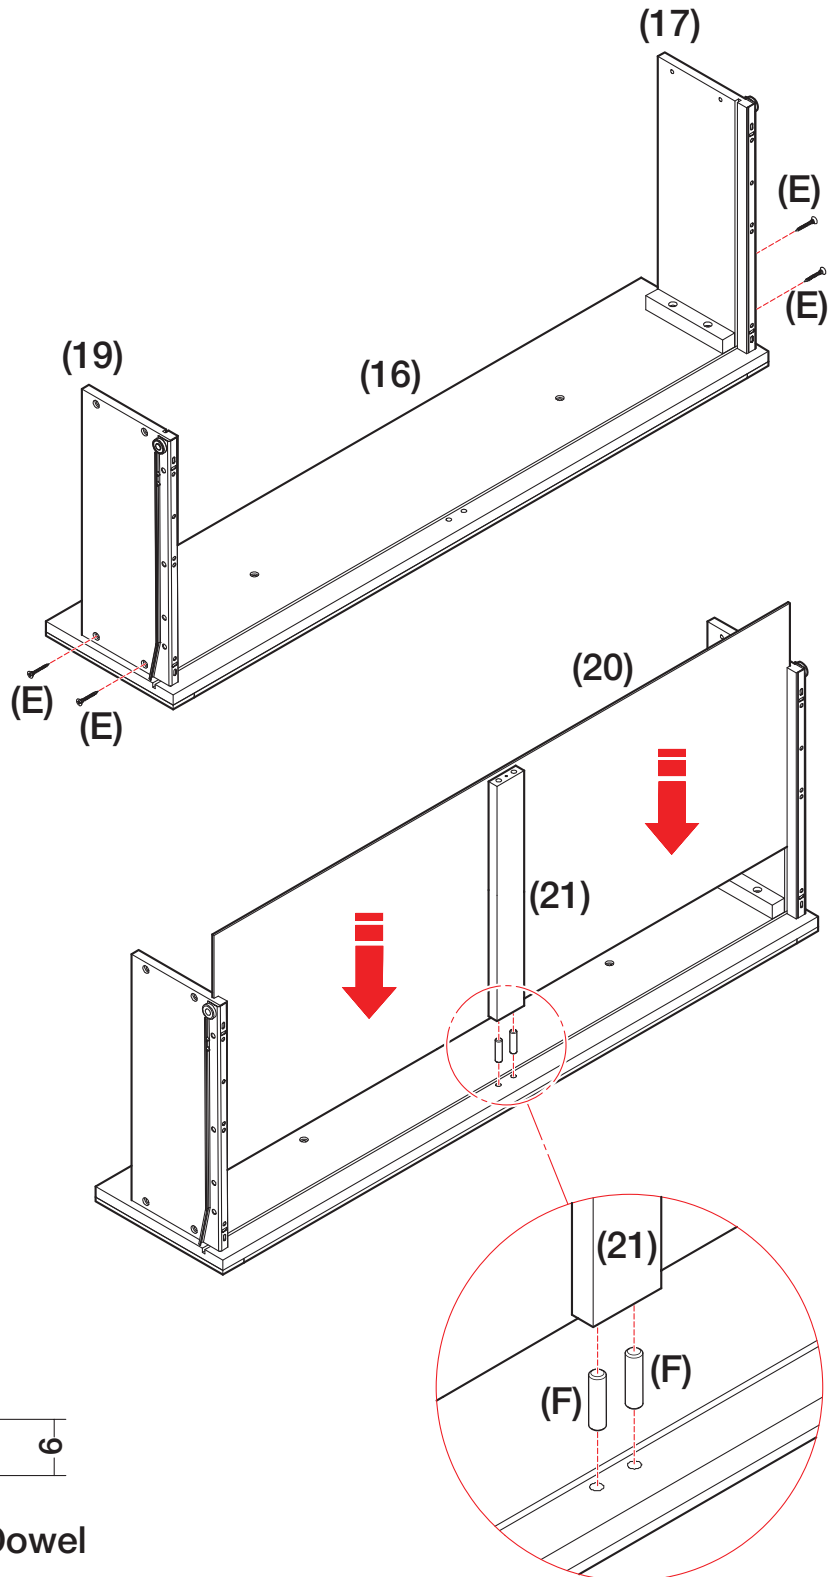

**E** Screw 1" (x4)






**F** Wooden Dowel  
3/4" (x2)



# DRESSER ASSEMBLY - CENTER AND BOTTOM DRAWER ASSEMBLY
   
## 6

- 6d. Align one of the Center and Bottom Drawers Back Panels (18) onto the above made assembly and attach them using the Screws (E) on all four sides.
- 6e. Attach the Center and Bottom Drawers Support Rails (21) at the center using the two Wooden Dowels (F) at the top of the rail.
- 6f. Attach the Knobs (G) onto the Drawer Front Panel (16) by inserting the Screws (H) from behind the Panel by passing it through the Knob.
- 6g. Similarly, follow the above steps for the other drawer.

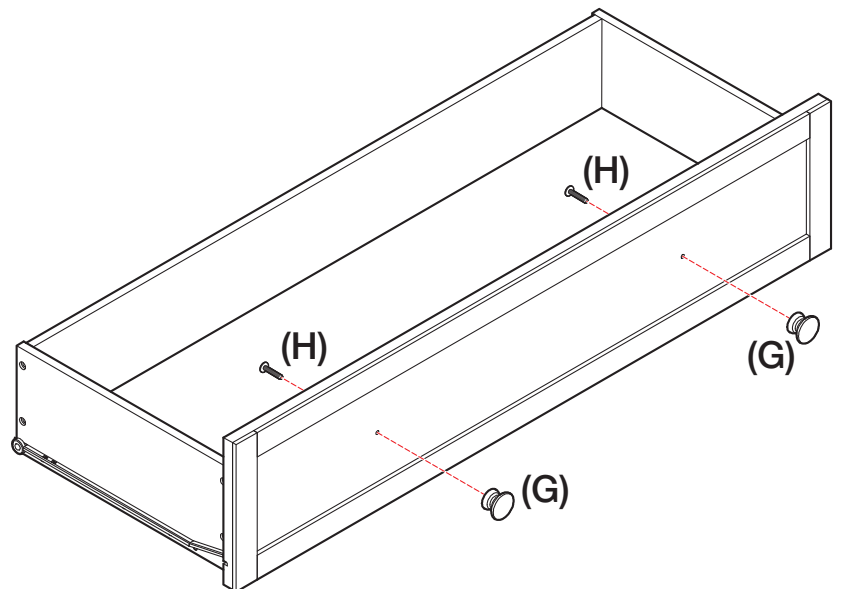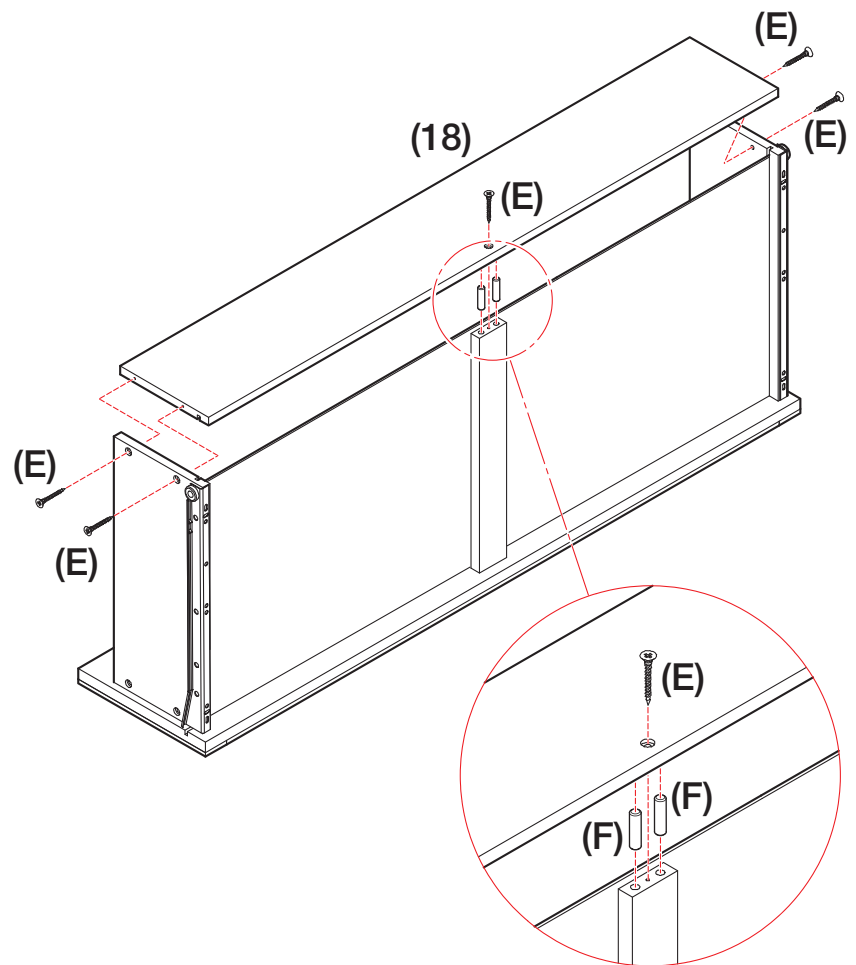

  - E** Screw 1" (x5)    **F** Wooden Dowel 3/4" (x2)


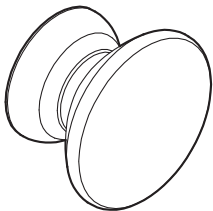


- G** Knob (x2)    **H** Screw 3/4" (x2)

## DRESSER ASSEMBLY - DRAWERS INSERTION

  7



- 7a. Insert the assembled top, center and bottom drawers into the grooves present.
- 7b. Ensure the right alignment of drawers before inserting into the frame.

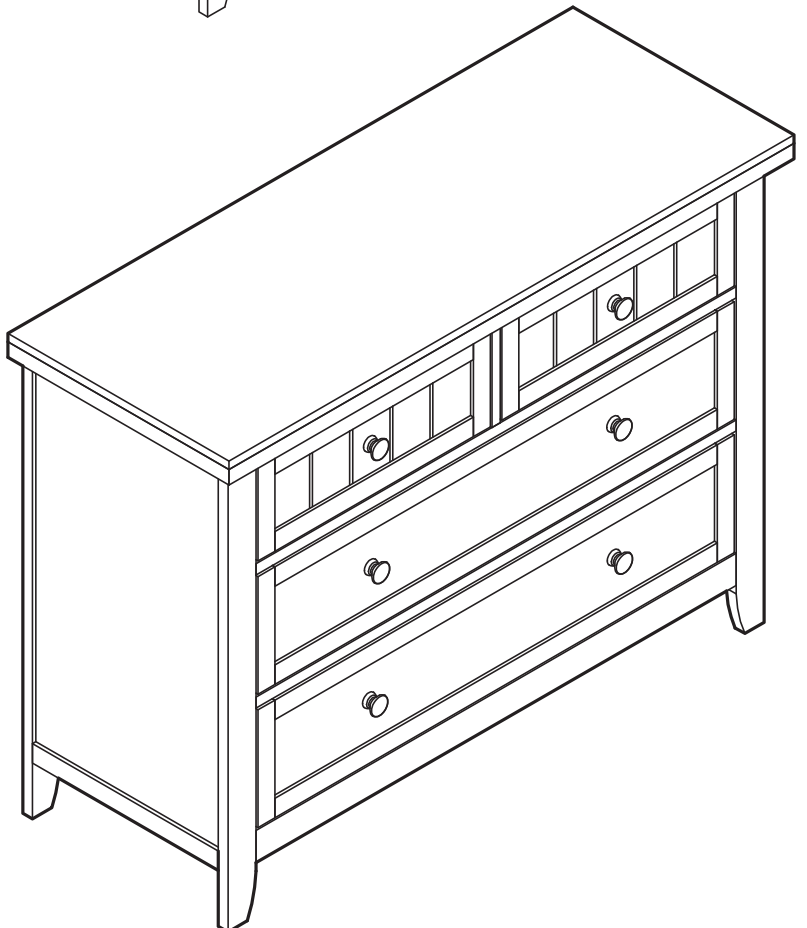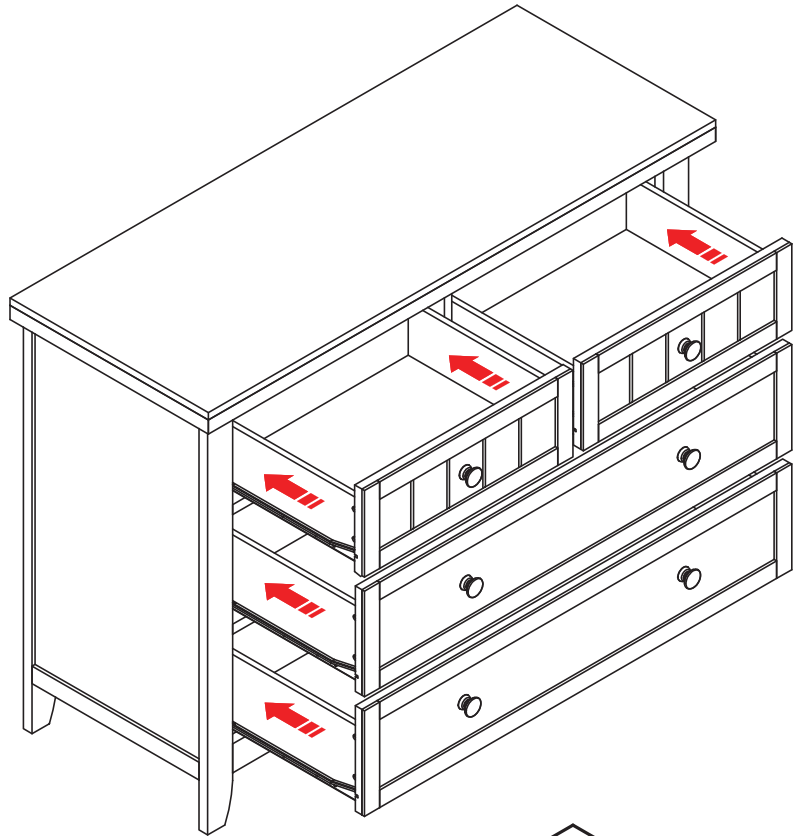




# ANTI-TIP SAFETY HARDWARE INSTALLATION

## 8

  - 8a. Determine the desired location of the dresser. Find a wall stud behind the furniture piece and position one of the Brackets (J) vertically on the stud approximately 1" below the top of the dresser piece. Mark and drill a pilot hole in the center of the stud with a 3/32" drill bit. Attach the Bracket (J) to stud with the two Screws (L).
- 8b. The second bracket will need to be attached horizontally to the top of the dresser frame. Temporarily move the dresser away from the wall and place a bracket near the top of the frame. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the dresser piece with the two Screws (M).
- 8c. Move the dresser piece into its final position, taking care to line up the wall bracket with the dresser bracket. Thread the strap through the brackets as shown in the illustrations. Tighten the strap until snug. Note: Do not overtighten. Similarly, follow the steps for the other side of the furniture.

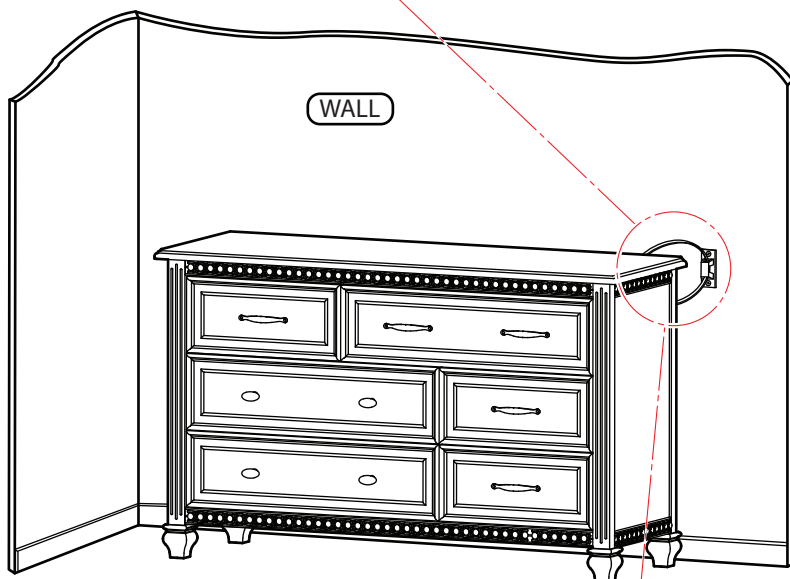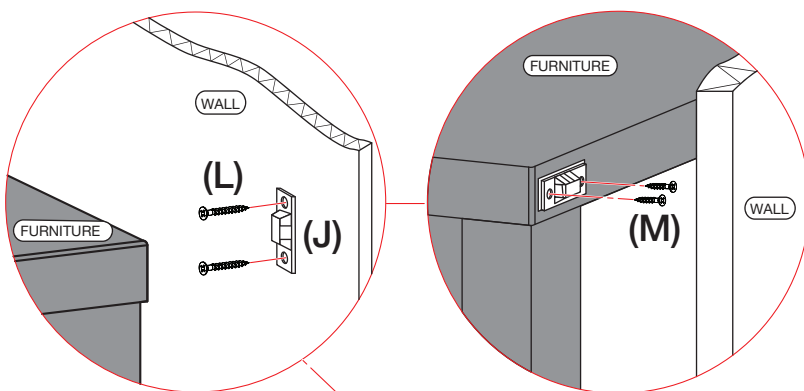

   **NOTE:**  
Model shown is example only,  
Styles may vary

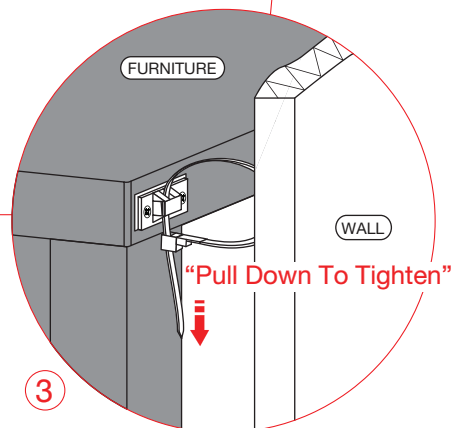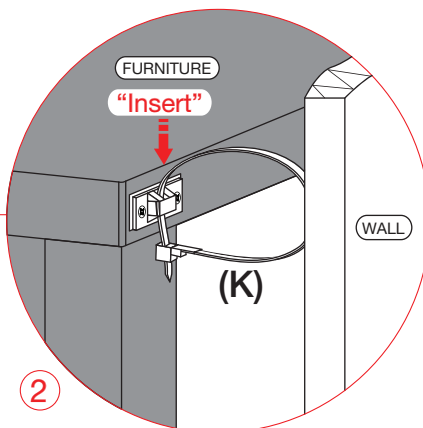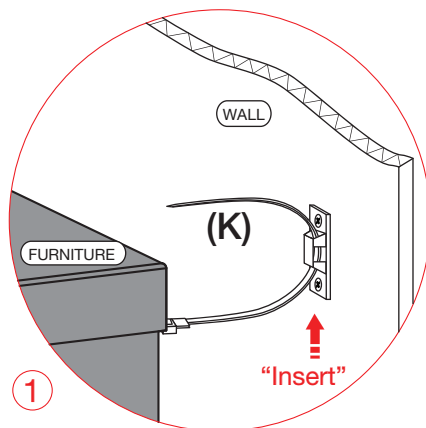

# FURNITURE CARE INSTRUCTIONS

## ROOM CLIMATE CONTROL:

- Wood, when first cut contains more than 50 percent water. When it is prepared for furniture construction it is placed in a Kiln and the moisture content is brought down to 8 to 10 percent. Wood is porous and responds to its environment. If the room has high humidity it will absorb it and expand and if the humidity is low it will lose moisture and shrink.
- It is important that the humidity levels in the room be controlled from extremes of too much humidity or too little. Furniture should not be placed close to the air-conditioning outlets, fire places, radiators, space heaters, humidifiers or dehumidifiers. Exposure to extreme variations of temperature and humidity can damage any fine wood product.

## THE IDEAL ENVIRONMENT FOR FINE FURNITURE:

- Fine wood furniture will have fewer problems when its environment is controlled at a temperature between 65 and 75 degrees and a relative humidity between 35 and 40 percent. Wood placed in an environment outside of those limits can and will shrink or expand and may develop some small cracks which are not material or structural defects.

## STICKING DOORS AND DRAWERS:

- With the minor changes in temperature and humidity, doors and drawers may swell and be difficult to open or close. Tolerances have been built into the units but extreme conditions may still cause sticking. This will adjust back to normal over time but until it does consider using a dehumidifier or rub candle wax or paraffin on sides that stick.

## AVOID DIRECT SUNLIGHT:

- Keep the furniture out of direct sunlight. Ultraviolet rays will fade colors and in some cases darken them. It can also cause crazing or hair line cracks in the finish. White finishes will yellow naturally over time and exposure to direct sunlight will hasten this natural process along with some woods darkening naturally over time; this is not considered to be a quality defect.

## PROPER STORAGE:

- If you need to put your furniture in storage for any period of time do not store them in a damp basement or hot dry attic. Allow air movement around the furniture and do not stack anything on it.

## FURNITURE CARE INSTRUCTIONS (cont.)

### IN GENERAL:

- Protect furniture surface from hot or extremely cold items.
- Use coasters under hot or cold beverages.
- Do not use synthetic fabric under accessories or lamps.
- Protect tops from pens, markers and crayons.
- Oils from potpourri and other scented items can damage the finish of the furniture.
- Do not drag items across the surface of the furniture.
- Allow the surface to breathe by rotating your accessories and lamps.
- Do not over polish the furniture, do it only two or three times a year. Over polishing can distort the natural finish of the product.
- Do not wax the furniture, as wax build up can destroy natural finish of the product.
- When moving furniture always lift the unit. Do not push or drag it to avoid damage to legs.
- Keep the furniture level so doors and drawers open and close freely.
- Clean with a damp, not wet, cloth. Use only a mild soap. Do not use the abrasive cleaners.
- Do not scratch or chip the finish.
- Inspect the product periodically, contact Dream On Me Inc for replacement parts or questions.
- Do not store the product or any parts in extreme temperatures and conditions such as a hot attic or a damp, cold basement. These extremes can cause a loss of structural integrity.
- To preserve the luster of the high-quality finish on your product, it is recommended to place a doily or felt pad under any items you place on the finish.
- Clean with a damp cloth, then a dry cloth to preserve the original luster and beauty of this fine finish.
- Do not use abrasive chemicals.
- Do not spray cleaners directly onto furniture.
- Lift slightly when moving on carpeting to prevent leg breakage.
- Use of a vaporizer near furniture will cause wood to swell and to peel.

**YOU DID IT!**  
**Congratulations Mom & Dad!**

It's time to create your dream nursery. A safe, elegant handcrafted dresser that meets all your storage needs.



**1532 S. WASHINGTON AVENUE  
PISCATAWAY, NJ 08854**  
E-mail: [info@dreamonme.com](mailto:info@dreamonme.com)

**[www.dreamonme.com](http://www.dreamonme.com)**

**Follow Us @dreamonmeinc  
to get your nursery featured on our social media.**



**Enter our monthly giveaway!**  
**Scan the QR code to register.**



**Chat with us!**  
**Scan the QR code to Live Chat.**

