

UNIVERSAL DOUBLE DRESSER

Owner's Manual



Scan the QR code to register your product
<https://dreamonme.com/customer care/registration/>



Read all instructions before
assembling and using product.
IMPORTANT - Keep instructions for
future use.



0222R1-599

SAFETY TIPS



Adult Assembly
Required.



Small parts may
present choking
hazard prior to
assembly.




DO NOT use the
product if it is
damaged, broken,
and/or components are
missing or broken.



Please read the
instructions
thoroughly. Identify all
parts & hardware.



Improper or unsafe use
of power drills/drivers
can result in death or
serious injury.

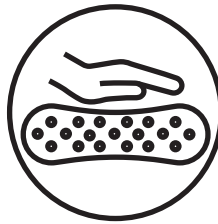

To protect your parts
during assembly,
please place them on a
soft surface.



To clean surface, use
only water on a damp
cloth. Do not use
window cleaner or
cleaning abrasive as it
will scratch the surface
and could damage the
protective coating.



Always monitor your
child's activity in the
nursery or near
furniture.



Contact Dream On
Me in case of any
assistance needed.

THANK YOU...

.... for choosing **Dream On Me** and congratulations on joining our family; a family that has been transforming lives for over 30 years!

We appreciate your feedback and wish you the very best in the coming years with your new addition. If you have any questions or concerns please don't hesitate to reach out to us. One of our trusted Customer Care representatives will be happy to assist you.

Thank you again for entrusting us to provide you with safe and affordable baby products and accessories.

LIMITED WARRANTY:

- Dream On Me warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect.
- This warranty covers 1 year from the date of original purchase.
- This warranty is valid only upon presentation of proof of purchase.
- This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included.
- This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way.
- This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

WARNINGS


- FAILURE TO FOLLOW THESE WARNINGS AND ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.
- CHECK THIS PRODUCT FOR DAMAGED HARDWARE, LOOSE JOINTS, MISSING PARTS OR SHARP EDGES BEFORE AND AFTER ASSEMBLY AND FREQUENTLY DURING USE.
- **DO NOT** USE THIS DRESSER IF ANY PARTS ARE MISSING, DAMAGED OR BROKEN. CONTACT **DREAM ON ME - 1532 S. WASHINGTON AVE, PISCATAWAY, NJ 08854** FOR REPLACEMENT PARTS.
- IF REFINISHING, USE A NON-TOXIC FINISH SPECIFIED FOR CHILDREN'S PRODUCTS.
- SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT THIS, PLACE THE HEAVIEST ITEMS ON THE LOWER SHELVES AND DRAWERS. DO NOT SET HEAVY OBJECTS ON TOP SHELVES AND DRAWERS.
- NEVER OPEN MORE THAN ONE DRAWER AT A TIME.
- THE USE OF TIP-OVER RESTRAINTS MAY REDUCE BUT NOT ELIMINATE THE RISK OF TIP-OVER.
- DO NOT SET TVs OR OTHER HEAVY OBJECTS ON TOP OF THIS PRODUCT.
- ALWAYS MONITOR YOUR CHILD'S ACTIVITY WHEN IN THE NURSERY.
- NEVER ALLOW CHILDREN TO CLIMB OR HANG ON DRAWERS, SHELVES, AND DOORS.
- DO NOT ALLOW CHILDREN STANDING IN DRAWERS.
- DO NOT ALLOW CHILDREN STANDING ON TOP OF THIS PRODUCT.
- TO AVOID HEAD INJURY, DO NOT ALLOW CHILDREN TO PLAY UNDERNEATH OPEN DRAWERS.
- DO NOT LEAVE DRAWERS OPEN WHEN IN USE.
- ACCESSORY ITEMS MUST BE SECURELY FASTENED TO THIS PRODUCT ACCORDING TO THE INSTRUCTIONS PROVIDED WITH THOSE ITEMS.

CHILDREN HAVE DIED FROM FURNITURE TIPOVER, TO REDUCE THE RISK OF TIPOVER :


- ALWAYS INSTALL TIPOVER RESTRAINT PROVIDED.
- NEVER PUT A TV ON THIS PRODUCT.
- NEVER ALLOW CHILDREN TO STAND, CLIMB OR HANG ON DRAWERS, DOORS OR SHELVES.
- NEVER OPEN MORE THAN ONE DRAWER AT A TIME.
- PLACE HEAVIEST ITEMS IN THE LOWER DRAWERS.

PARTS


If there are any missing parts, please contact **Dream On Me** before using the product.

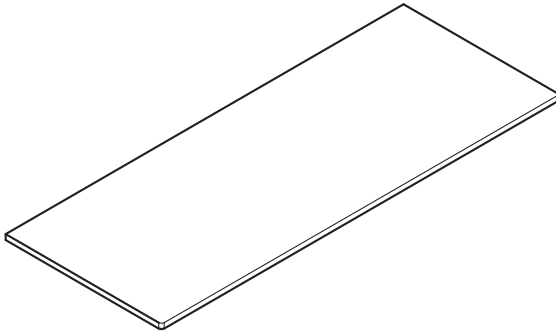


1 Dresser Top Panel

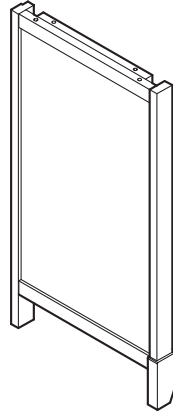


2 Dresser Left Side Panel

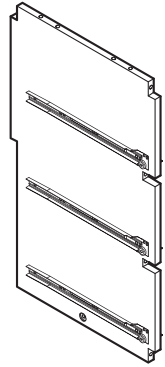


3 Dresser Center Panel

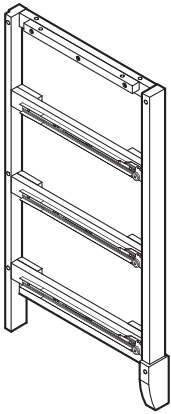


4 Dresser Right Side Panel

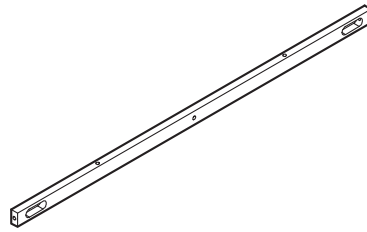


5 Dresser Top Rear Rail

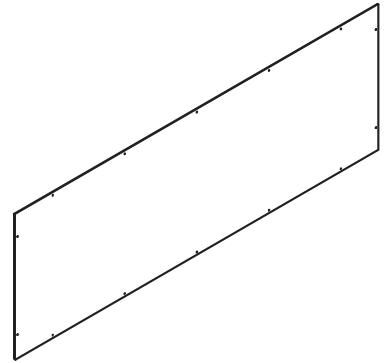


6 Dresser Top Rear Panel

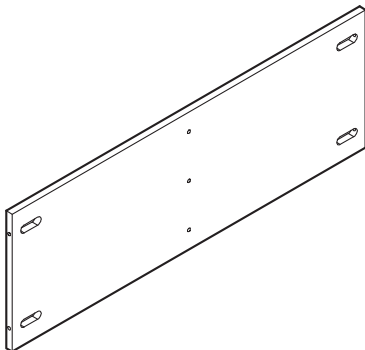

7 Dresser Bottom Rear Panel

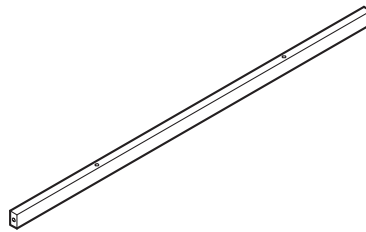


8 Dresser Top Front Rail

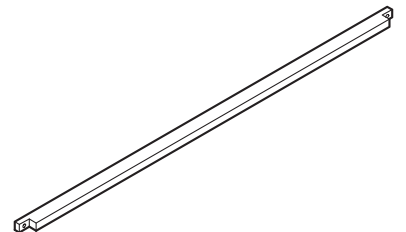


9 Dresser Centre Rail (x2)

PARTS (cont.)


If there are any missing parts, please contact **Dream On Me** before using the product.

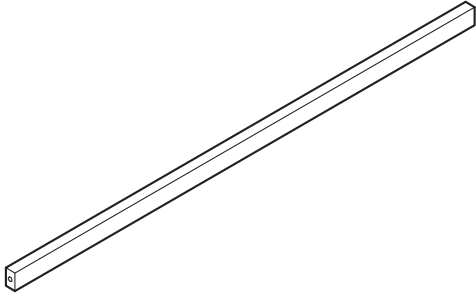


10 Dresser Bottom Front Rail

 


11 Dresser Centre Support Feet

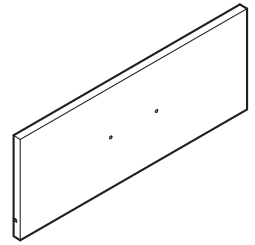


12 Drawer Front Panel (x6)

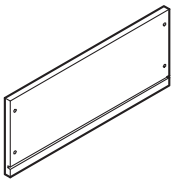


13 Drawer Left Panel (x6)

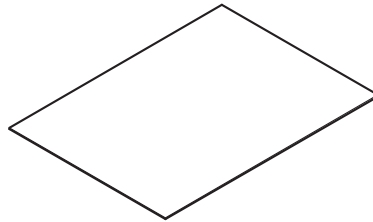

14 Drawer Bottom Panel (x6)

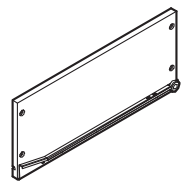


15 Drawer Right Panel (x6)

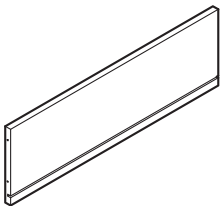


16 Drawer Rear Panel (x6)

HARDWARE

If there are any missing parts, please contact **Dream On Me** before using the product.

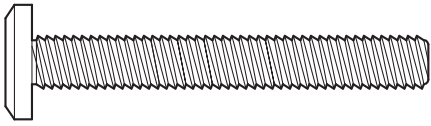


A Bolt 1-3/4" (x13)

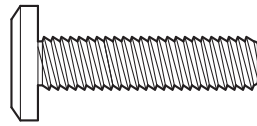


B Bolt 1" (x14)




C Wooden Dowel 1-1/8" (x14)

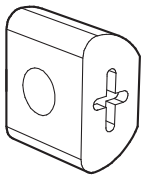


D Curve Washer (x13)

 


E Screw 1" (x48)

 


F Screw 5/8" (x14)

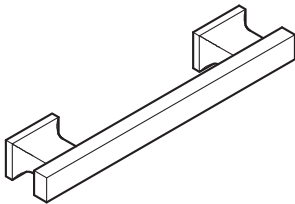


G Handle (x6)

 


H Screw 3/4" (x12)

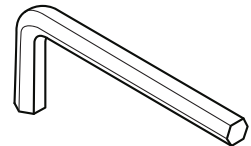

I Allen Key (x1)

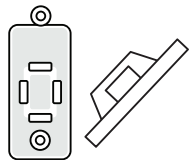


J Bracket (x4)

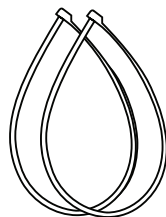

K Straps (x2)



 L Screw 1-1/2" (x4)





M Screw 3/4" (x4)

Tools Needed:



Power drill - 3/32" drill bit
(NOT INCLUDED)

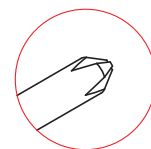
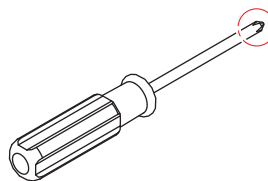


Philips Screw Driver
(NOT INCLUDED)


DRESSER ASSEMBLY - DRESSER FRAME ASSEMBLY

1

 - 1a. Place the Dresser Bottom Rear Panel (7) on a soft surface and align Dresser Center Panel (3) as shown in illustration. Attach both using two Wooden Dowels (C).
- 1b. Attach the Dresser Top Rear Rail (5) to the Center Panel (3) using a Wooden Dowel (C) at the bottom top end of the Center Panel.
- 1c. Similarly, attach the Dresser Top Front Rail (8), both Dresser Center Rails (9), and Dresser Bottom Front Rail (10) to the Center Panel (3) using Wooden Dowels (C).
- 1d. Insert the Curve Washer (D) into the Bolt (A) and insert the same into the insertion present near Dresser Bottom Front Rail (10) to the Center Panel (3) and tighten it.
- 1e. Insert the Bolt (B) into the middle insertion present at the Bottom Rear Panel (7) from below.

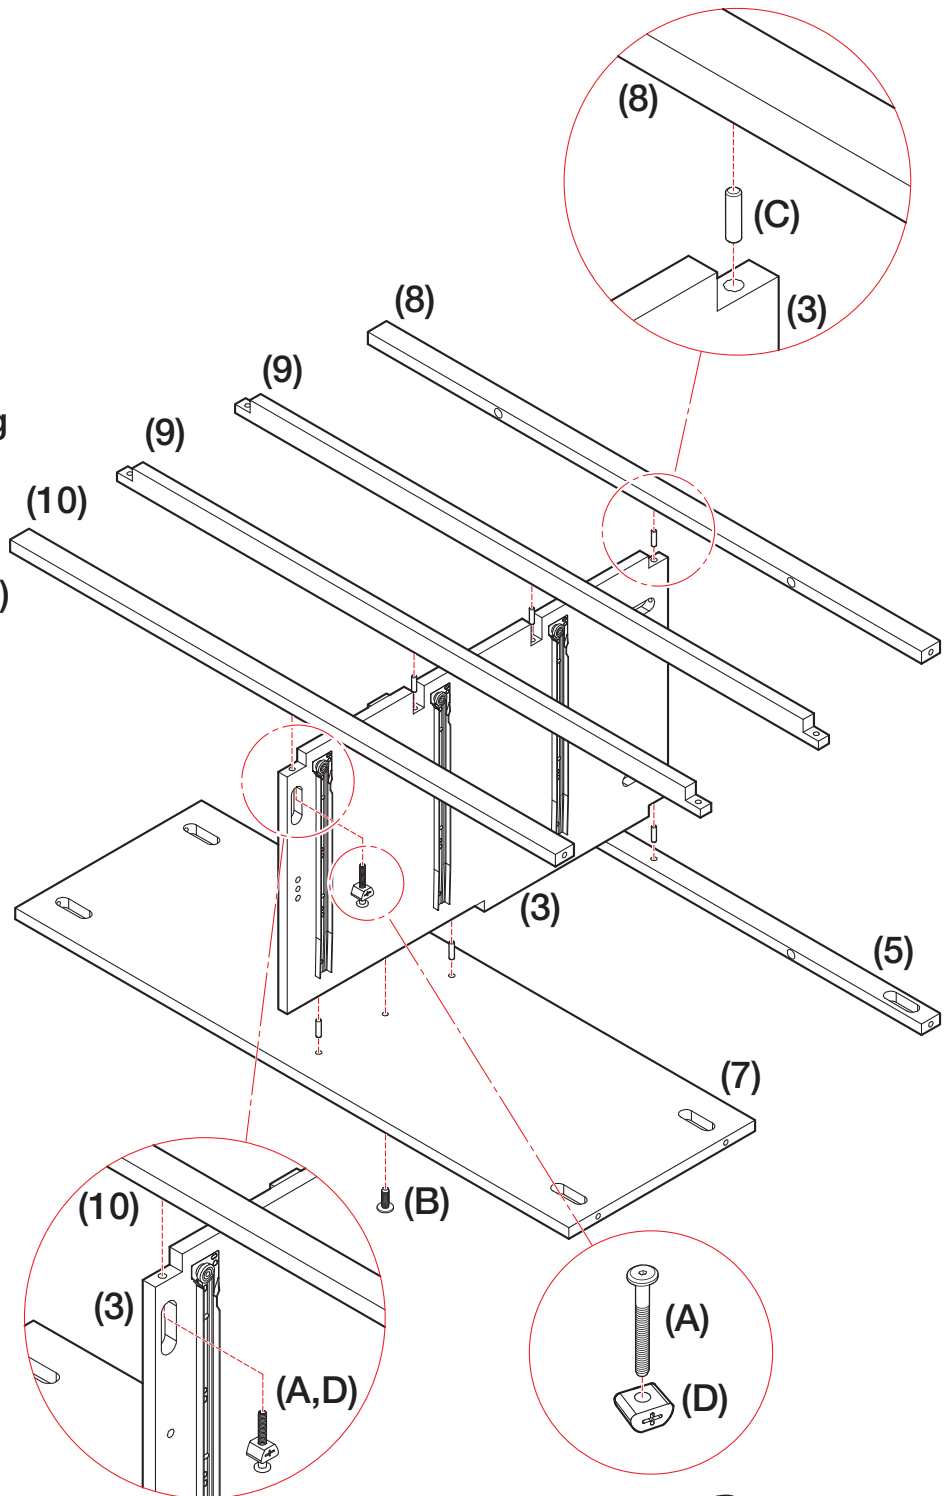


A Bolt 1-3/4" (x1)

 

B Bolt 1" (x1)



C Wooden Dowel 1-1/8" (x6)

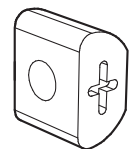



D Curve Washer (x1)

DRESSER ASSEMBLY - DRESSER FRAME ASSEMBLY


2

- 2a. Align the Dresser Left Side Panel (2) and Dresser Right Side Panel (4) as depicted in the illustration.
- 2d. Attach them using the Bolts (A) and Curve Washer (D) assembly followed previously.

 Note: Please do not overtighten the Bolts.

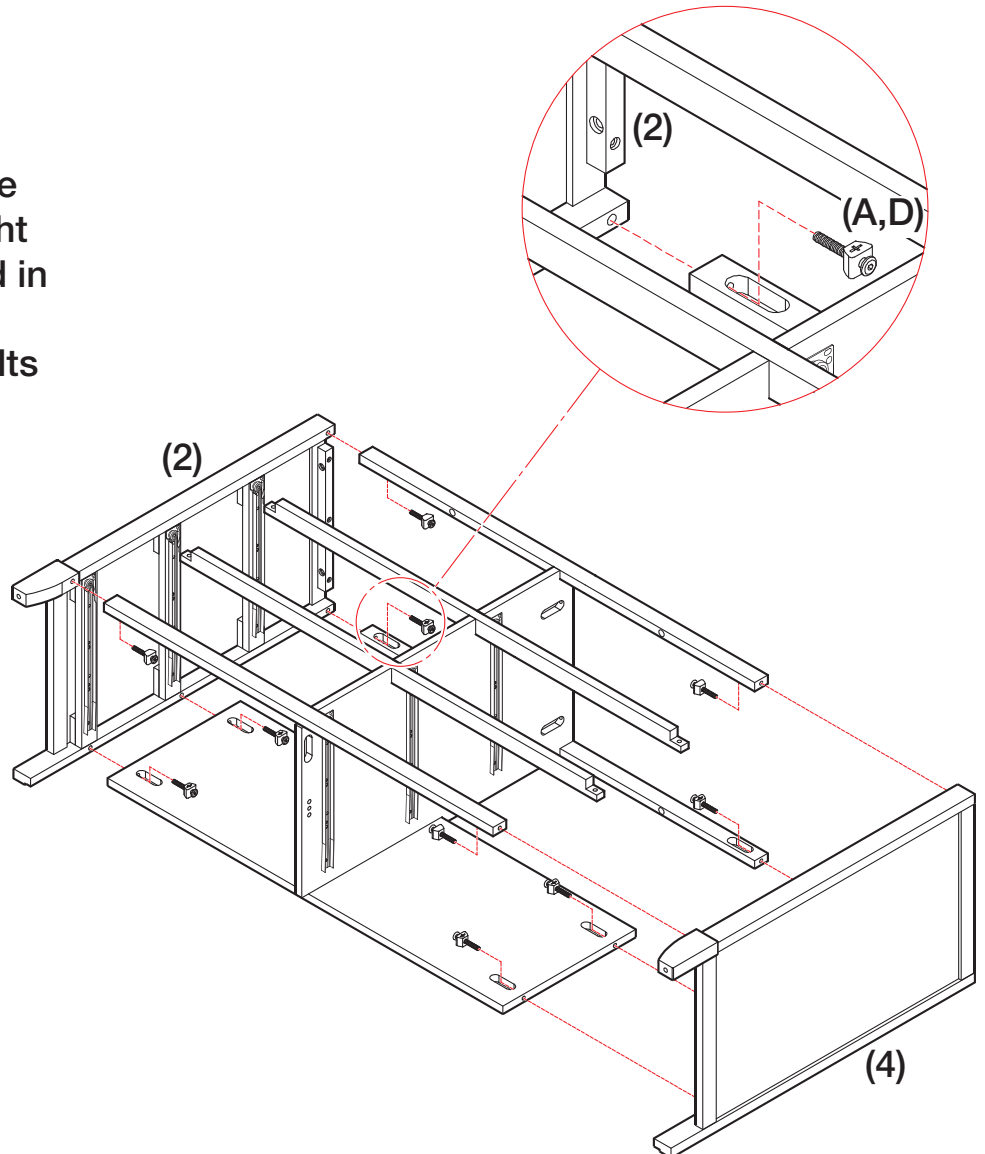

A Bolt 1-3/4" (x10)


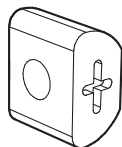


D Curve Washer (x10)

DRESSER ASSEMBLY - DRESSER FRAME ASSEMBLY

3

 - 3a. Attach the Dresser Center Support Feet (11) to the Center Panel (3) using two Wooden Dowels (C) and tighten them using the Bolt (B).
- 3b. Ensure the right orientation of the Dresser Center Support Feet (11).
- 3c. Attach both the Center Rails (9) to the Left Side Panel (2) and Right Side Panel (4) using Bolt (B).

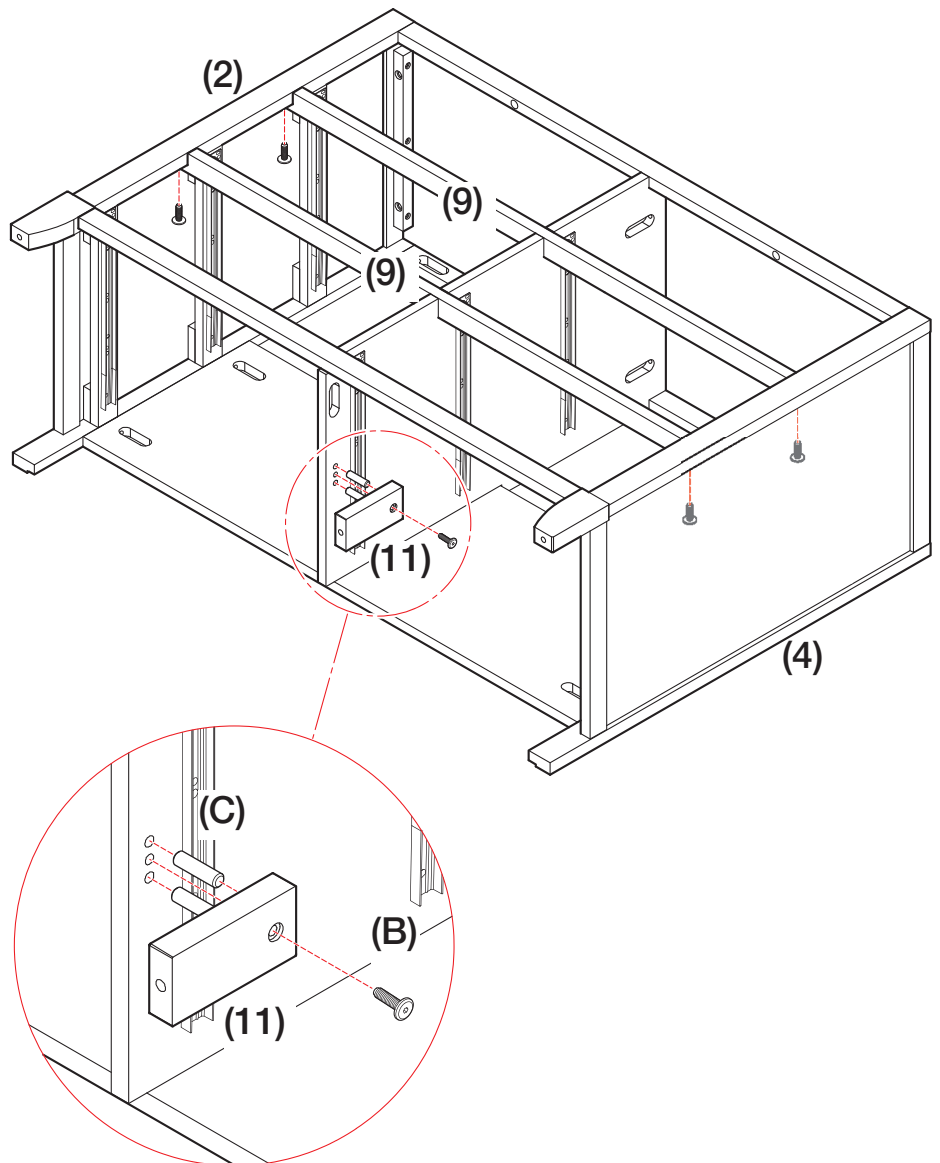

B Bolt 1" (x5)



 


C Wooden Dowel
1-1/8" (x2)

DRESSER ASSEMBLY - DRESSER FRAME ASSEMBLY


4

- 4a. Align the Dresser Top Panel (1) onto the previously made assembly as shown in the illustration.
- 4b. Attach the Top Panel (1) using Wooden Dowels (C) at shorter Right and Left Side Panels and Center Panel (3).
- 4c. Insert the Bolts (A) attached with the Curve Washer (D) into the insertions on Center Panel (3).
- 4d. Complete the Top Panel Assembly (1) by inserting the Bolts (B) from below into the grooves as shown in the illustration.

Note: Please do not overtighten the Bolts.

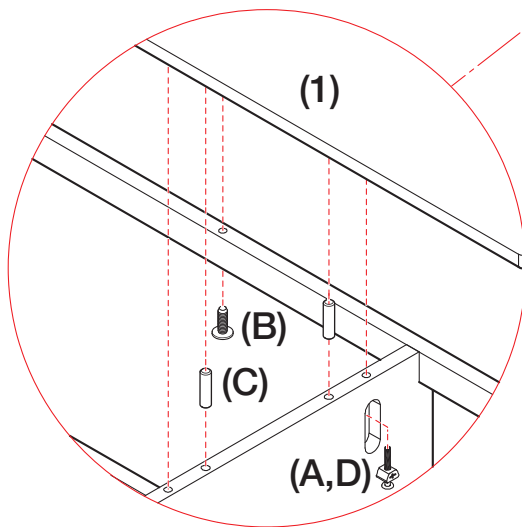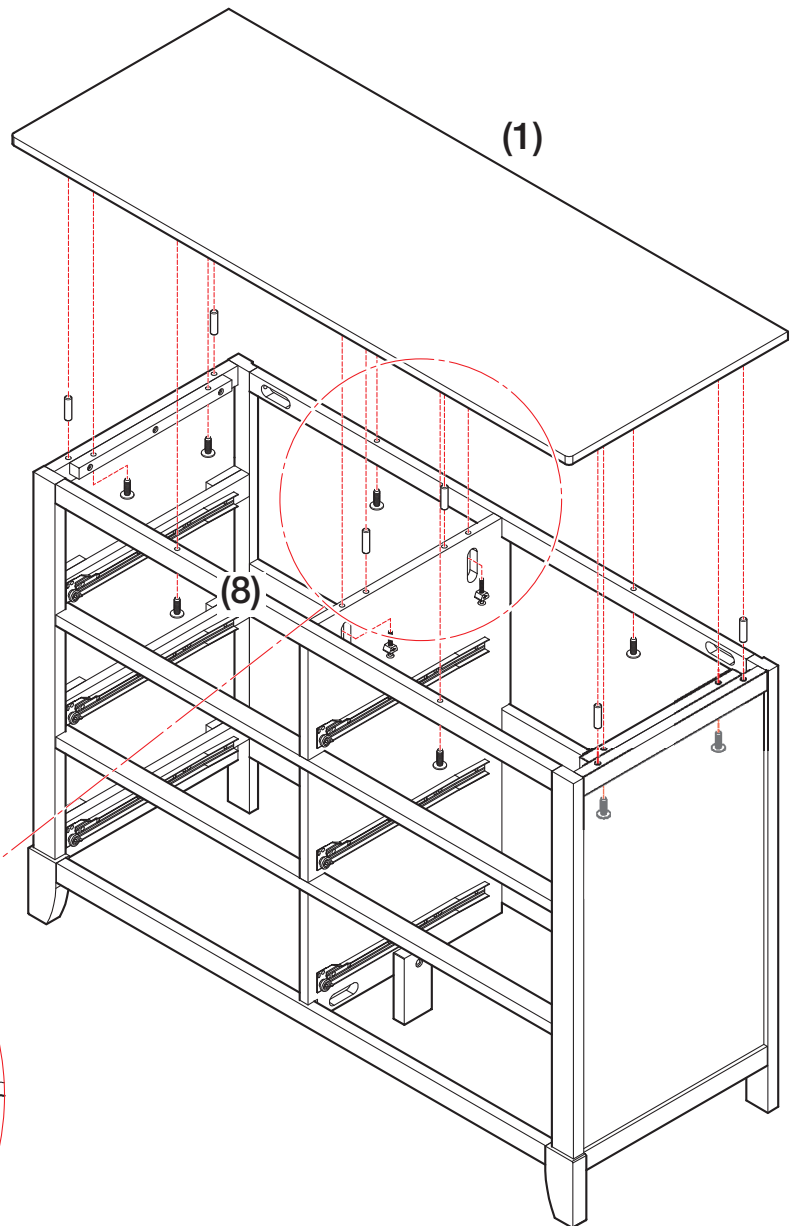


A Bolt 1-3/4" (x2)

 

B Bolt 1" (x8)



C Wooden Dowel 1-1/8" (x6)

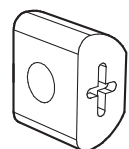



D Curve Washer (x2)

DRESSER ASSEMBLY - DRESSER FRAME ASSEMBLY

5

5a. Align the Dresser Top Rear Panel (6) above the Dresser Bottom Rear Panel (7), attach them using the Screws (F).

 Note: Please do not overtighten the Screws.


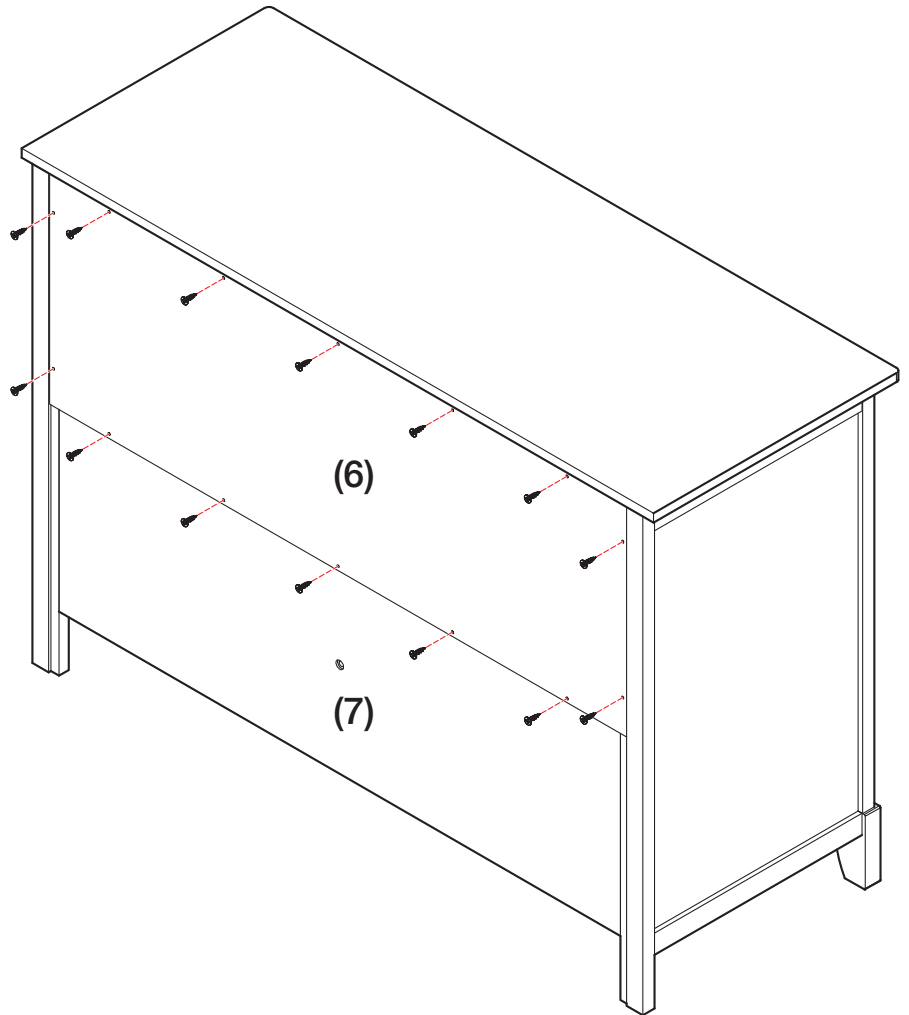


F Screw 5/8" (x14)


DRESSER ASSEMBLY - DRAWER ASSEMBLY

6

 - 6a. Place one of the Drawer Front Panels (12) on a softer surface and align one of the Drawer Left Panels (15) and Drawer Right Panels (13) as depicted in the diagram.
- 6b. Attach the above using the Screws (E).
- 6c. Slide the Drawer Bottom Panel (14) into grooves present on the Left (13) and Right Panels (15).

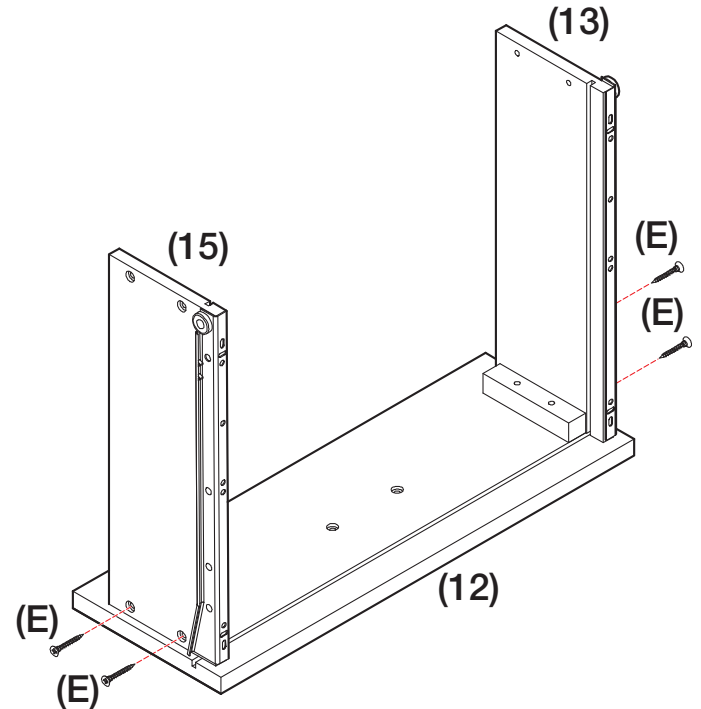



E Screw 1" (x4)

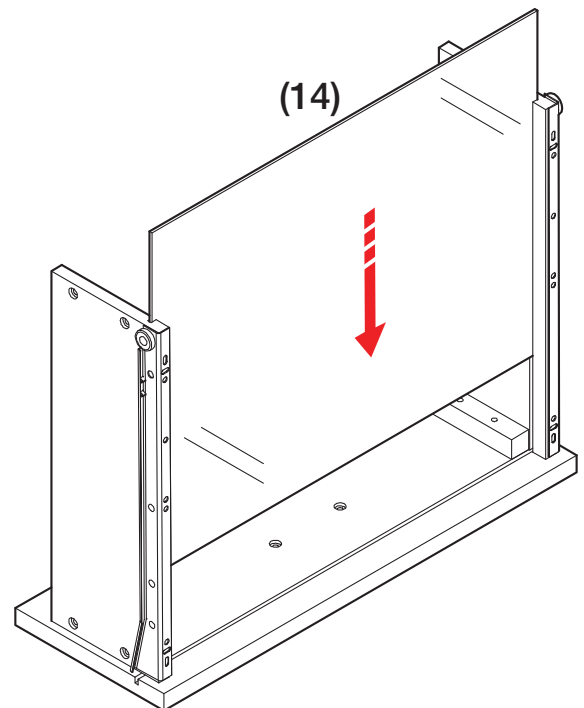


DRESSER ASSEMBLY - DRAWER ASSEMBLY

7


- 7a. Align one of the Drawer Rear Panels (16) onto the Left (13) and Right Panels (15) and attach the same with Screws (E) on all four corners.
- 7b. Attach the Handle (G) to the Front Panel (12) using Screw (H), by inserting the Screw from behind the Front Panel passing it through the handle.
- 7c. Similarly, follow the above steps to assemble the rest of the Drawers.

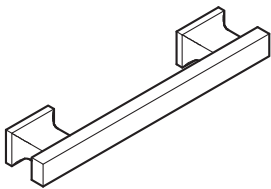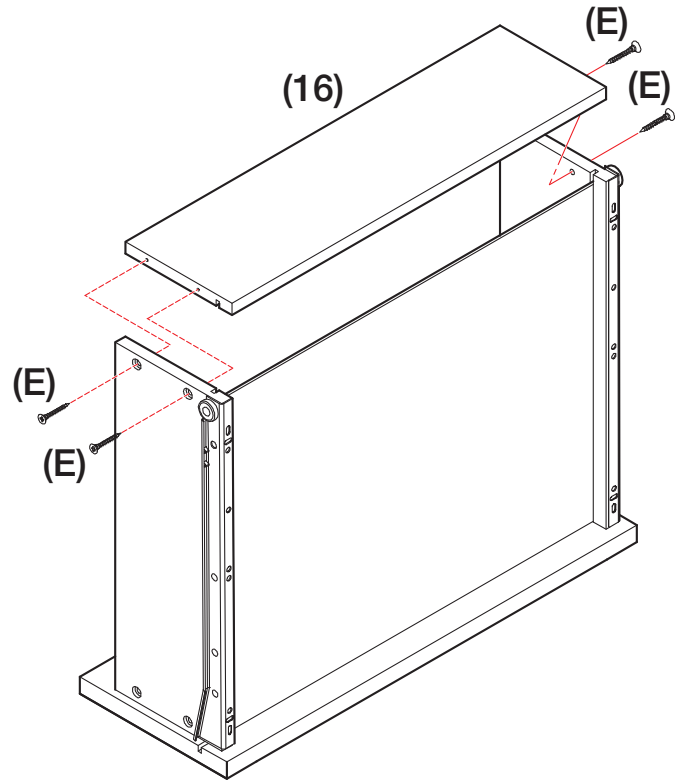


G Handle (x1)

 

E Screw 1" (x4)

 


H Screw 3/4" (x2)

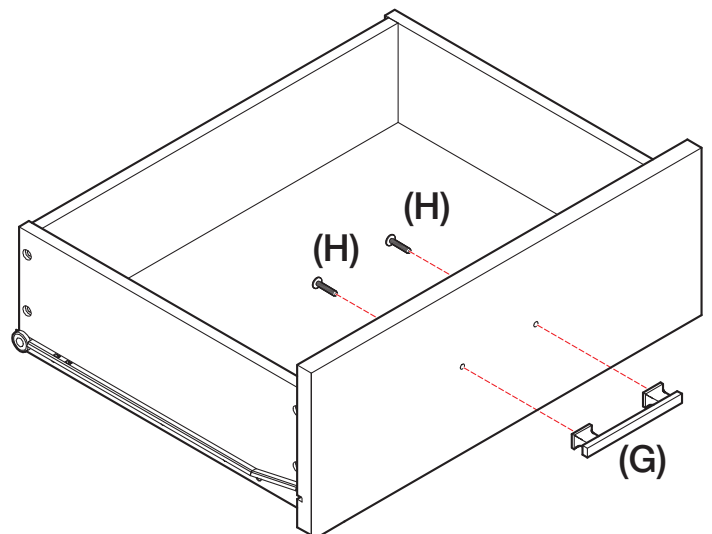

DRESSER ASSEMBLY - DRAWER ASSEMBLY

8



- 8a. Insert the assembled drawers into the grooves present on the dresser frame.
- 8b. Ensure the right alignment of drawers before inserting them into the frame.

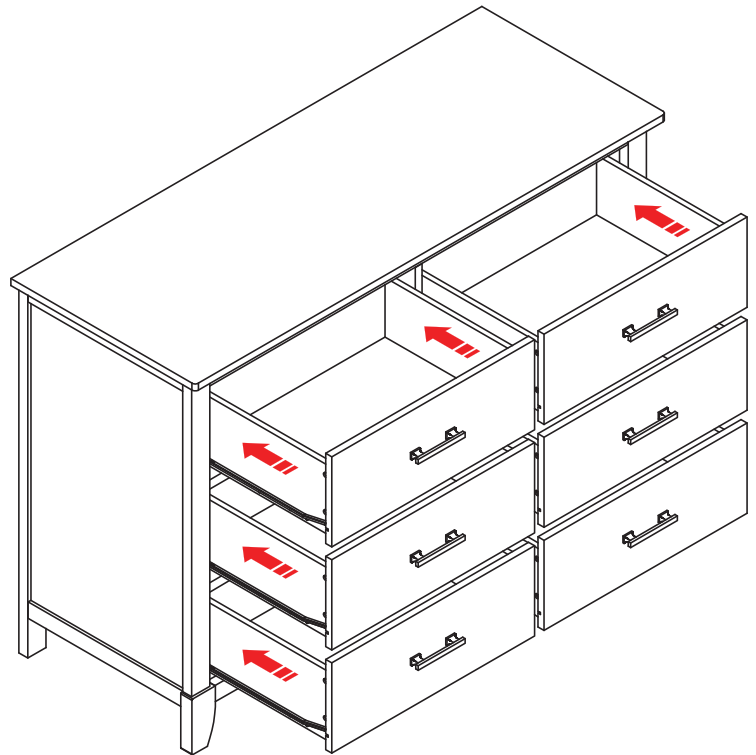




ANTI-TIP SAFETY HARDWARE INSTALLATION

9

- 9a. Determine the desired location of the dresser. Find a wall stud behind the furniture piece and position one of the Brackets (J) vertically on the stud approximately 1" below the top of the dresser piece. Mark and drill a pilot hole in the center of the stud with a 3/32" drill bit. Attach the Bracket (J) to stud with the two Screws (L).
- 9b. The second bracket will need to be attached horizontally to the top of the dresser frame. Temporarily move the dresser away from the wall and place a bracket near the top of the frame. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the dresser piece with the two Screws (M).
- 9c. Move the dresser piece into its final position, taking care to line up the wall bracket with the dresser bracket. Thread the strap through the brackets as shown in the illustrations. Tighten the strap until snug. Note: Do not overtighten. Similarly, follow the steps for the other side of the furniture.

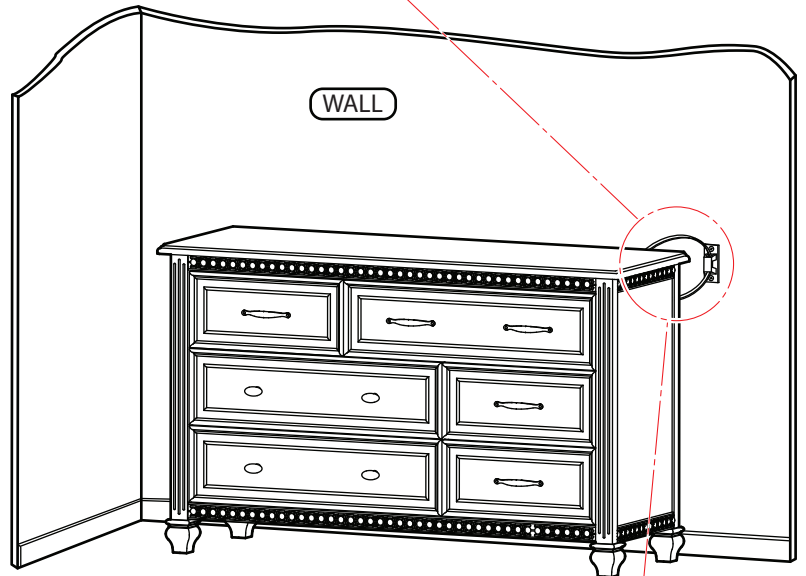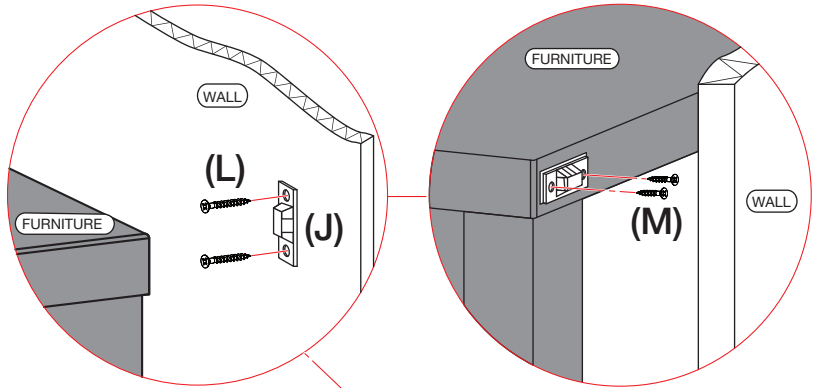

NOTE:
Model shown is example only,
Styles may vary

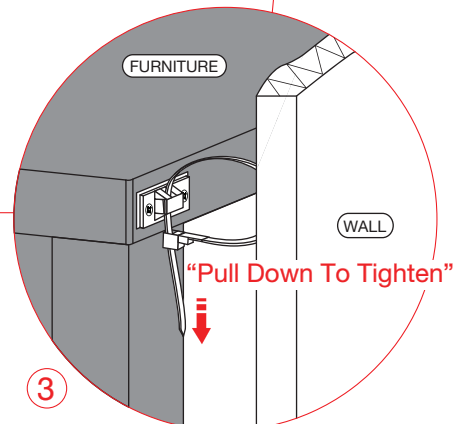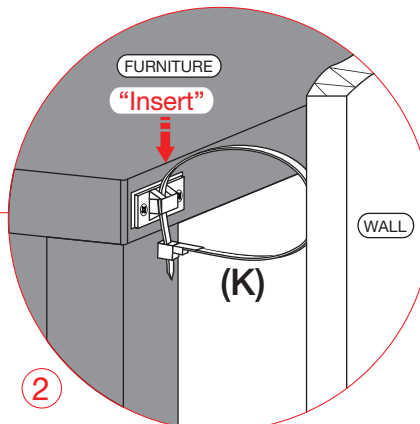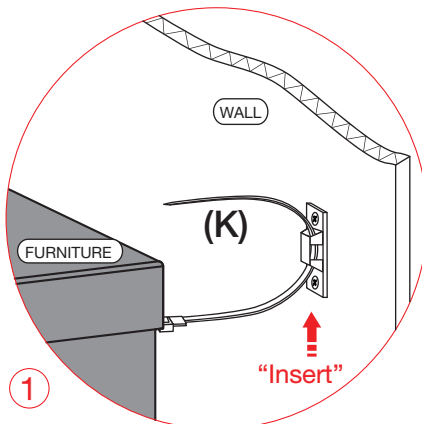

FURNITURE CARE INSTRUCTIONS

ROOM CLIMATE CONTROL:

- Wood, when first cut contains more than 50 percent water. When it is prepared for furniture construction it is placed in a Kiln and the moisture content is brought down to 8 to 10 percent. Wood is porous and responds to its environment. If the room has high humidity it will absorb it and expand and if the humidity is low it will lose moisture and shrink.
- It is important that the humidity levels in the room be controlled from extremes of too much humidity or too little. Furniture should not be placed close to the air-conditioning outlets, fire places, radiators, space heaters, humidifiers or dehumidifiers. Exposure to extreme variations of temperature and humidity can damage any fine wood product.

THE IDEAL ENVIRONMENT FOR FINE FURNITURE:

- Fine wood furniture will have fewer problems when its environment is controlled at a temperature between 65 and 75 degrees and a relative humidity between 35 and 40 percent. Wood placed in an environment outside of those limits can and will shrink or expand and may develop some small cracks which are not material or structural defects.

STICKING DOORS AND DRAWERS:

- With the minor changes in temperature and humidity, doors and drawers may swell and be difficult to open or close. Tolerances have been built into the units but extreme conditions may still cause sticking. This will adjust back to normal over time but until it does consider using a dehumidifier or rub candle wax or paraffin on sides that stick.

AVOID DIRECT SUNLIGHT:

- Keep the furniture out of direct sunlight. Ultraviolet rays will fade colors and in some cases darken them. It can also cause crazing or hair line cracks in the finish. White finishes will yellow naturally over time and exposure to direct sunlight will hasten this natural process along with some woods darkening naturally over time; this is not considered to be a quality defect.

PROPER STORAGE:

- If you need to put your furniture in storage for any period of time do not store them in a damp basement or hot dry attic. Allow air movement around the furniture and do not stack anything on it.

FURNITURE CARE INSTRUCTIONS (cont.)

IN GENERAL:

- Protect furniture surface from hot or extremely cold items.
- Use coasters under hot or cold beverages.
- Do not use synthetic fabric under accessories or lamps.
- Protect tops from pens, markers and crayons.
- Oils from potpourri and other scented items can damage the finish of the furniture.
- Do not drag items across the surface of the furniture.
- Allow the surface to breath by rotating your accessories and lamps.
- Do not over polish the furniture, do it only two or three times a year. Over polishing can distort the natural finish of the product.
- Do not wax the furniture, as wax build up can destroy natural finish of the product.
- When moving furniture always lift the unit. Do not push or drag it to avoid damage to legs.
- Keep the furniture level so doors and drawers open and close freely.
- Clean with a damp, not wet, cloth. Use only a mild soap. Do not use the abrasive cleaners.
- Do not scratch or chip the finish.
- Inspect the product periodically, contact Dream On Me Inc for replacement parts or questions.
- Do not store the product or any parts in extreme temperatures and conditions such as a hot attic or a damp, cold basement. These extremes can cause a loss of structural integrity.
- To preserve the luster of the high-quality finish on your product, it is recommended to place a doily or felt pad under any items you place on the finish.
- Clean with a damp cloth, then a dry cloth to preserve the original luster and beauty of this fine finish.
- Do not use abrasive chemicals.
- Do not spray cleaners directly onto furniture.
- Lift slightly when moving on carpeting to prevent leg breakage.
- Use of a vaporizer near furniture will cause wood to swell and to peel.

YOU DID IT!
Congratulations Mom & Dad!

It's time to create your dream nursery. A safe, elegant handcrafted dresser that meets all your storage needs.



**1532 S. WASHINGTON AVENUE
PISCATAWAY, NJ 08854**
E-mail: info@dreamonme.com

www.dreamonme.com

**Follow Us @dreamonmeinc
to get your nursery featured on our social media.**



**Enter our monthly giveaway!
Scan the QR code to register.**



**Chat with us!
Scan the QR code to Live Chat.**

