

 
240X240MM

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY

baby walker

Item NO. : #413

Baby Walker with
“new” car toy tray
displaying lights and
sounds to entertain
baby. Features rocking
movement function and
height adjustable seat
for growing babies.

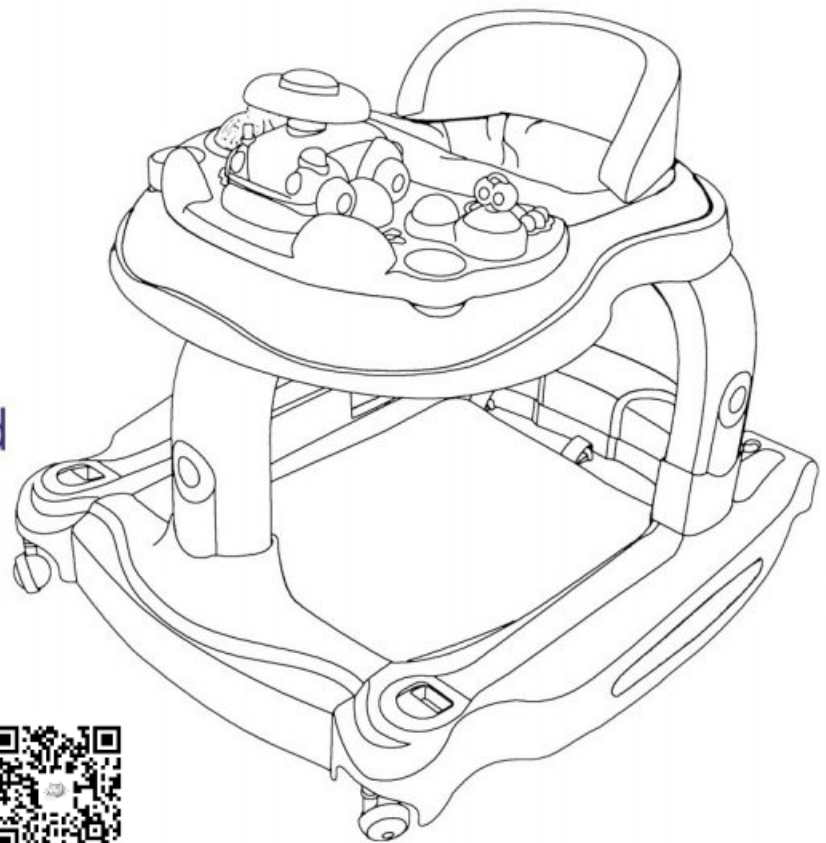

Scan the QR code to register your product
<https://dreamonme.com/customer-care/registration/>



240X240MM

safety precautions

Before assembling this walker read and understand the instructions. Incorrect assembly may make the walker unsafe. Do not use this walker if any part is broken, torn or missing. Keep these instructions in a safe place for future reference.

WARNING

ALWAYS FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

NEVER LEAVE YOUR CHILD UNATTENDED. ALWAYS KEEP CHILD IN VIEW WHILE IN WALKER.

USE ONLY ON FLAT SURFACES FREE OF OBJECTS THAT COULD CAUSE THE WALKER TO TIP OVER TO AVOID BURNS, KEEP THE CHILD AWAY FROM HOT LIQUID, RANGES, RADIATORS SPACE HEATERS AND FIREPLACES ETC...

 **WARNING-STAIR HAZARD:** TO AVOID SERIOUS INJURY OR DEATH, BLOCK STAIRS/STEPS SECURELY BEFORE USING WALKER.

Clean (friction components) regularly to maintain stopping performance.

Remove packaging from walker vicinity after it's assembly.

Always use the safety locks once the walker height is correctly adjusted.

Check that all safety locks are engaged before placing a child in the walker.

This walker should not be used by a child who can walk unaided.

This walker should not be used by a child who cannot sit unaided.

This walker should not be used by a child weighing less than 7kgs and 65cm in height.

A child should discontinue using this walker when weighing more than 11kgs and 82cm in height.

The walker is not suitable for babies under 6 months of age.

Electrical cords, heaters, fireplaces and other hot objects, or any other objects or substances that may be dangerous, should be guarded or put out of reach of a child using the walker.

Promptly replace worn out or broken parts.

The walker should not be used (whether indoors or outdoors) on surfaces that have any obstructions that could cause the walker to tip over.

The walker should not be carried with a child in it.

Adjust the height of the walker so that both feet of a child in the walker should be able to touch the ground.

Care must be taken while folding and unfolding the walker to prevent fingers being caught.

Keep medication, strings, elastics and small toys (other than the ones attached to the toybar) out of reach from any position of the walker.

The soft toys are not intended to be "mouthed" by the baby and should be positioned clearly out of reach of the baby's face and mouth.

Adjust the toys to avoid being too close to the baby. · The toys are suitable for all ages.

Always attach the toys tightly to the walker according to the instructions. Check frequently.

240X240MM

assembly contents

Check what you have received...

You have received 1 box. Please check the contents of the box against the list below. If anything is missing, please contact Dream On Me: 908-791-0555.



Base frame



Front castors



Front leg



Rear legs



Toy tray



Top tray



Seat pad

 


Mat

assembly instructions


Attaching legs

1. Turn top tray up side down.
2. Align front leg and rear legs into top tray slots until it clicks in place.

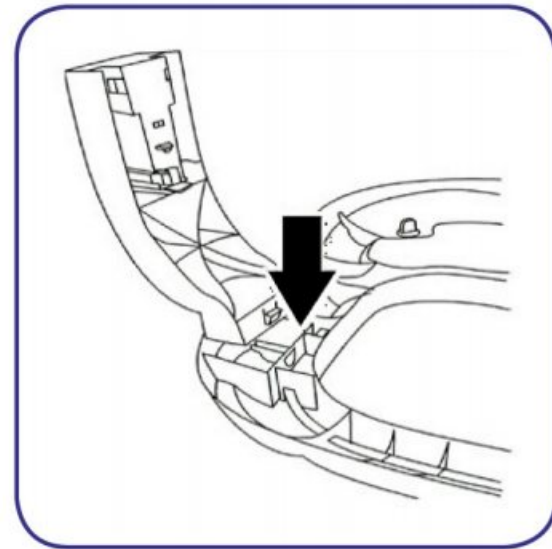

Attaching upper frame

 
1. Place top tray (with attached front and rear legs) over the base frame.
2. Align all legs into the desired slots in the base frame.

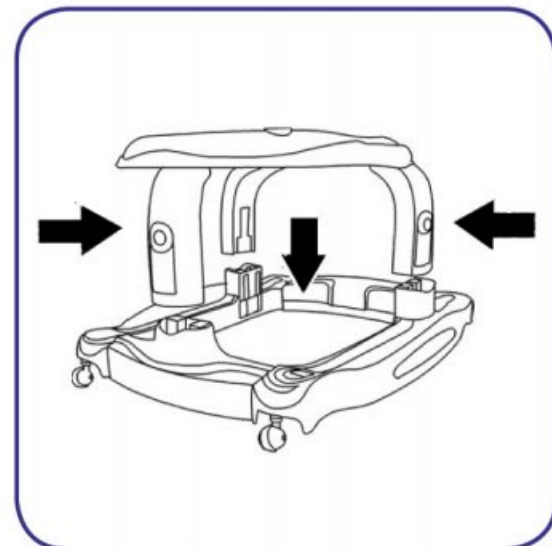

assembly instructions (cont.)


Attaching upper frame (cont.)

 3. Press and hold red button on one of the three legs, and push down into slot until it clicks in place. Repeat previous step for the remaining legs.

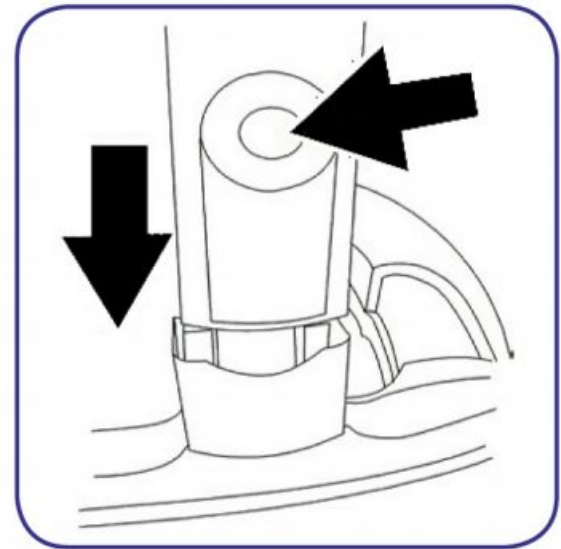

Installing front castors


 
Install front castors by sliding them in wheel housing holes, at the front base of the walker.

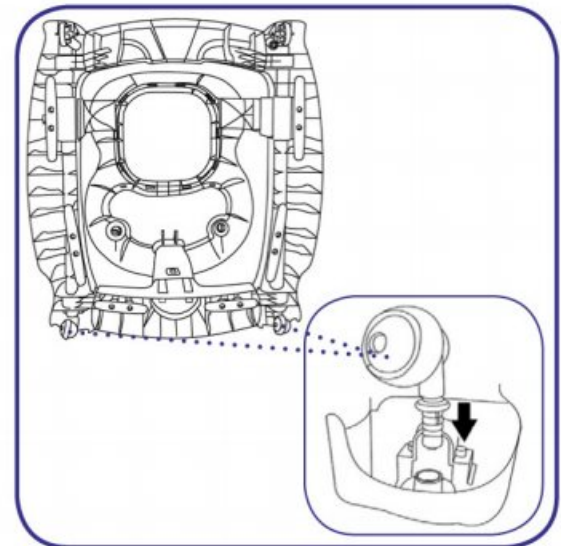

assembly instructions (cont.)

Installing seat pad

  
1. Place seat pad over backrest.
2. Align all plastic tabs on the seat pad to the desired holes in the top tray.
3. Pull all plastic tabs right through as shown in the diagram.

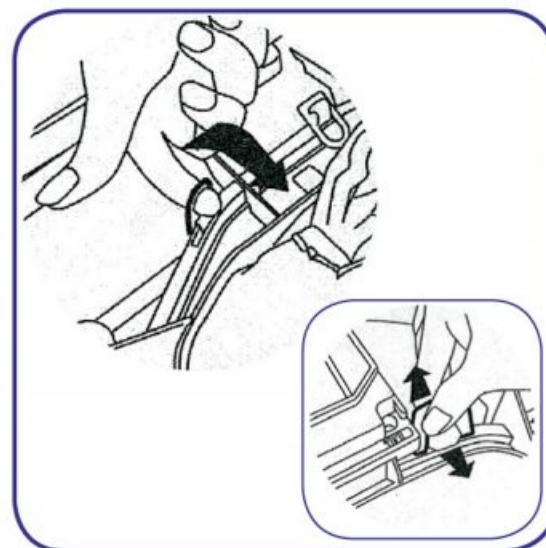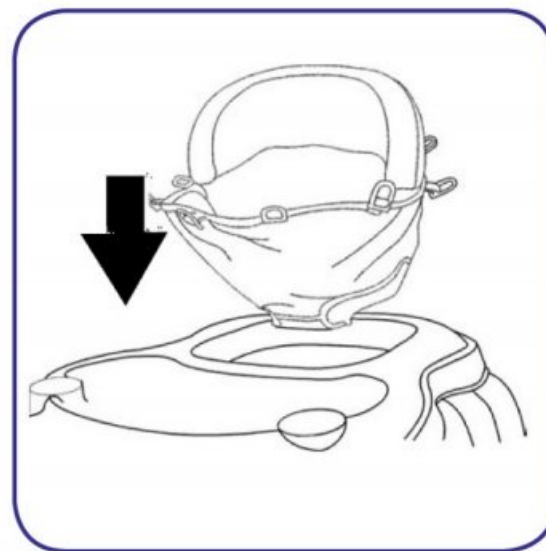

assembly instructions (cont.)

Installing batteries

 1. Gently pull off car toy from toy tray.
2. Remove cover from under the car toy.
3. Install 2 x "AA" (1.5V) alkaline batteries (not included) into battery compartment. Ensure that the batteries are facing the appropriate polarity.
4. Replace cover and screw it back to the car toy.

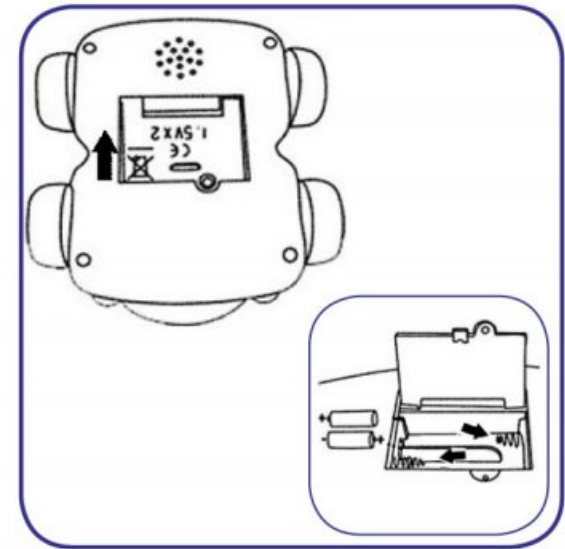

⚠ WARNING:

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.

Do not charge non-rechargeable batteries.

Adult supervision is required when charging rechargeable batteries.

 
Always remove flat or exhausted batteries from the toy.

Do not short circuit the supply terminals.


assembly instructions (cont.)

Installing toy tray (cont.)

- 1 Slide toy tray into top tray.
- 2 Ensure that the two plastic tabs (underneath the toy tray) inserts into the holes in the top tray.

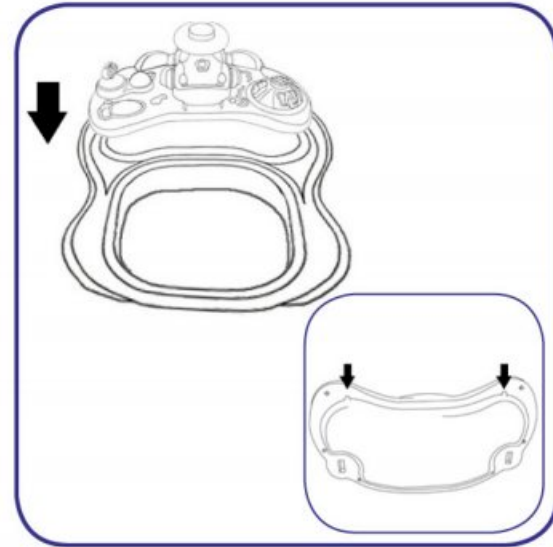

 
3. To lock toy tray onto the top tray, locate the two locking knobs underneath the toy tray (at the front end of each corner).
4. Twist each locking knob clockwise.
5. To disengage lock, reverse previous step.

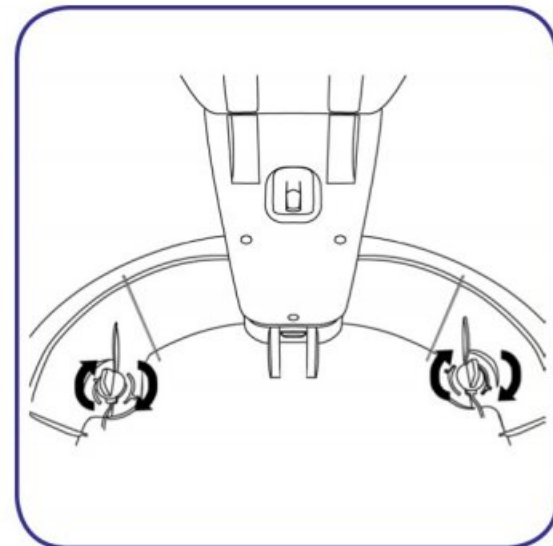

assembly instructions (cont.)

To raise or lower walker

 1. Ensure that all height position locking knobs (located behind the legs) are unlocked, with the locking knobs in the up position.

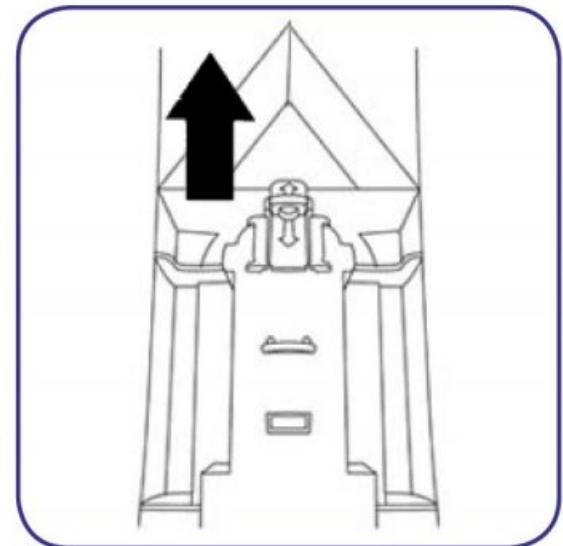



240X240MM

assembly instructions (cont.)

To raise or lower walker (cont.)

2. Press in and hold the red button on the front leg
 3. Either pull up or push down leg to the desired position.
 4. Release button and make sure that the front leg is in a stable position.
 5. Repeat previous step for the rear legs.
-
6. Lock height position of leg by pushing down the locking knob behind each leg.
 7. Reverse previous step to unlock leg positions for new height adjustments.

  Caution: When raising or lowering walker, always adjust one position at a time

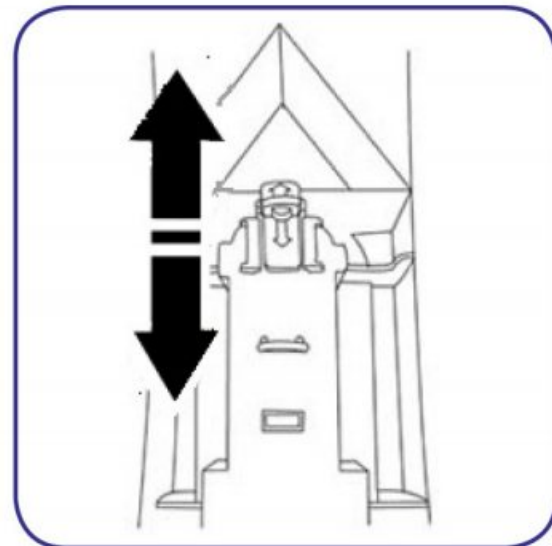
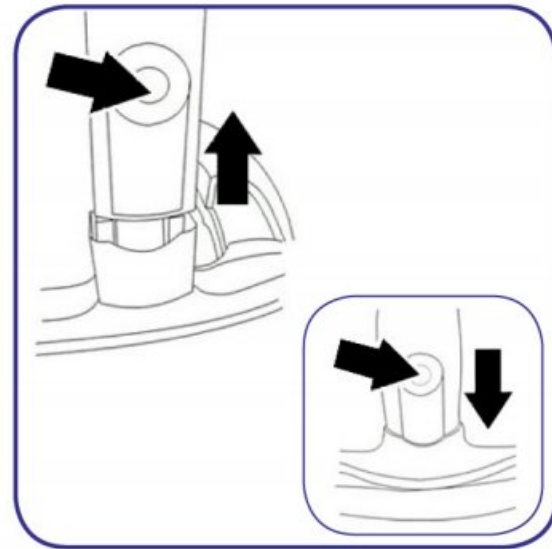


assembly instructions (cont.)

Activating and disengaging rocking function

1. To activate rocking function, push the **A** button at the front end (in the top right-hand corner) of the base frame forward. At the same time, turn the whole right side of the base frame downwards until it engages in the holes underneath the front castors.
2. Repeat previous step for the left leg side of the base frame. Please refer to diagram
3. To disengage rocking function, reverse previous step.
4. Lock height position of leg by pushing down the locking knob behind each leg.
5. Reverse previous step to unlock leg position.

  Caution: When raising or lowering walker, always adjust one position at a time

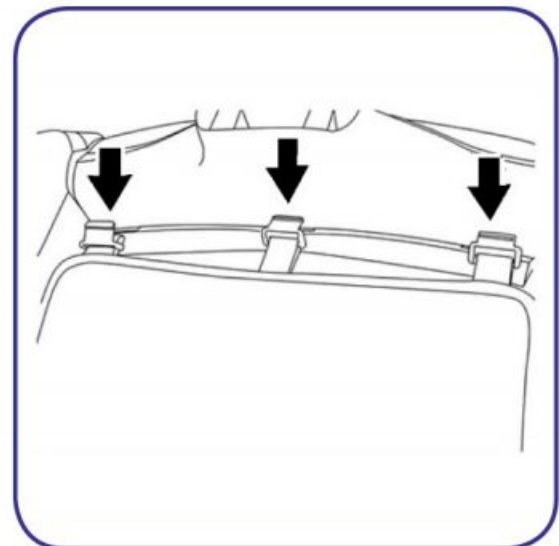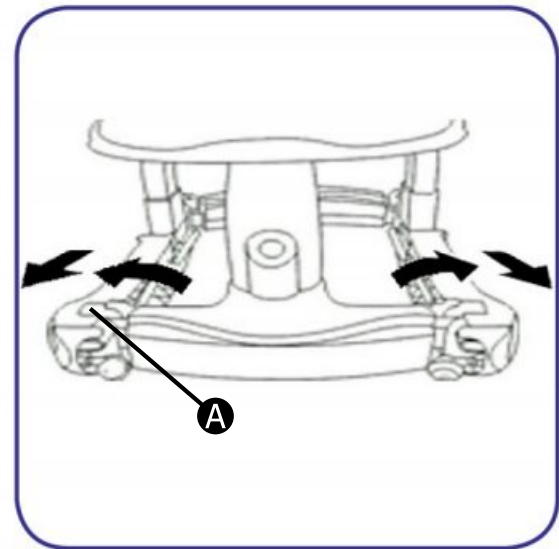

240X240MM

how to care for your Childcare walker

Care and Maintenance

To ensure the long-lasting use of your walker, do not use abrasive cleaners. Always store product in a clean dry place.

Seat pad: Remove from frame. Fasten buckles on seat restraint and seat pad. Machine wash with cold water, gentle cycle. No bleach or tumble dry at a low heat.

Toy-bar and toys: Wipe clean with a damp cloth and mild soap. Air dry. Do not immerse in water.

Frame: Wipe the metal frame with soft, clean cloth and mild soap.

Dream On Me inc.

125 Helen street

South Plainfield NJ 07080



1532, S. Washington Avenue
Piscataway, NJ 08854
E-mail: info@dreamonme.com

www.dreamonme.com

Follow us on



@dreamonmeinc



@dreamonmeinc

to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.



DOM
FAMILY

