

BABY WALKER

5. Folding steps

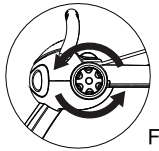


Fig 15

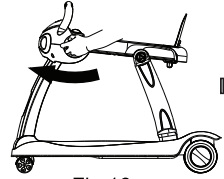


Fig 16

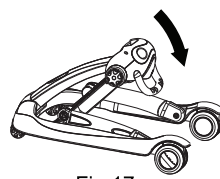


Fig 17

Turn the folding knob as shown in Fig 15, and push the walker body forward as shown in Fig 16. Then, fold backward as shown in Fig 17.

6. Instruction for music board

As shown in Fig 18, remove the battery cover by unscrewing it. Then, insert new batteries into the battery box. (Note, pay attention to their poles "+" and "-"). Now, screw the screws back in. Press the music key for music.

WARNING!

- The product uses 2 AA 1.5V batteries.
- Do not reverse the polarity of the batteries.
- It is prohibited to charge non-rechargeable battery.
- It is only available to charge the battery under adult's attendance.
- Please take out the battery from the toy before charging.
- Do not mix use different type of batteries or new and old batteries together.
- Ensure the proper and right polarity onto the toy.
- Please take out the worn-out batteries from the toy.
- Do not shortcut the polarities of the battery.
- It is prohibited to let child play with the battery as toy so as to avoid danger.

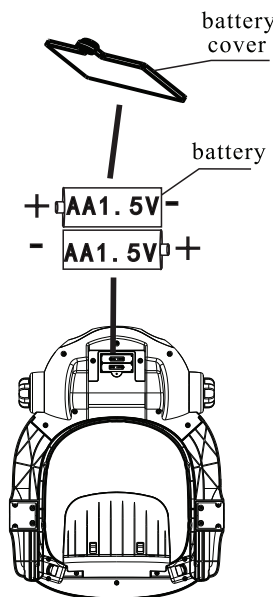


Fig 18

⚠ WARNING

- **Never leave the child unattended. Always keep child in view while in walker.**
- **Intended for children who can sit unaided, approximately 6 months of age. Not intended for children who can walk by themselves or weight more than 25 lbs or height more than 27.6 inches.**

⚠ WARNING – STAIR HAZARD

Avoid serious injury or death. Block stairs/steps securely before using walker, even when using parking brake.

BABY WALKER

⚠ WARNING

- Prevent access to stairs, steps and uneven surfaces.
- The child will be able to reach further and move faster than before when in the baby walker.
- Guard all fires, heating, and cooking appliances.
- Remove hot liquids, electrical flexes, and other potential hazards from reach.
- Prevent collision with glass in doors, windows and furniture.
- Do not use the baby walker if any components are broken or missing.
- This baby walker should be used only for short periods of time (e.g. 20min).
- Do not use replacement parts other than those approved and provided by Dream On Me.
- Never leave child unattended. Always keep child in view while in walker.
- Use only on flat surfaces, free of objects that could cause the walker to tip over.
- To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc.
- Each walker is labeled with a separate stairs warning visible to the consumer when placing the child in the walker.
- The product must be assembled by an adult.

MAINTENANCE


- 1) Never force mechanisms or moving parts. If you are not sure about what to do, please refer to the instructions.
- 2) Clean plastic and metal parts with a damp cloth or a light detergent. Clean safety rubbers regularly to maintain stopping performance. Do not use solvents, ammonia or petrol.
- 3) Regularly check unit to ensure that no parts are loose or broken.
- 4) Clean the rubber pads regularly to maintain stopping performance.

Dream On Me Inc. 1532 South Washington Ave, Piscataway TWP, NJ 08854
Tel 732-752-7220 Fax 732-752-7221
MADE IN FO SHAN, GUANG DONG, CHINA

User's Manual



Baby Walker

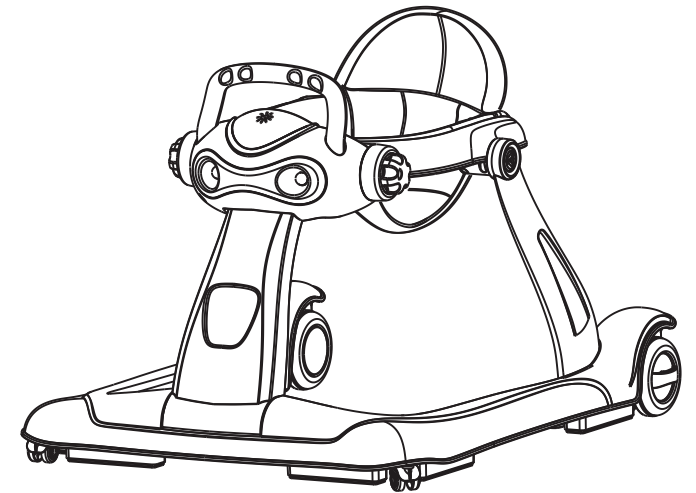

Model: #414

Scan the QR code to register your product
<https://dreamonme.com/customercare/registration/>






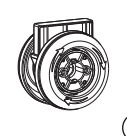
 

Read the instructions carefully before use and keep them for future reference. The child may get hurt if you do not follow these instructions.

Thank you for choosing Dream On Me and congratulations on joining The DOM Family, a family that has been transforming lives for 30 years! We appreciate your feedback and wish you the very best in the coming years with your new addition. If you have any questions or concerns please don't hesitate to reach out and a trusted DOM representative will assist you. Thank you again for entrusting us to supply you with the safest, functional and affordable baby products and accessories. Feel free to follow us on Facebook and Instagram for further opportunities and offers.


BABY WALKER

I PACKING LIST

Please check to make sure that all of the following parts listed are included in the box when opened. If there are any missing parts, please contact Dream On Me before using the product.

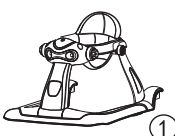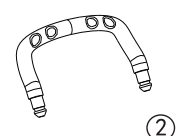Walker body 1 pc 	Handle bar 1 pc 	Front wheel 2 pcs 	Rear wheel 2 pcs 
Anti-sliding bar 6 pcs 	Rear wheel knob 2 pcs 	NOTE! The knob as shown in Fig 6 is used for the walk-behind. Please refer to the detailed instructions of function.	


II DRAWING FOR ASSEMBLING

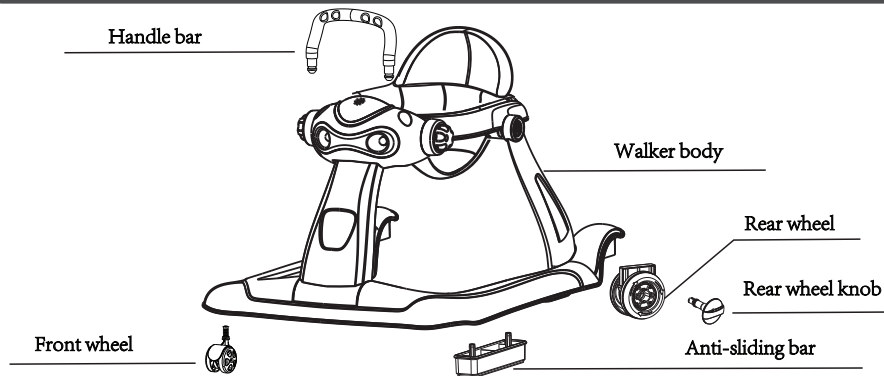

III INSTRUCTION FOR ASSEMBLING (PLEASE ASSEMBLE THE WALKER AS FOLLOWS)

1. Assembling the wheel


- As shown in the Fig 1, place the walker right side up and insert the wheel rod into the hole, pressing it in place.
- Insert the rear wheels into the mounting slots, pressing it in place.
- Insert the anti-sliding bars into the mounting slots, pressing it in place.

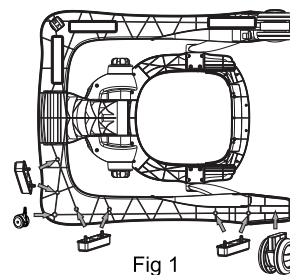



BABY WALKER

2. Assembling the handle bar

Insert the handle bar into the mounting holes of the walker body in place as shown in Fig 2 until it is locked. (Note: The direction of the armrest should be in line with Fig 2.)

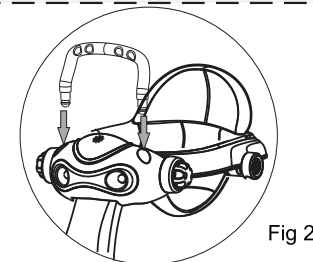



3. Unfolding the frame

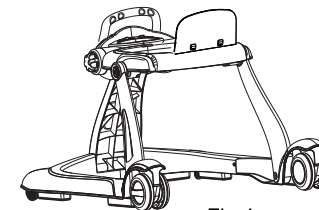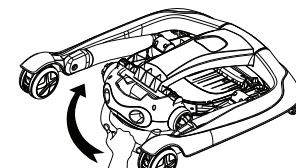

Turn the walker body over. Lift and unfold the walker body by pulling up the handle. Rotate it to the position as shown in Fig 4 until you hear a "click", which means that the walker has locked into place. Please check and make sure that the walker locks into position before use.

4. Unfolding the backrest


As shown in Fig 5, lift up and pull back the backrest until it "clicks" into position.

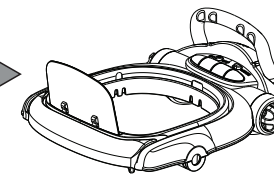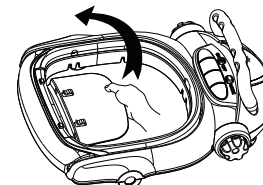

IV INSTRUCTION FOR USE

1. Function introduction


- Power switch.
- Function keys: touch the key to switch games, children songs, little pianist, etc.
- The music key: Press them to light up and play music.

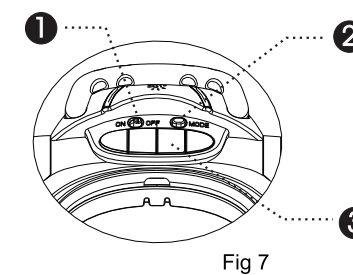

BABY WALKER

2. Adjusting seat cushion height



As shown in Fig 8, change the length of the ribbon in front of the cushion to adjust its height.

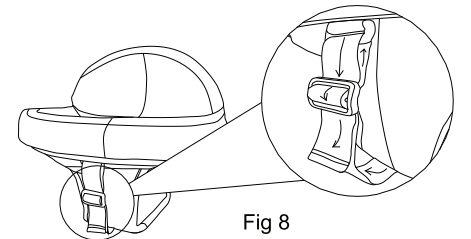

3. Function switching



• Switch to walk-behind function:

As shown in Fig 9, wiggle the lock buckle as shown by the arrow and lift it up outward to remove the seat ring. Next, remove the cushion to allow the walker to be used in its walk-behind function by having your baby can walk holding the handle bar.

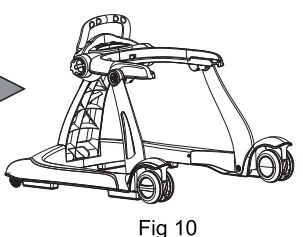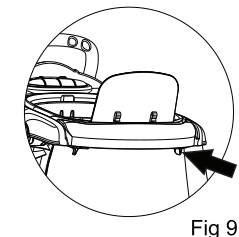


• Switch to walker function:

As shown in Fig 11, insert the seat ring into its locking holes on the frame and press it down as the arrow shown in Fig 12 until they "click" into position and are locked tightly.

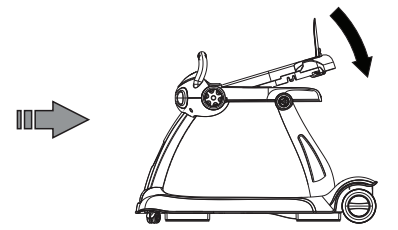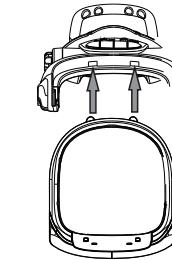

4. Instruction for the rear wheel knob (For walk-behind model only)

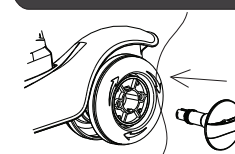

Insert the rear wheel knob into the mounting hole of the rear wheel until it is locked tightly. Turn the knob tight or loose to control the walk speed. The rear wheel knob needs to be removed when the product is switched back into the walker model. Turn the knob counter-clockwise to loosen and pull off.



1532, S. Washington Avenue
Piscataway, NJ 08854
E-mail: info@dreamonme.com

www.dreamonme.com

Follow us on



@dreamonmeinc



@dreamonmeinc

to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.



DOM
FAMILY

