

# INSTRUCTION MANUAL

To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims must only be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from direct sunlight.

Clean grip pads regularly, using warm water with household soap or mild detergent to maintain stopping performance.

Do not fold or store the product if it is damp or wet to avoid mold or mildew occurring. Always store the product in a well ventilated area.

Check parts regularly for tightness of screws, nuts and other fasteners, tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

If the wheels squeak use a silicon based spray ensuring it penetrates the wheel and axle assembly.


## ⚠ SAFETY WARNINGS

⚠ DO NOT MIX OLD AND NEW BATTERIES

⚠ DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

⚠ BATTERY SIZE:  X 2

⚠ ABOVE 6 MONTHS OLD THE CHILD IS SUITABLE.

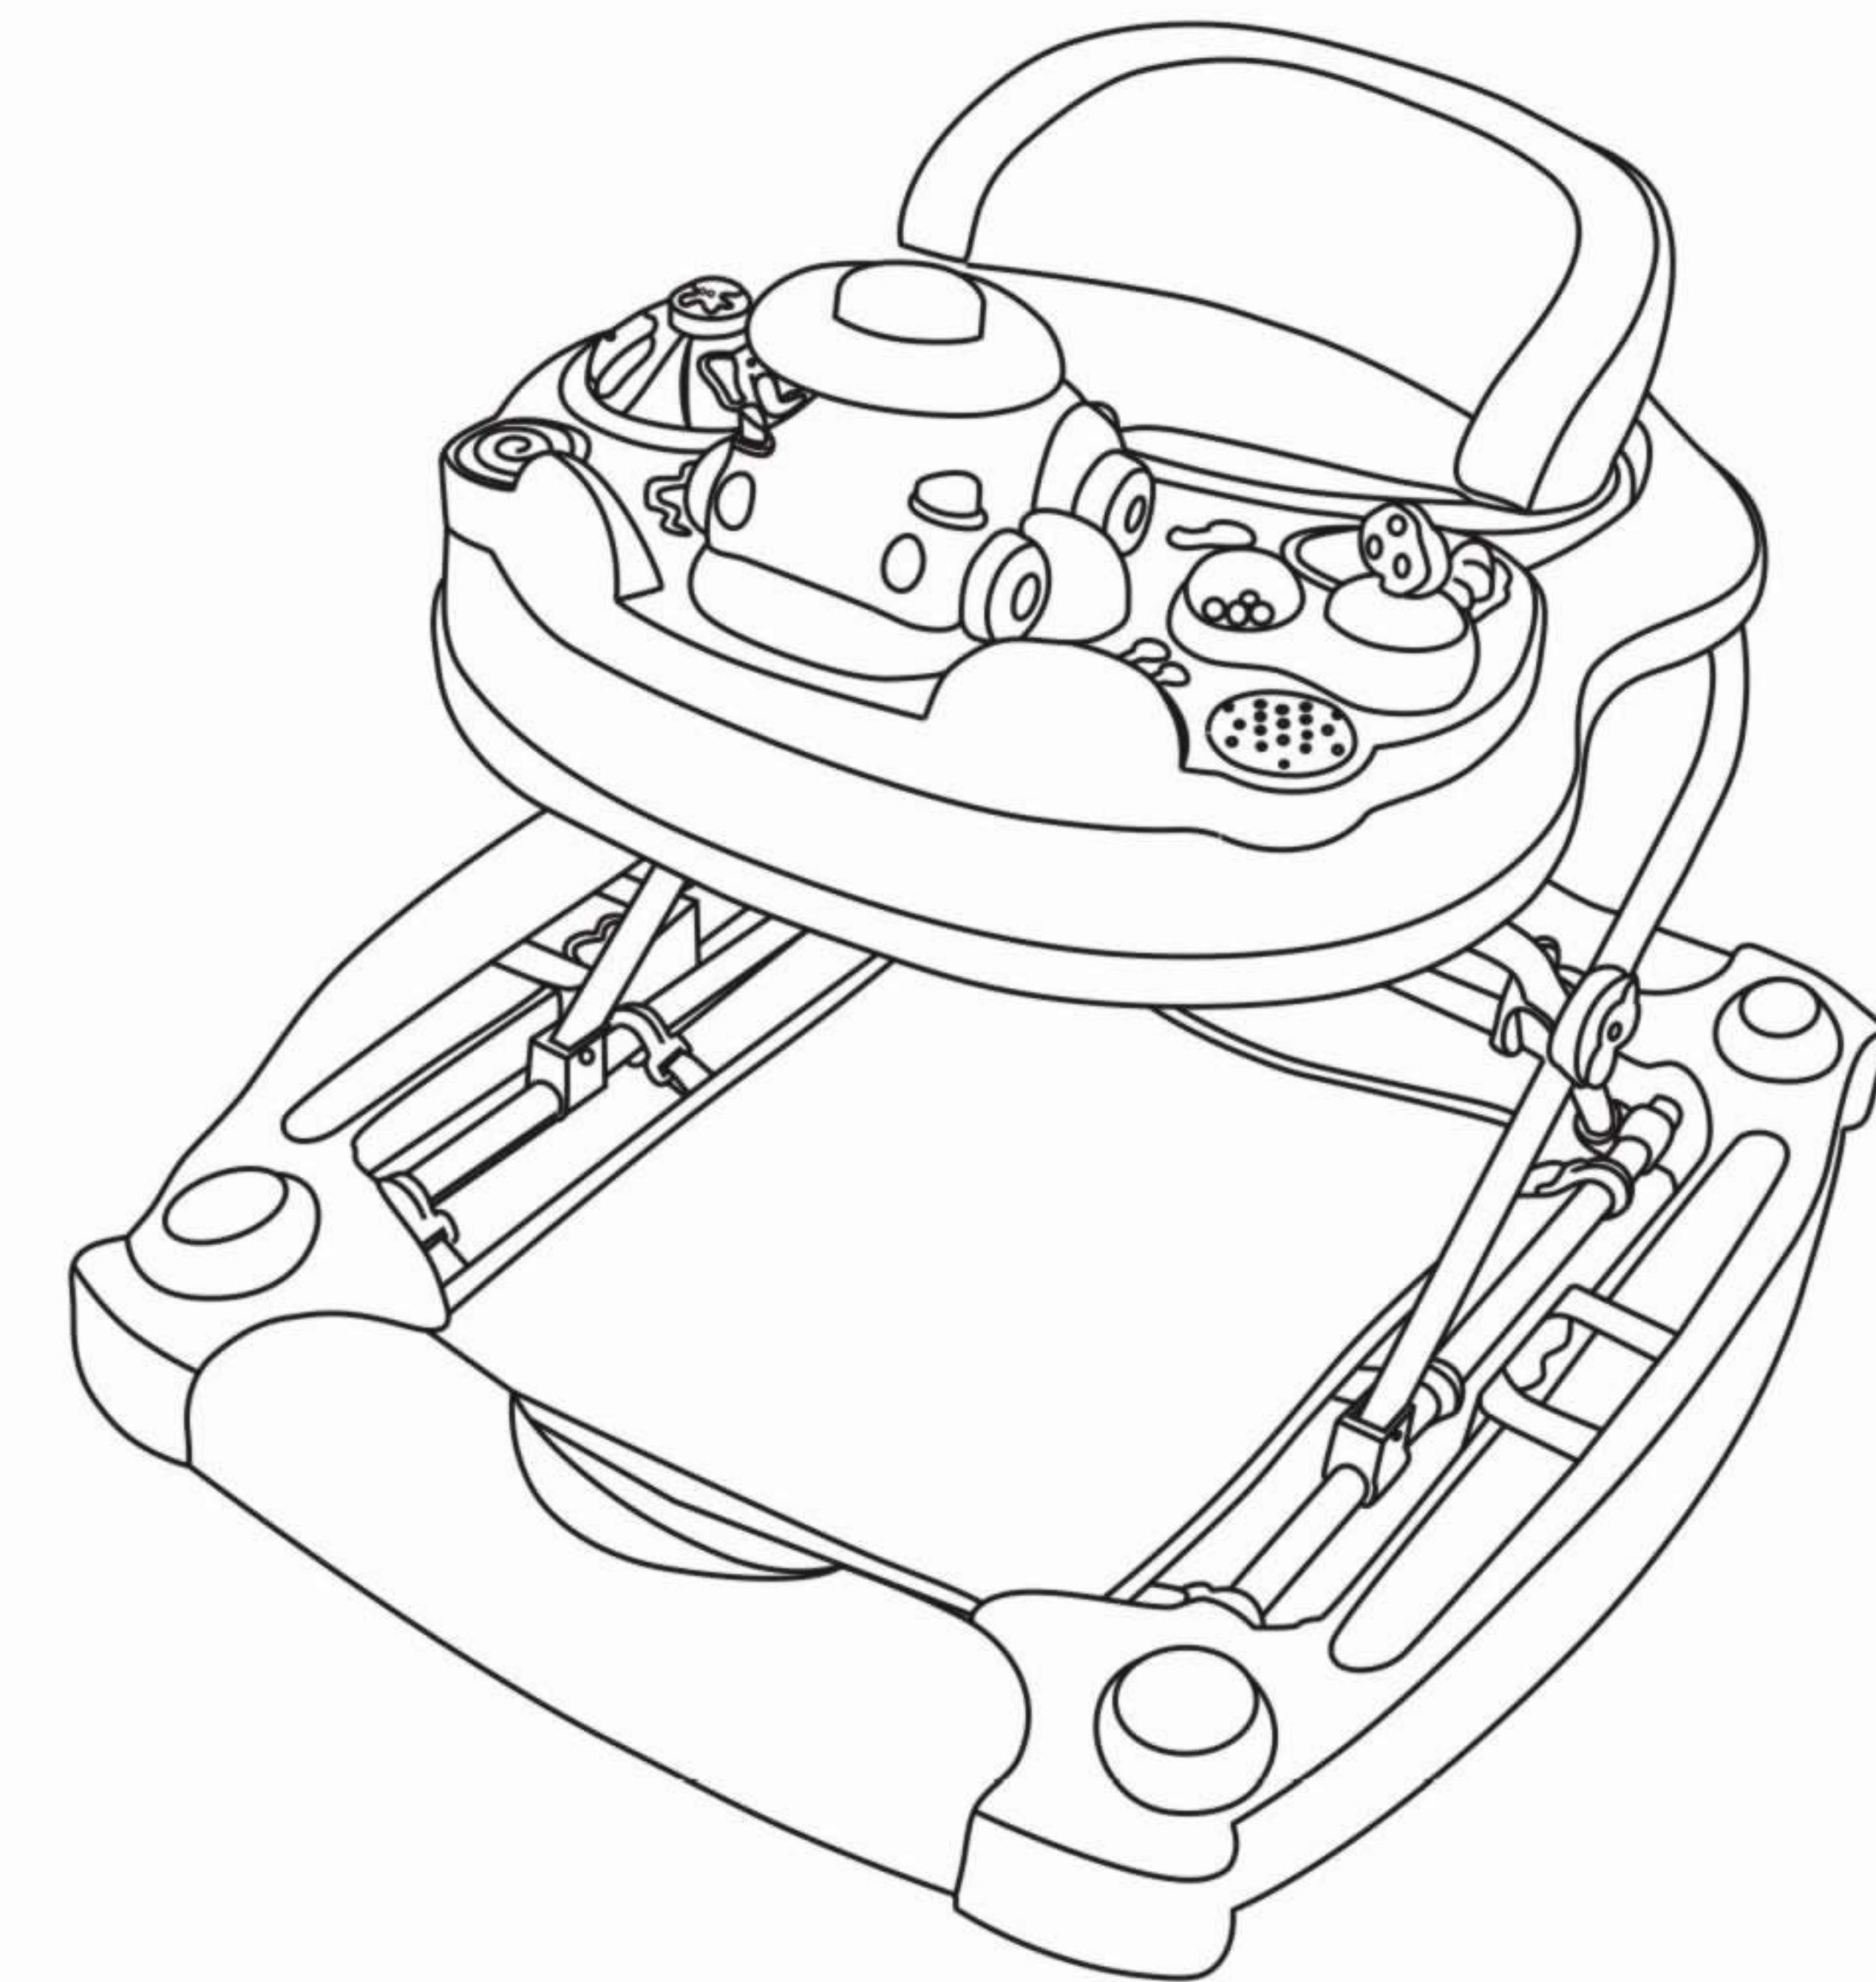

baby walker  
Item No.:#505

KEEP INSTRUCTIONS FOR FUTURE REFERENCE

Scan the QR code to register your product  
<https://dreamonme.com/customercare/registration/>



Dream On Me Inc.  
1532 S Washington Ave  
Piscataway Township  
NJ 08854



**READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THE WALKER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.**

## **⚠ SAFETY WARNINGS**

**STAIR HAZARD** Avoid serious injury or death. Block stairs/ steps securely before using the walker.

- Do not use the walker if it is damaged or broken.
- Do not use walker until baby can sit up by itself.
- To prevent injuries, always ensure the child is well clear of any moving parts when folding or unfolding the baby walker.
- Never adjust or carry the walker with the child in it.
- Ensure that the child can touch the floor with both feet, after adjusting the height of the walker.
- Double check assembly before using the baby walker.
- To avoid burns, ensure all electrical cords, heaters, barbeques, fireplaces and other hot objects are guarded or out of reach.
- Use only on flat surfaces free of objects that could cause walker to tip over.
- Never leave your child unattended, always keep child in view whilst in walker.
- Clean grip pads regularly to maintain stopping performance.
- Do not allow children to stand on the seat.
- The baby walker should not be used by children who can walk unaided.
- The weight of the child should be less than 13kg and the height should be 81cm, or less.
- Discontinue use of the walker should any part become damaged or broken.
- Do not use accessories other than those supplied or approved by Britax.
- Do not store outdoors.
- Do not leave your child exposed to the sun.
- If used on carpets, the safety grip pads may reduce the walker speed.
- This product is not intended for commercial use.


### **Assembly instructions**

#### **To open the walker**

1. Open the walker by raising the tray to the highest position. The secondary lock will engage automatically. Push the primary lock to a closed position (see fig 8b) to secure the mechanism.

**Fig.1.**

**Fig. 1**

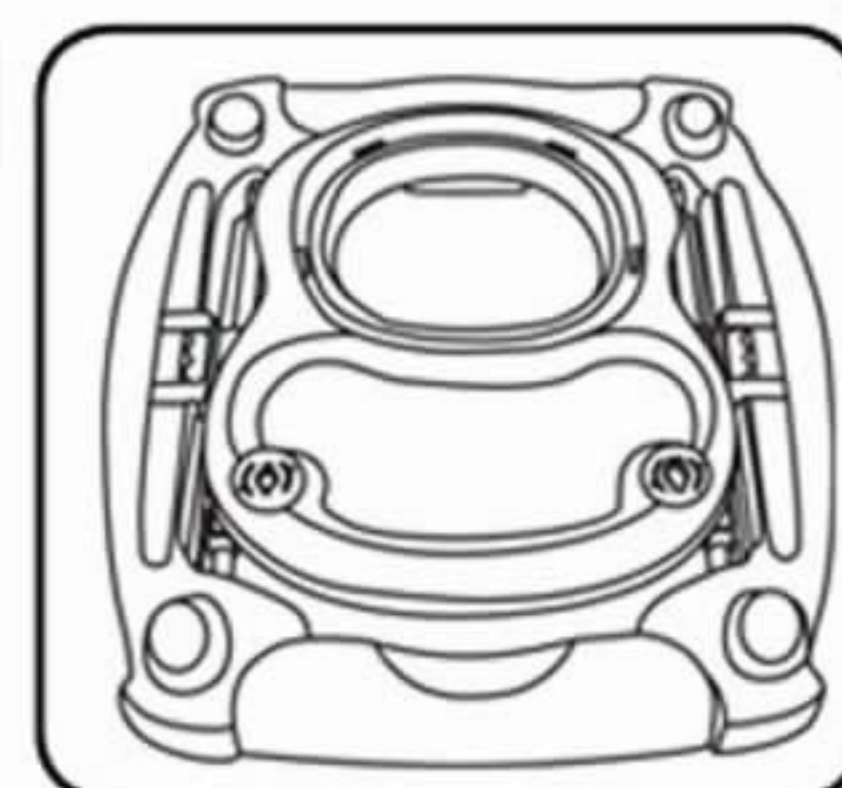


#### **To attach the rear wheels**

2. Insert the rear wheel into the moulded socket in the direction indicated by the arrow. Then push up firmly until it clicks into place and attaches.

**Fig.2.**

**Fig. 2**

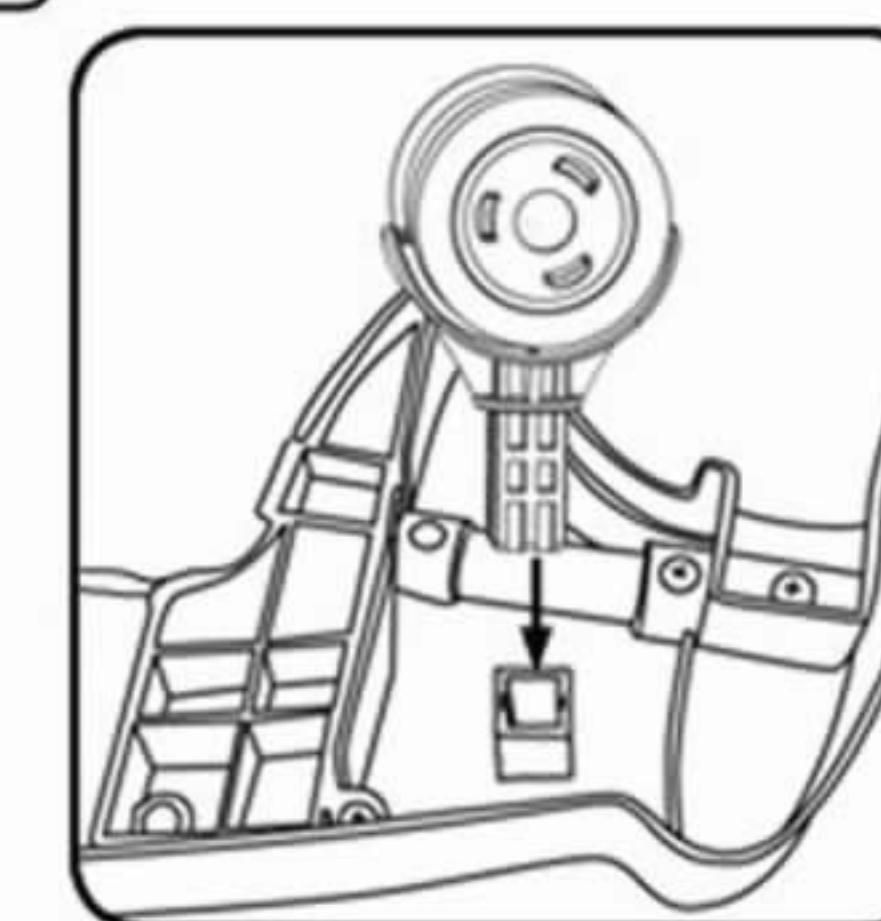


#### **To attach the front wheels**

3. Insert the castor wheel into the moulded socket in the direction indicated by the arrow. Then push up firmly until it clicks into place and attaches.

**Fig.3.**

**Fig. 3**

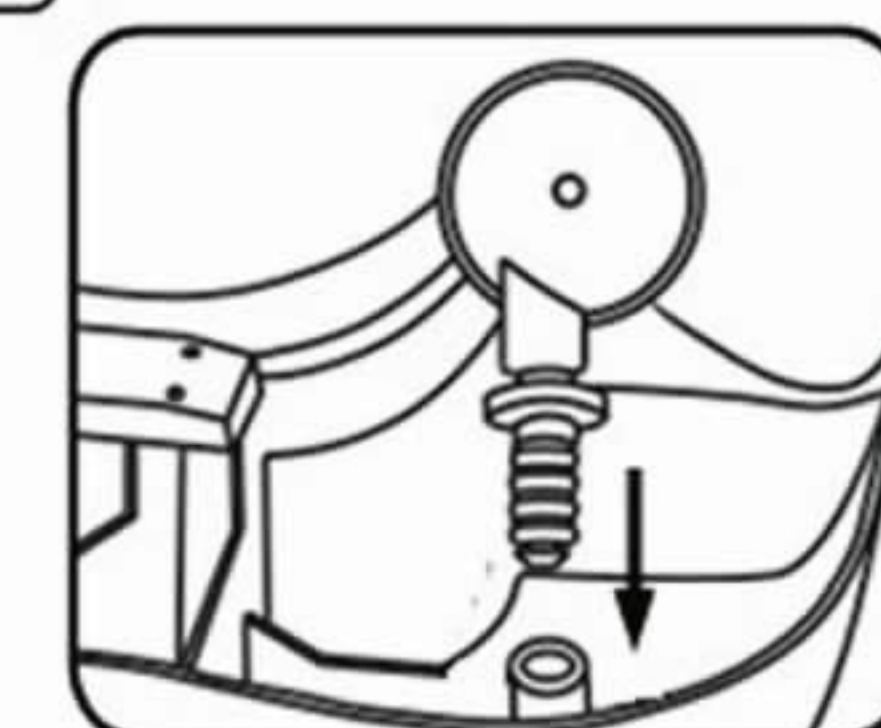


#### **Fitting the seat unit**

4. Insert seat-chip into top tray's trough.

**Fig.4a.**

**Fig. 4a**

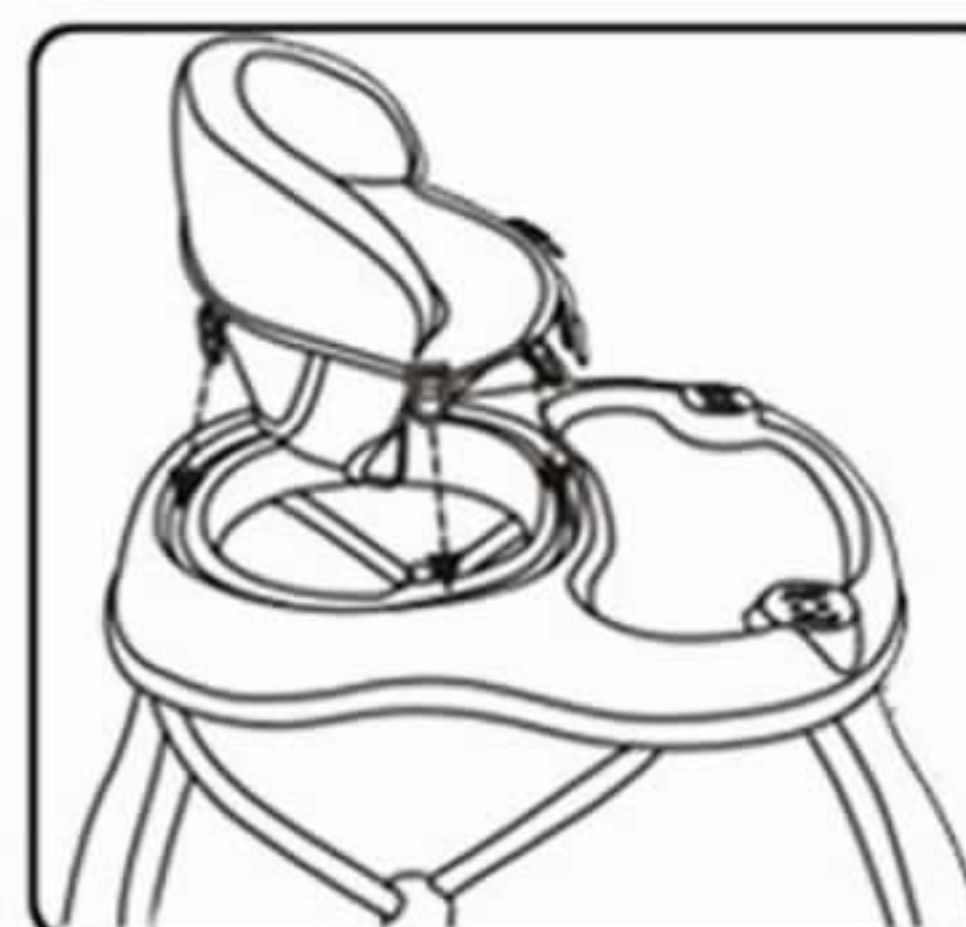

5. Pull down the chip and turn 90°, Please make sure the chip is in position.

**Fig. 4b.**

**Fig. 4b**




#### **Attaching the toy tray**

6. 2XAA size Alkaline batteries are needed for the toy tray (not included). Put batteries into the toy tray.

**Fig.5a.**

**Fig.5a**

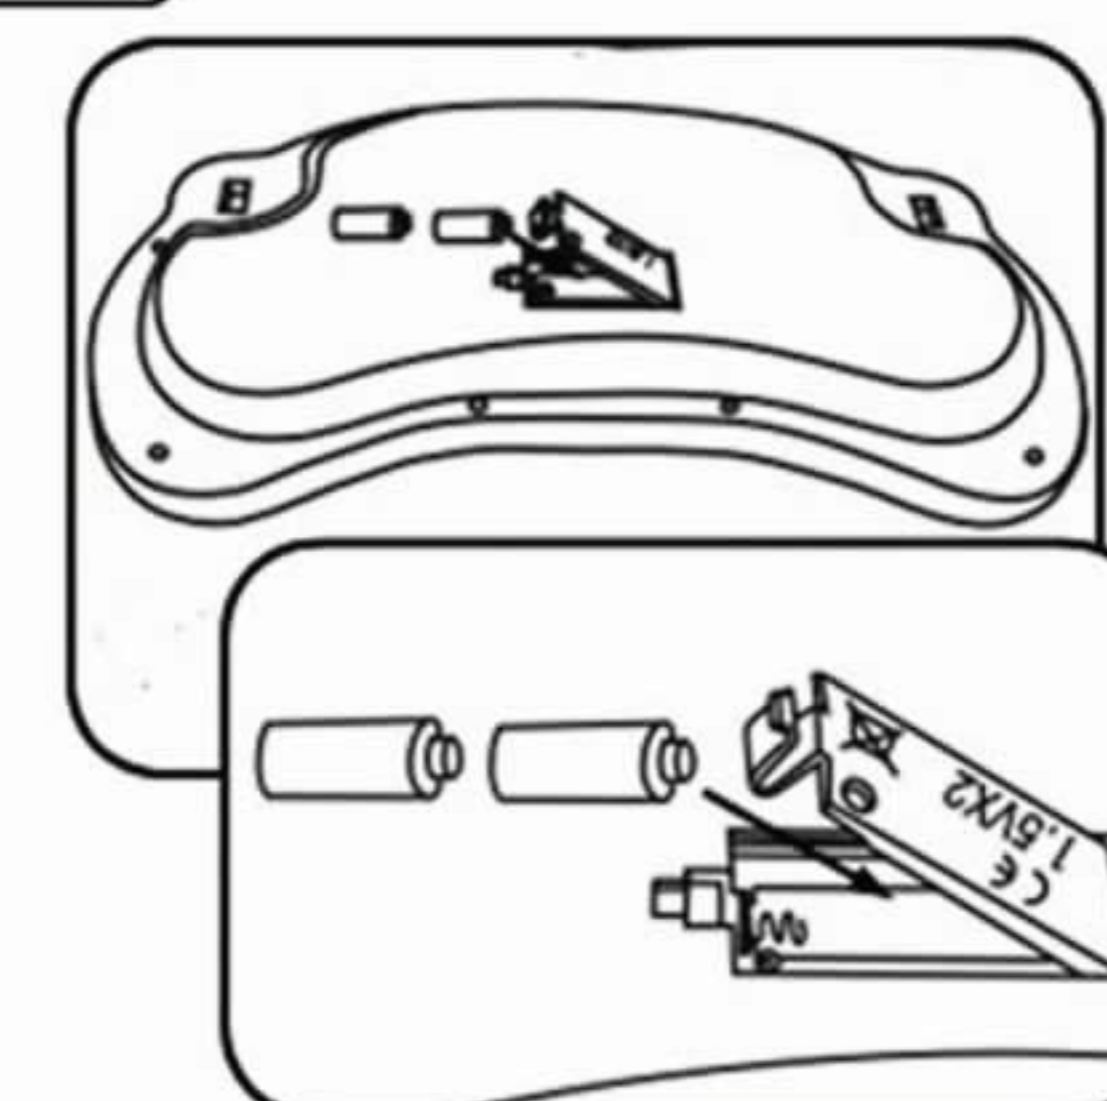




7. Unfold the walker and place the toy tray into position. Push the locking keys located on the underside of the walker tray up and turn around to secure the toy tray to the walker.

Fig.5b.

Fig.5b

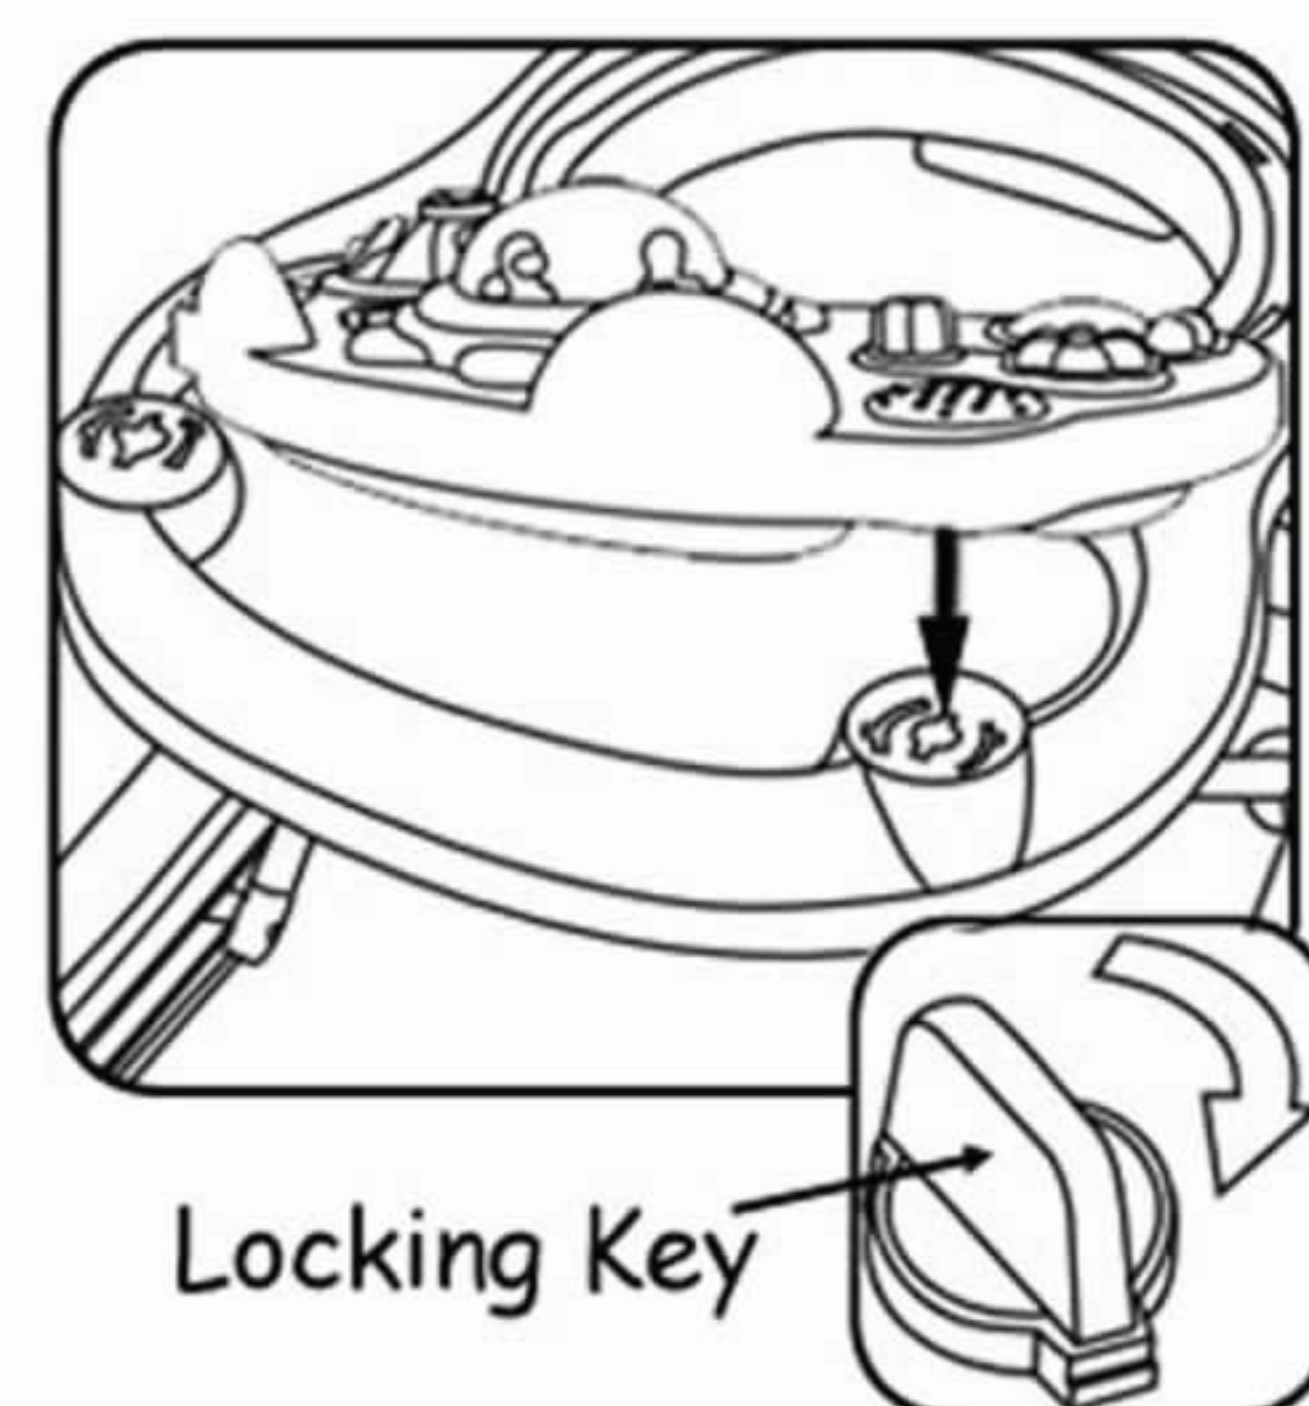

### Done tray rocker

8. Push bottom done and ture side ward in 90 degree, then release bottom. Please make sure the fuction is in position.

Fig.6a. Fig.6b.

Fig.6a

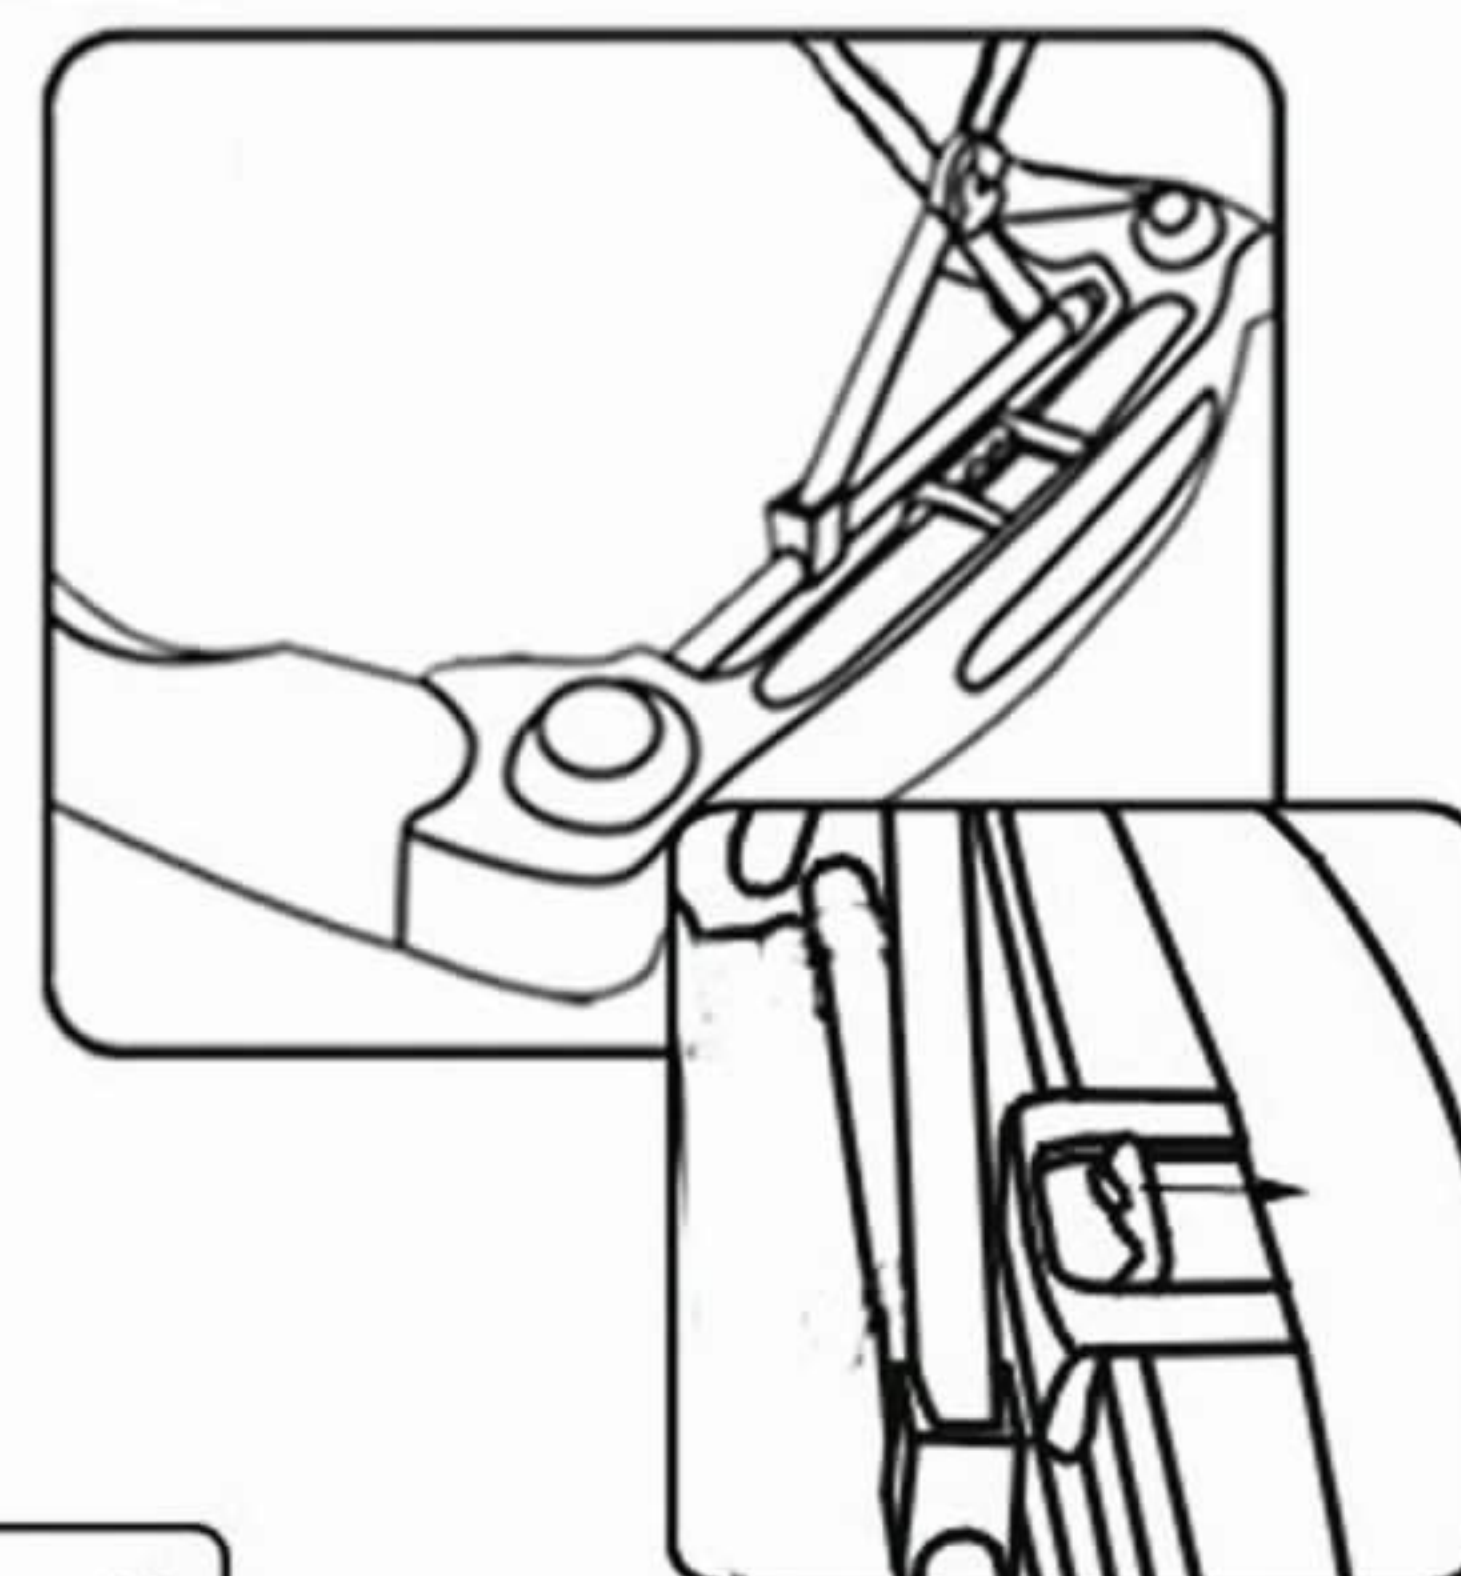


Fig. 6b



Fig. 7



10. Hang the footrest on the bottom tray.

Fig. 7.

### To adjust the height of the walker.

11. The locking mechanism is located on the underside of the top tray. Push the primary lock forward. Push the secondary lock in and select the desired height for the walker and then release the secondary lock. Pull the primary lock back towards you to secure the walker into the new height. To close the walker do not allow the mechanism to close into a notch but to slide shut together in a downward motion.

Fig.8a. Fig.8b.

Fig.8a


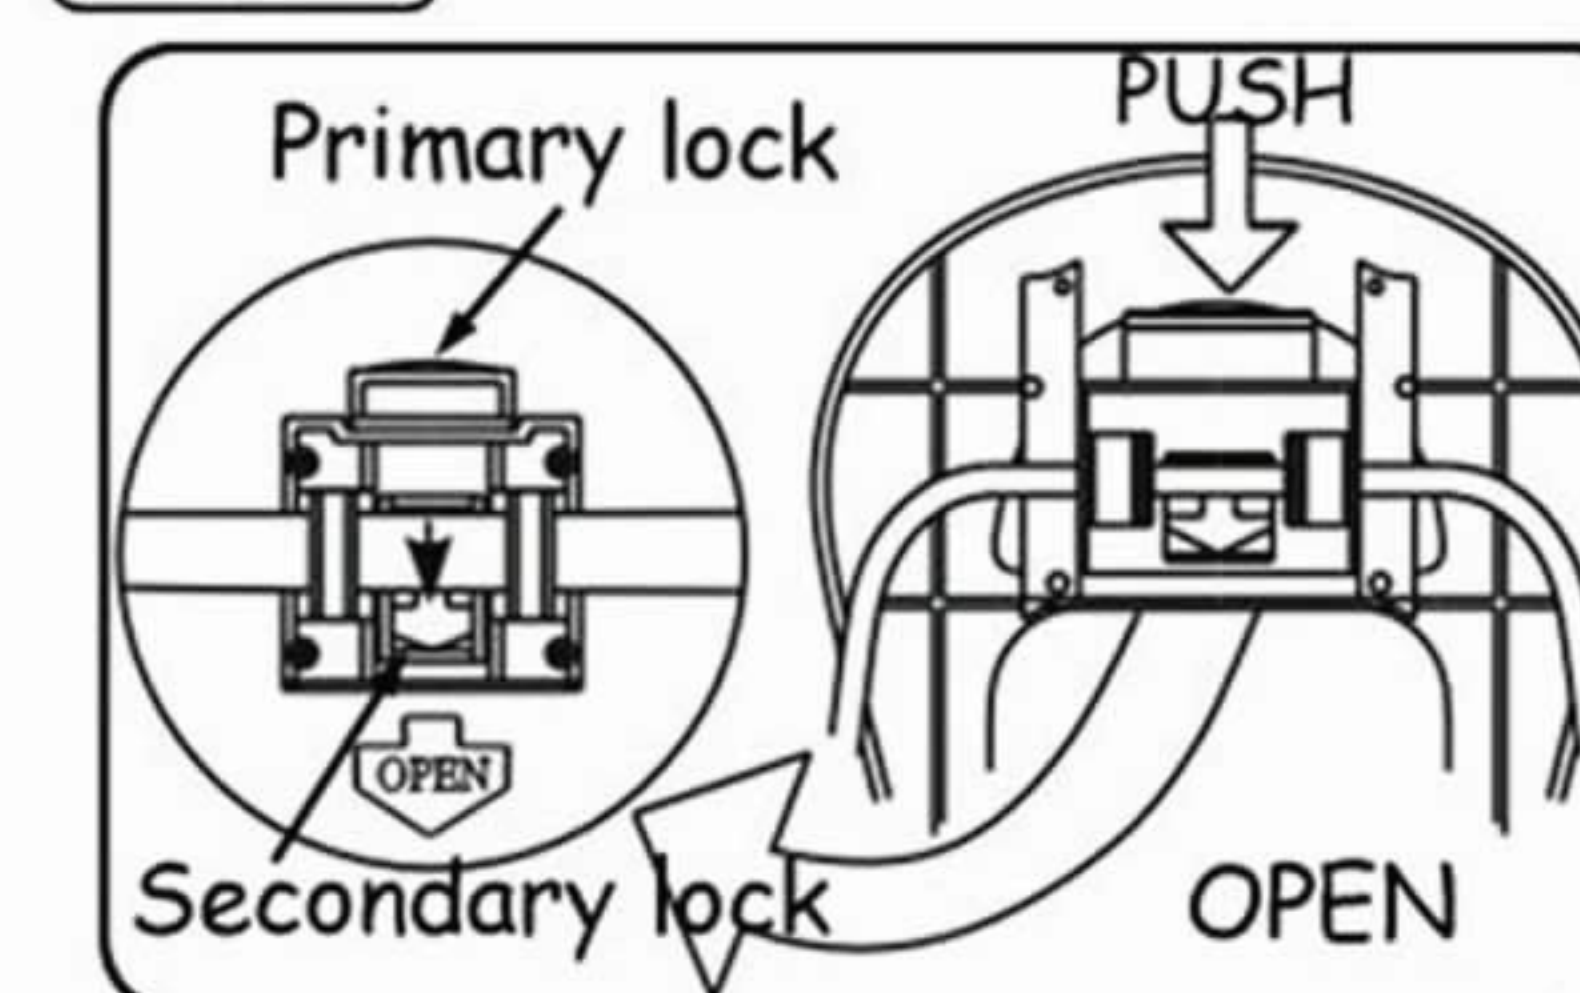


Fig. 8b





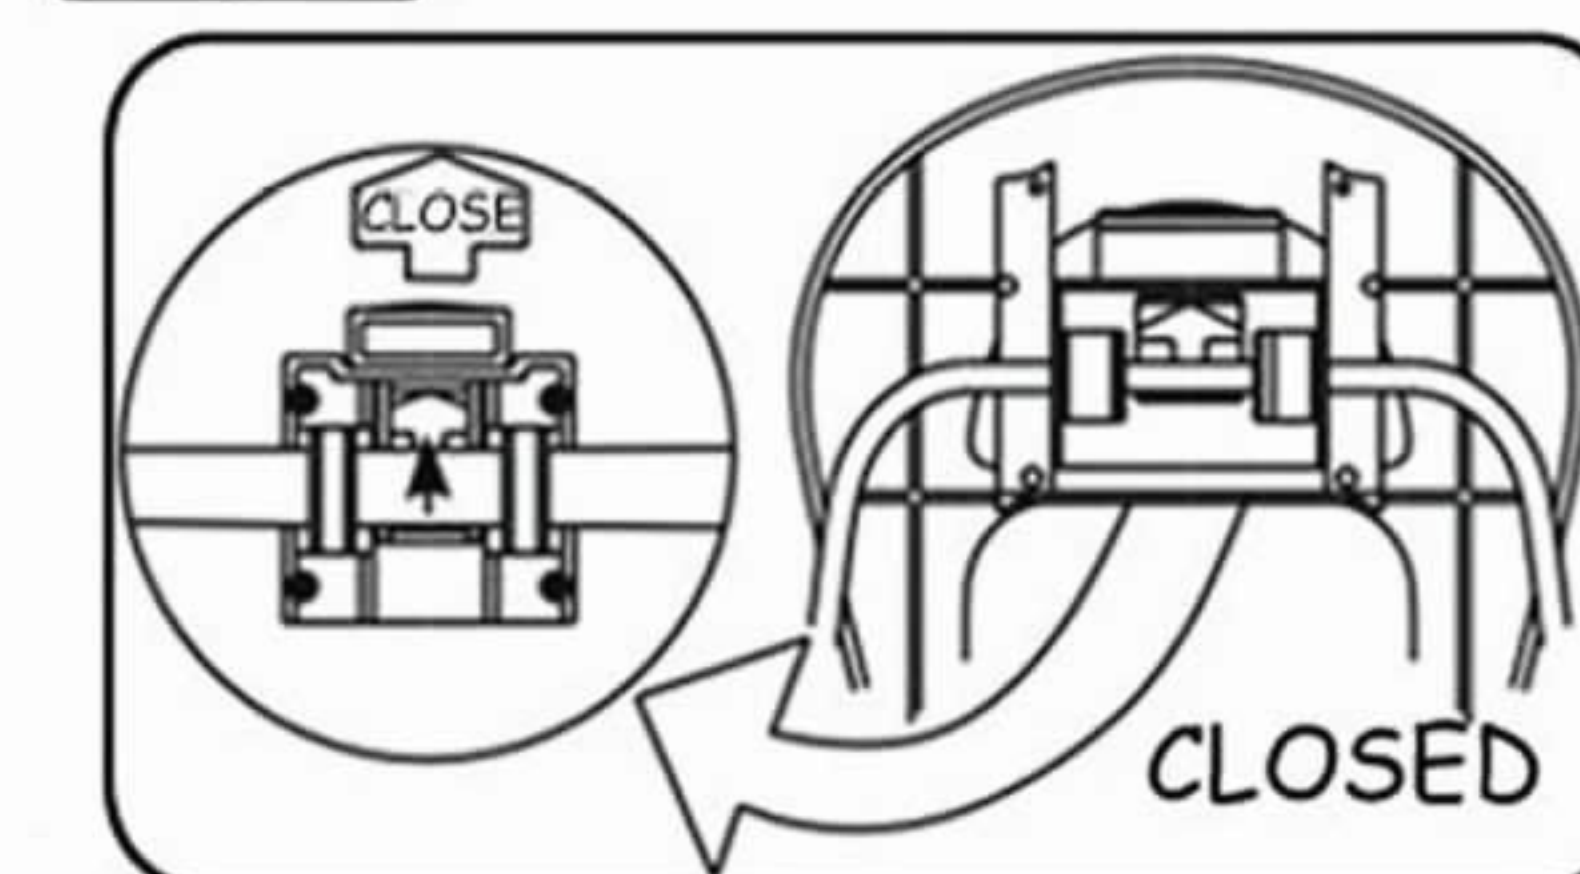


1532, S. Washington Avenue  
Piscataway, NJ 08854  
E-mail: [info@dreamonme.com](mailto:info@dreamonme.com)

[www.dreamonme.com](http://www.dreamonme.com)

Follow us on



@dreamonmeinc

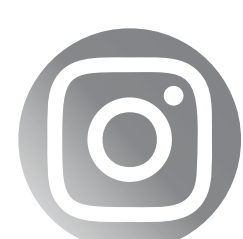

@dreamonmeinc

to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.



DOM  
FAMILY



slumber baby

sweetpea baby

évolur  
evolving with your baby