

INSTRUCTION MANUAL

Item NO. : #411 Baby Walker



Dream On Me Inc.
1532 S Washington Ave
Piscataway TWP NJ 08854
TEL: 732-752-7220
Email: info@dreamonme.com
www.dreamonme.com

Scan the QR code to register your product
<https://dreamonme.com/customer-care/registration/>



KEEP INSTRUCTIONS FOR FUTURE REFERENCE

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THE WALKER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

⚠ SAFETY WARNINGS

STAIR HAZARD Avoid serious injury or death. Block stairs/ steps securely before using the walker.

- Do not use walker until baby can sit up by itself.
- To prevent injuries, always ensure the child is well clear of any moving parts when folding or unfolding the baby walker.
- Never adjust or carry the walker with the child in it.
- Ensure that the child can touch the floor with both feet, after adjusting the height of the walker.
- Double check assembly before using the baby walker.
- To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc.
- Use only on flat surfaces free of objects that could cause walker to tip over.
- Never leave your child unattended, always keep child in view whilst in walker.
- Clean grip pads regularly to maintain stopping performance.
- Do not allow children to stand on the seat.
- The baby walker should not be used by children who can walk unaided.
- The weight of the child should be less than 13kg and the height should be 81cm, or less.
- Discontinue use of the walker should any part become damaged or broken.
- Do not use accessories other than those supplied or approved by Dream On Me.
- Do not store outdoors.
- Do not leave your child exposed to the sun.
- If used on carpets, the safety grip pads may reduce the walker speed.
- This product is not intended for commercial use.


5. CLOSE/LOWER AND ADJUST WALKER HEIGHT

NOTE: The child must be removed from the walker before releasing the lock to lower the walker, to avoid injury. Be sure to follow these instructions carefully to avoid the top tray falling down onto your hand.

- Remove the child from the walker.
- There are two safety adjusting locks under the tray.
- First press the RED lever and while holding in, at the same time press the white button in. Hold together and slowly lower the walker down to folded position.
- Before completely lowering down, take care of your hand position and make sure you have enough space.

To adjust the seat height from highest to lowest of three positions:

- Remove the child from the walker
- Support the upper tray with one hand. Activate both safety locks and the tray will begin to lower. Let go of both locks and allow the tray to SLOWLY lock into a lower position. Press down lightly on the upper tray to confirm it is locked into place.

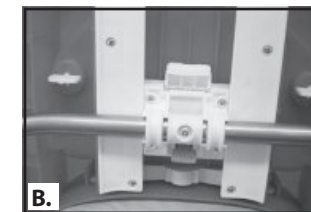

4. ACTIVITY CENTRE TRAY ASSEMBLY continued...

WARNING: Non-rechargeable batteries are not to be recharged. Adult supervision is required when charging rechargeable batteries. Used and new or different types of batteries should not be mixed. Remove the batteries as soon as they become exhausted. Supply terminals for batteries are not to be short circuited.

- A.** Position the activity tray on top of the upper tray as shown and lay it down flat.
- B.** Hold the activity down with one hand. Then from under the upper tray, push the white engagement pins up into the activity tray cavities and turn to the right to lock into place.
- C.** To remove, turn the pins and remove activity tray.



CARE AND MAINTENANCE

To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims must only be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from direct sunlight.

Clean grip pads regularly, using warm water with household soap or mild detergent to maintain stopping performance.

Do not fold or store the product if it is damp or wet to avoid mold or mildew occurring. Always store the product in a well ventilated area.

Check parts regularly for tightness of screws, nuts and other fasteners, tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only parts and accessories approved by Dream On Me.

If the wheels squeak use a silicon based spray ensuring it penetrates the wheel and axle assembly.

PARTS LIST


- A.** 1 x Walker Frame
- B.** 1 x Seat
- C.** 2 x Swivel Wheels
- D.** 1 x Activity Centre Tray



1. ASSEMBLY - WHEELS

- A.** Turn walker upside down on top of the carton. Insert the end of the wheel posts all the way into the holes at the corner of the walker base using moderate force.

NOTE: Clean grip pads regularly, using warm water with a household soap or mild detergent to maintain stopping performance.

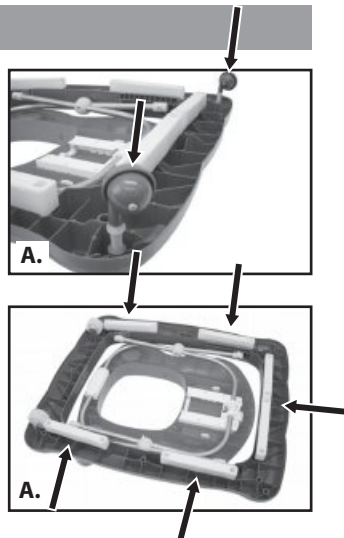


2. OPEN/RAISE WALKER SEAT

- A.** Turn walker right side up.
- B.** Position one hand underneath the top edge of the tray, and the other hand on the top of the outer base frame.
- C.** There are three height adjusting positions. Lift the tray slowly while holding down the base until you hear the tray lock into the first/lowest position. (If raised past the first/lowest position then see step 7D/E to lower it.)



3. SEAT ASSEMBLY

- A.** The seat needs to be attached to the frame. There are six attachment points at the rear and four at the front.
- B.** Position the seat into the upper tray cavity.
- C.** Begin to attach the seat from the rear by locating the plastic pins over the engagement holes. One at a time, slide each pin into the holes and lock into position. Make sure all six pins are engaged. Pull up on the seat to confirm. Repeat steps if not locked into upper tray.
- D.** Attach the seat to the front section. Locate the plastic pins into the holes and push down until locked. Pull down by the fabric to lock the pins if a little tight. Make sure all four plastic pins are engaged.

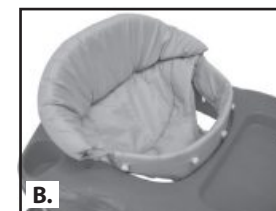

4. ACTIVITY CENTRE TRAY ASSEMBLY

NOTE: You will need 2 x AA batteries for the lights and sounds. Batteries are not included.

- A.** Turn over the activity tray, undo the battery cover screw and remove the cover. Fit 2 x AA batteries in the direction shown. (Check that the batteries are fitted correctly by pushing one of the coloured buttons.) Replace cover and secure with screw.





1532, S. Washington Avenue
Piscataway, NJ 08854
E-mail: info@dreamonme.com

www.dreamonme.com

Follow us on



[@dreamonmeinc](https://www.facebook.com/dreamonmeinc)



[@dreamonmeinc](https://www.instagram.com/dreamonmeinc)

to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.



DOM
FAMILY



slumber baby

sweetpea baby

évolur
evolving with your baby