

**⚠ WARNING – STAIR HAZARD**

Avoid serious injury or death, Block stairs/steps securely before using walker, even when using parking brake.

**⚠ WARNING**

 
- **Never leave the child unattended. Always keep child in view while in walker.**
- **Intended for children who can sit unaided, approximately 6 months of age. Not intended for children who can walk by themselves or weight more than 25 lbs or height more than 27.5 inches.**

- 1) Never force mechanisms or moving parts. If you are not sure about what to do, please refer to the instructions.
- 2) Clean plastic and metal parts with a damp cloth or a light detergent. Clean safety rubbers regularly to maintain stopping performance. Do not use solvents, ammonia or petrol.
- 3) Regularly check unit to ensure that no parts are loose or broken.
- 4) Clean the rubber pads regularly to maintain stopping performance.

Dream On Me Inc. 1532 South Washington Ave, Piscataway TWP, NJ 08854  
MADE IN FO SHAN, GUANG DONG, CHINA

# User's Manual

## Baby Walker

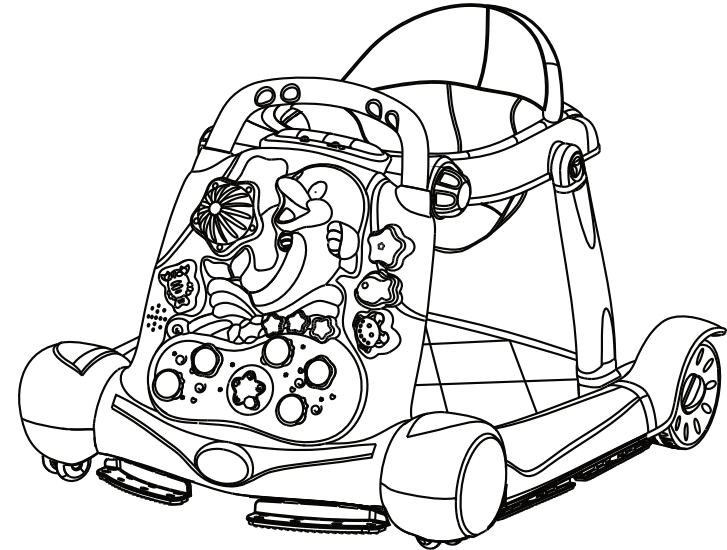

Model: #415

 
 

 


Scan the QR code to register your product  
<https://dreamonme.com/customercare/registration/>




**Read the instructions carefully before use and keep them for future reference. The child may get hurt if you do not follow these instructions.**

 Thank you for choosing Dream On Me and congratulations on joining The DOM Family, a family that has been transforming lives for 30 years! We appreciate your feedback and wish you the very best in the coming years with your new addition. If you have any questions or concerns please don't hesitate to reach out and a trusted DOM representative will assist you. Thank you again for entrusting us to supply you with the safest, functional and affordable baby products and accessories. Feel free to follow us on Facebook and Instagram for further opportunities and offers.
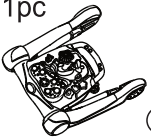
## I PACKING LIST

Walker body 1pc  ①	Foot fabric 1pc  ②	Wheel 2pcs  ③	Animal keys 4pcs  ④
Anti-sliding bar 6 pcs  ⑤	3.5×12 large flattened tail-milled self-tapping screw (8pcs)  ⑥		


## II DRAWING FOR ASSEMBLING

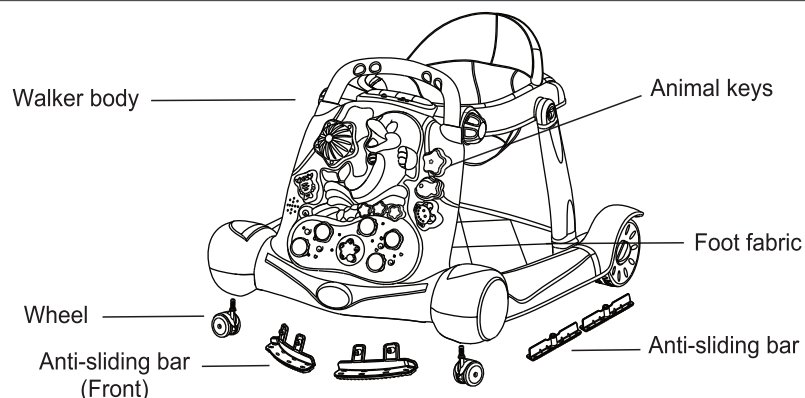

## III INSTRUCTION FOR ASSEMBLING (PLEASE ASSEMBLE THE WALKER AS FOLLOWS)

## 1. Assembling the wheel

 
As shown in Fig 1, place walkers upward on a surface, insert the wheel rod into the hole, and push it into position.

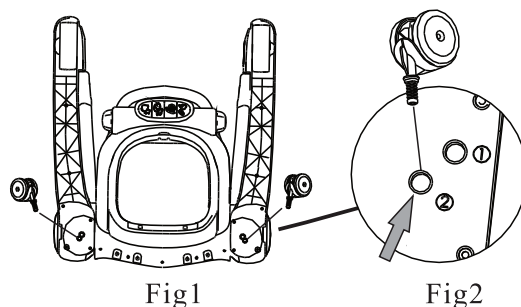

## ! WARNING

- Prevent access to stairs, steps and uneven surfaces.
- The child will be able to reach further and move faster than before when in the baby walker.
- Guard all fires, heating, and cooking appliances.
- Remove hot liquids, electrical flexes, and other potential hazards from reach.
- Prevent collision with glass in doors, windows and furniture.
- Do not use the baby walker if any components are broken or missing.
- This baby walker should be used only for short periods of time (e.g. 20min).
- Do not use replacement parts other than those approved and provided by Dream On Me.
- Never leave child unattended. Always keep child in view while in walker.
- Use only on flat surfaces, free of objects that could cause the walker to tip over.
- To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc.
- Each walker is labeled with a separate stairs warnings visible to the consumer when placing the child in the walker.
- The product must be assembled by an adult.

## Function Introduction

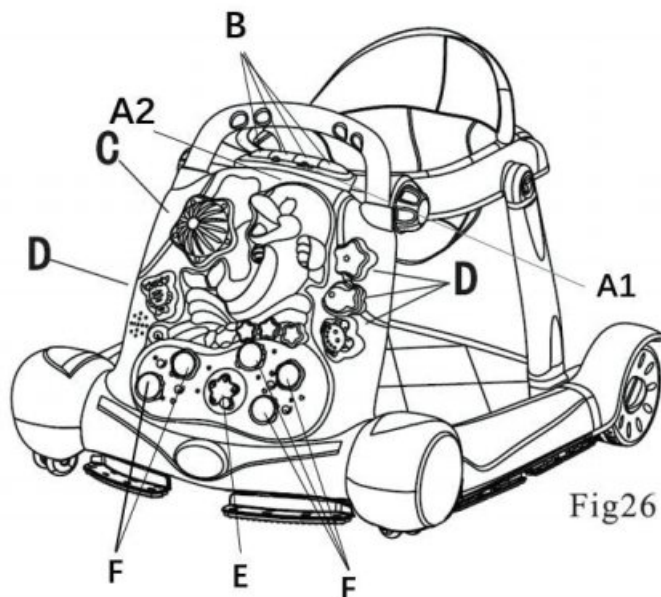

- **A1 - Power Switch Key:** To Turn on and off the power.
- **A2 - Function Mode Switch Key:** The function switch key can switch toys to different modes, such as whack-a-mole, music appreciation, or little pianist.
- **B - Piano Keys:** Pressing different keys will play different piano sounds, which can bring up baby's interest in music and stimulate baby's auditory processing.
- **C - Colorful and Transparent Ball:** When music is playing, the ball will glow rhythmically, stimulating baby's visual processing.
- **D - Animal Toys:** Pressing the corresponding animal key will make the sounds of the animals. The animal keys can be removed and be used as toys.
- **E - The Star Wheel:** The music will be playing upon rotation. The rhythm will increase as the wheel rotates quickly. The rhythm will be normal when wheel rotation stops. This can improve baby's rhythm awareness and control.
- **F - The Wheel Keys:** Pressing one of the keys will make all of the lights flash with chord sounds being played.

## 2. Assembling the anti-sliding bar

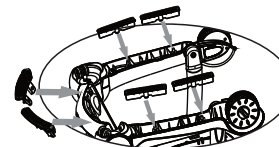


Fig3

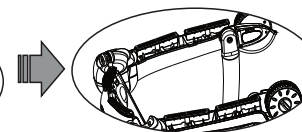


Fig4

As shown in Fig 3, fix the anti-sliding bar onto the bottom board with large flattened tail-milled bolt.

(Note: The direction of the assembled breaking bar must be the same as the perspective drawing shown.)

## 3. Unfolding the frame

As shown in Fig 5, pull up the walker body, lifting the arms, to the state as shown in Fig 6. Pull it back until they "click" into position and are locked tightly.

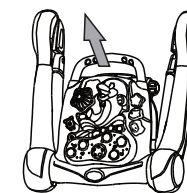


Fig5

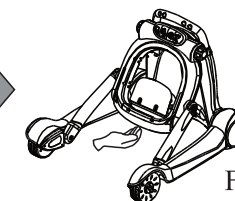


Fig6

## 4. Unfolding the backrest

As shown in Fig 7, lift up and pull the backrest backward with one hand, holding the seat with the other hand until they "click" into position and are buckled.

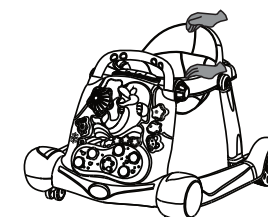


Fig7

## 5. Assembling foot fabric

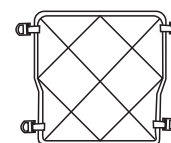


Fig8

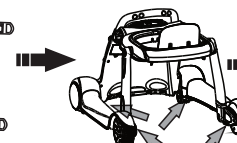


Fig9

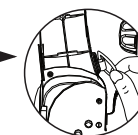


Fig10



Fig11

Place the fabric in the direction shown in Fig 8 to fix the four white angle buckles onto the slots shown in Fig 9. The fabric must be installed properly, as shown in Fig 11.

## 6. Assembling animal keys

As shown in Fig 12, place the animal keys into the corresponding receptacles. The animal keys can be removed and be used as toys.


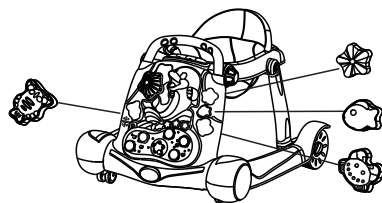


Fig12

## 7. Install the battery

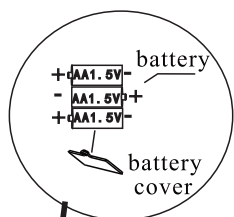

As shown in the Fig 13, take off battery cover by screwing out the self-tapping screws on the cover and put battery into the battery box ( attention to their poles "+" and "-" ), and then put on the cover before fix it with the self-tapping screws. Turn on the power, and there will be music upon pressing the music button.

### Warning!

- The product uses 3 AA 1.5V batteries.
- Do not charge non-rechargeable battery.
- Please take out the battery from the toy before charging.
- Do not mix use different type of batteries or new and old batteries together.
- Ensure the proper and right polarity.
- Please take out the worn-out batteries from the toy.
- Do not shortcut the polarities of the battery.
- It is prohibited to let child play with the battery as toy to avoid danger.

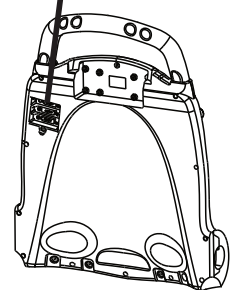


Fig13

## IV INSTRUCTION FOR USE

### 1. Adjusting seat cushion height

As shown in Fig 14, change the length of the ribbon in front of the cushion to adjust its height.

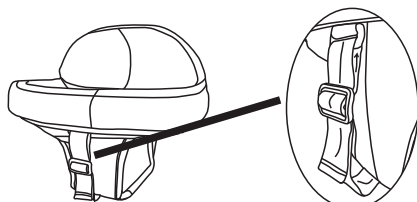


Fig14

Fig15

## 2. Function switching

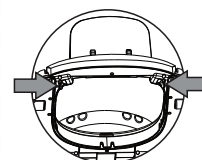


Fig16



Fig17

### From walker to walk-behind:

As shown in Fig 16, wiggle the lock buckle as shown by the arrow and lift it up outward to remove the seat ring. Next, remove the cushion. Now your baby can walk holding the armrest as shown in Fig 17.

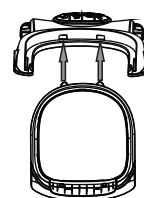


Fig18

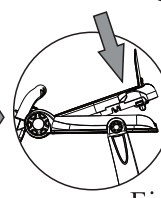


Fig19

### From walk-behind to walker:

As shown in Fig 18, insert the seat ring into its locking holes on the frame and press it down as the arrow shown in Fig 19 until they "click" into position and are locked tightly.

## 3. Folding steps

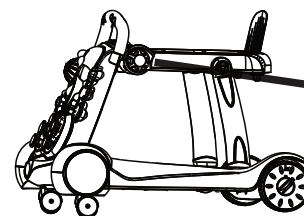


Fig20

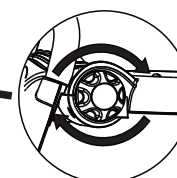


Fig21

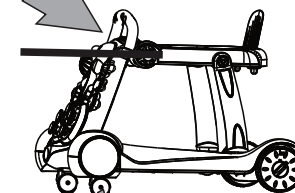


Fig22

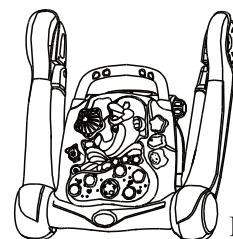


Fig24

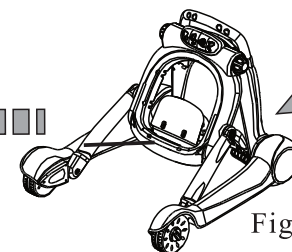


Fig23

Turn the folding knob as shown in Fig 21, and push the walker body as shown in Fig 22. Next, push the seat as shown in Fig 23 before pressing down the surface board to fold the walker (Fig 24.)



1532, S. Washington Avenue  
Piscataway, NJ 08854  
E-mail: [info@dreamonme.com](mailto:info@dreamonme.com)

[www.dreamonme.com](http://www.dreamonme.com)

Follow us on



**@dreamonmeinc**



**@dreamonmeinc**

to get your nursery featured on our social media.

**Enter our monthly giveaway!**

Simply scan the QRcode to register.



**Chat with us!**

For any questions or concerns or feedback.

