



ASSEMBLY INSTRUCTIONS

STYLE NO: 602

Dream On Me Inc.
1532 S Washington Ave
Piscataway Township, NJ 08854
Email: info@dreamonme.com
www.dreamonme.com



Scan the QR code to register your product
<https://dreamonme.com/customercare/registration/>



WARNING

Read all instructions before use of the changing table.
KEEP INSTRUCTIONS FOR FUTURE USE.
Use only the pad provided by manufacture.
Do not use changing table, add-on changing unit, or countered changing pad if it is damaged or broken.
Fail Hazard-To prevent death or serious injury, always keep child within arm's reach.
Never leave your child unattended in this dressing table. To insure the safety of your child, the restraint system must be used.
Check regularly to see that all bolts are tight.
Clean by wiping with damp clean cloth.
DO NOT use abrasives.


REF.	PART NAME	QUANTITY
A	Left head board	1
B	Right head board	1
C	Back rail	1
D	Front rail	1
E	Middle piece	2
F	Front stabilizer bar	1
G	Back stabilizer bar	1
H	Back panel	2
J	Central back bar	1
K	Platform	1
L	Pad	1
DR1	Front panel	3
DR2	Side panel	3
DR3	Side panel	3
DR4	Back panel	3
DR5	Bottom panel	3
DR6	Bottom support panel	3
a	1-1/2" Allen head bolt	16
b	Wood dowel	14
c	2" Allen wrench	1
d	1" Screw	6
e	Knob	6
f	Cam bolts	24
g	Cams	24
h	1-1/2" Self-tapping	3
i	Tip over restraints	1

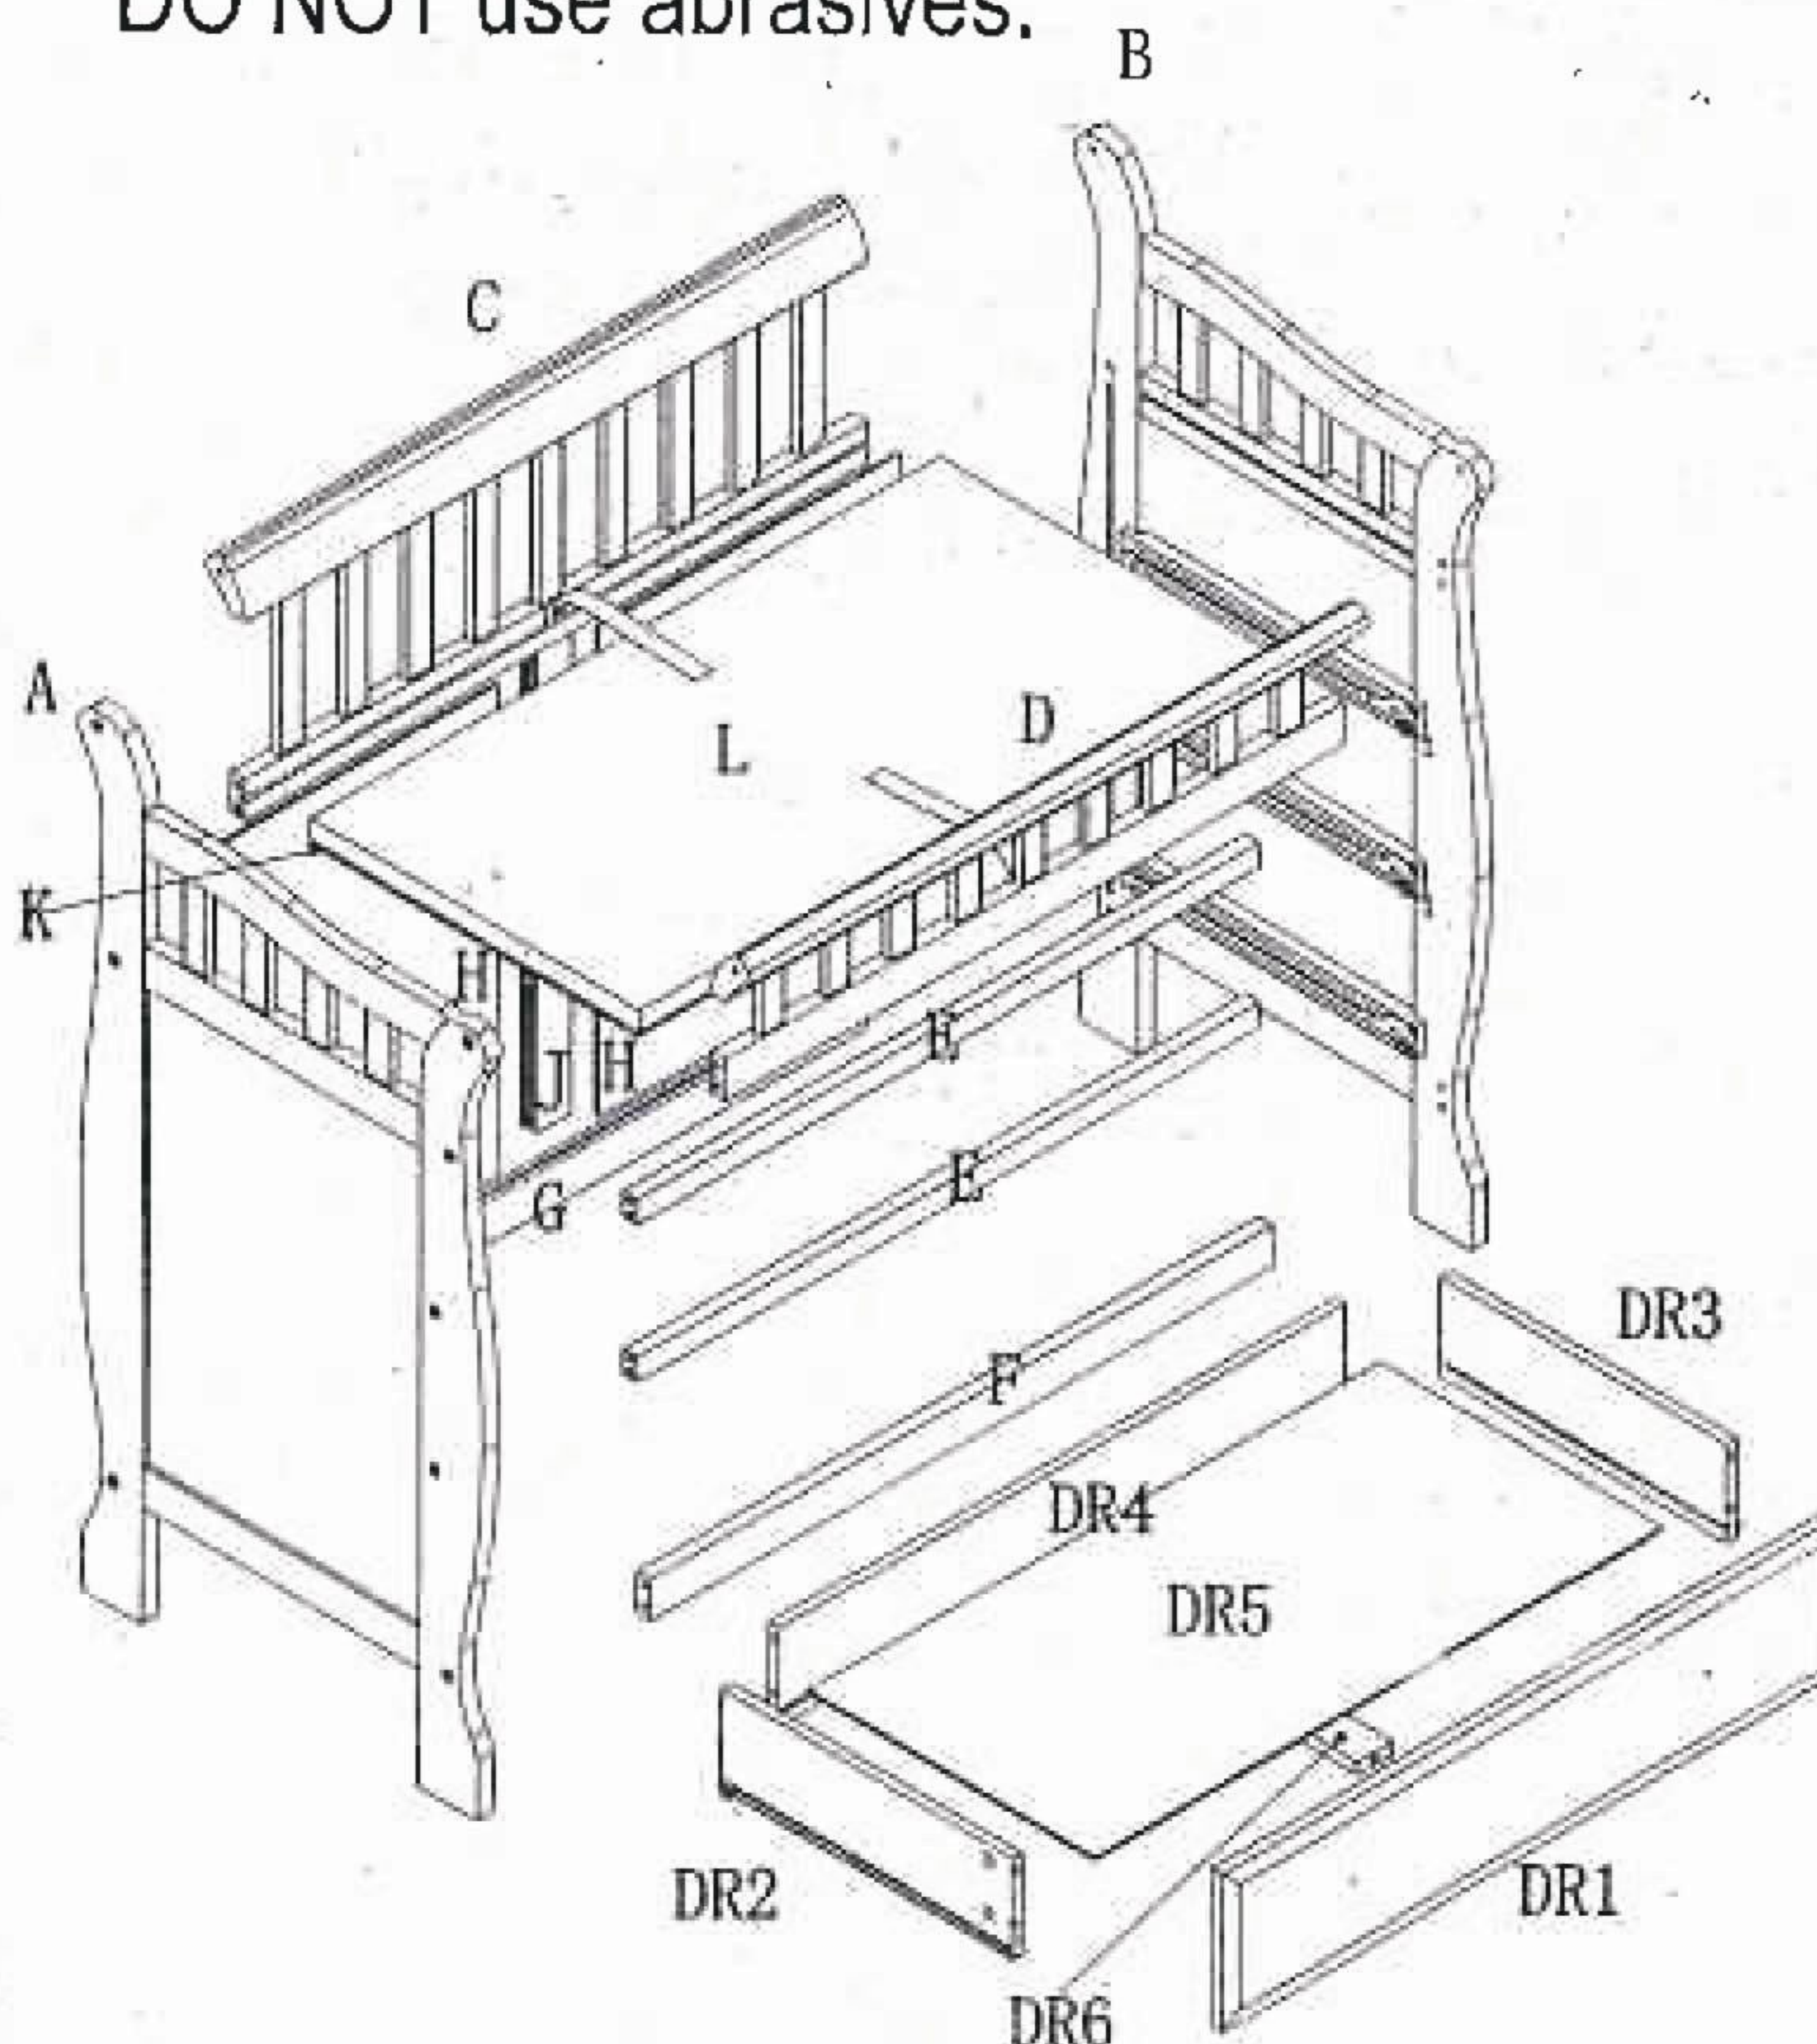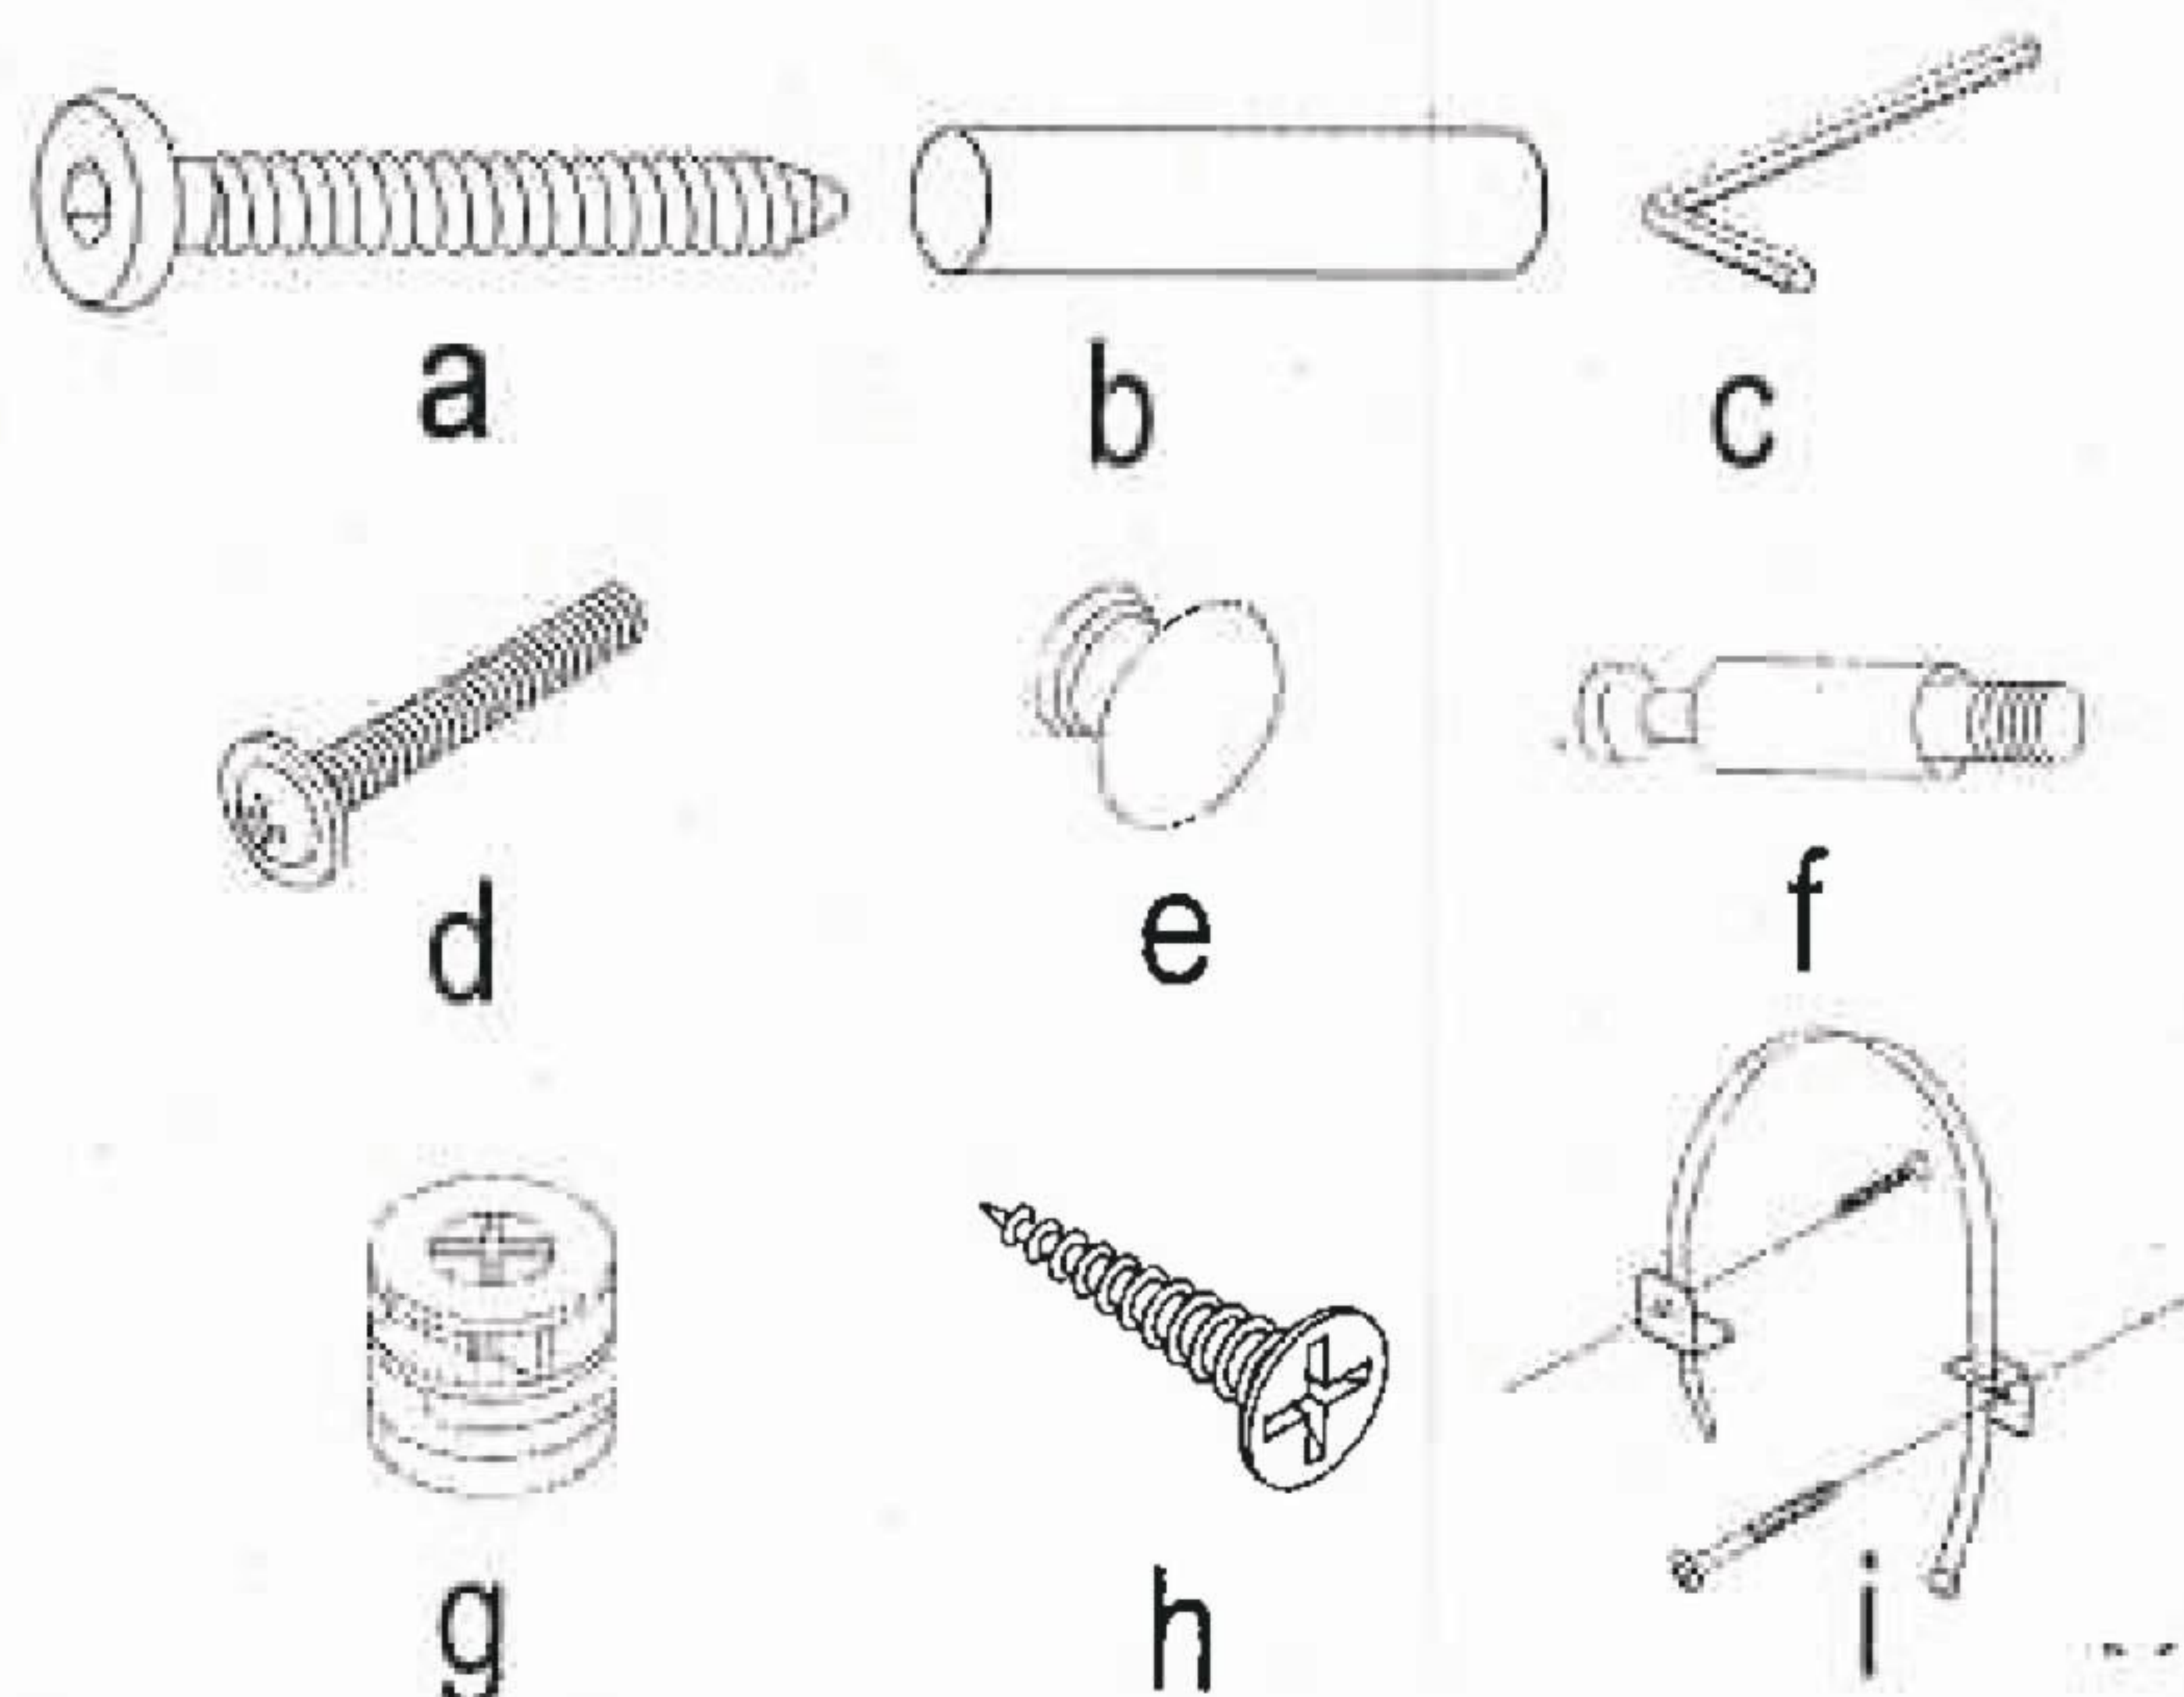

MADE IN CHINA

STEP 1


Use allen wrench (c) to connect bolts.
Connect front stabilizer bar (F), back
stabilizer bar (G) and middle piece (E) to right
headboard (B) by wood bolts (a) and wood dowels (b).

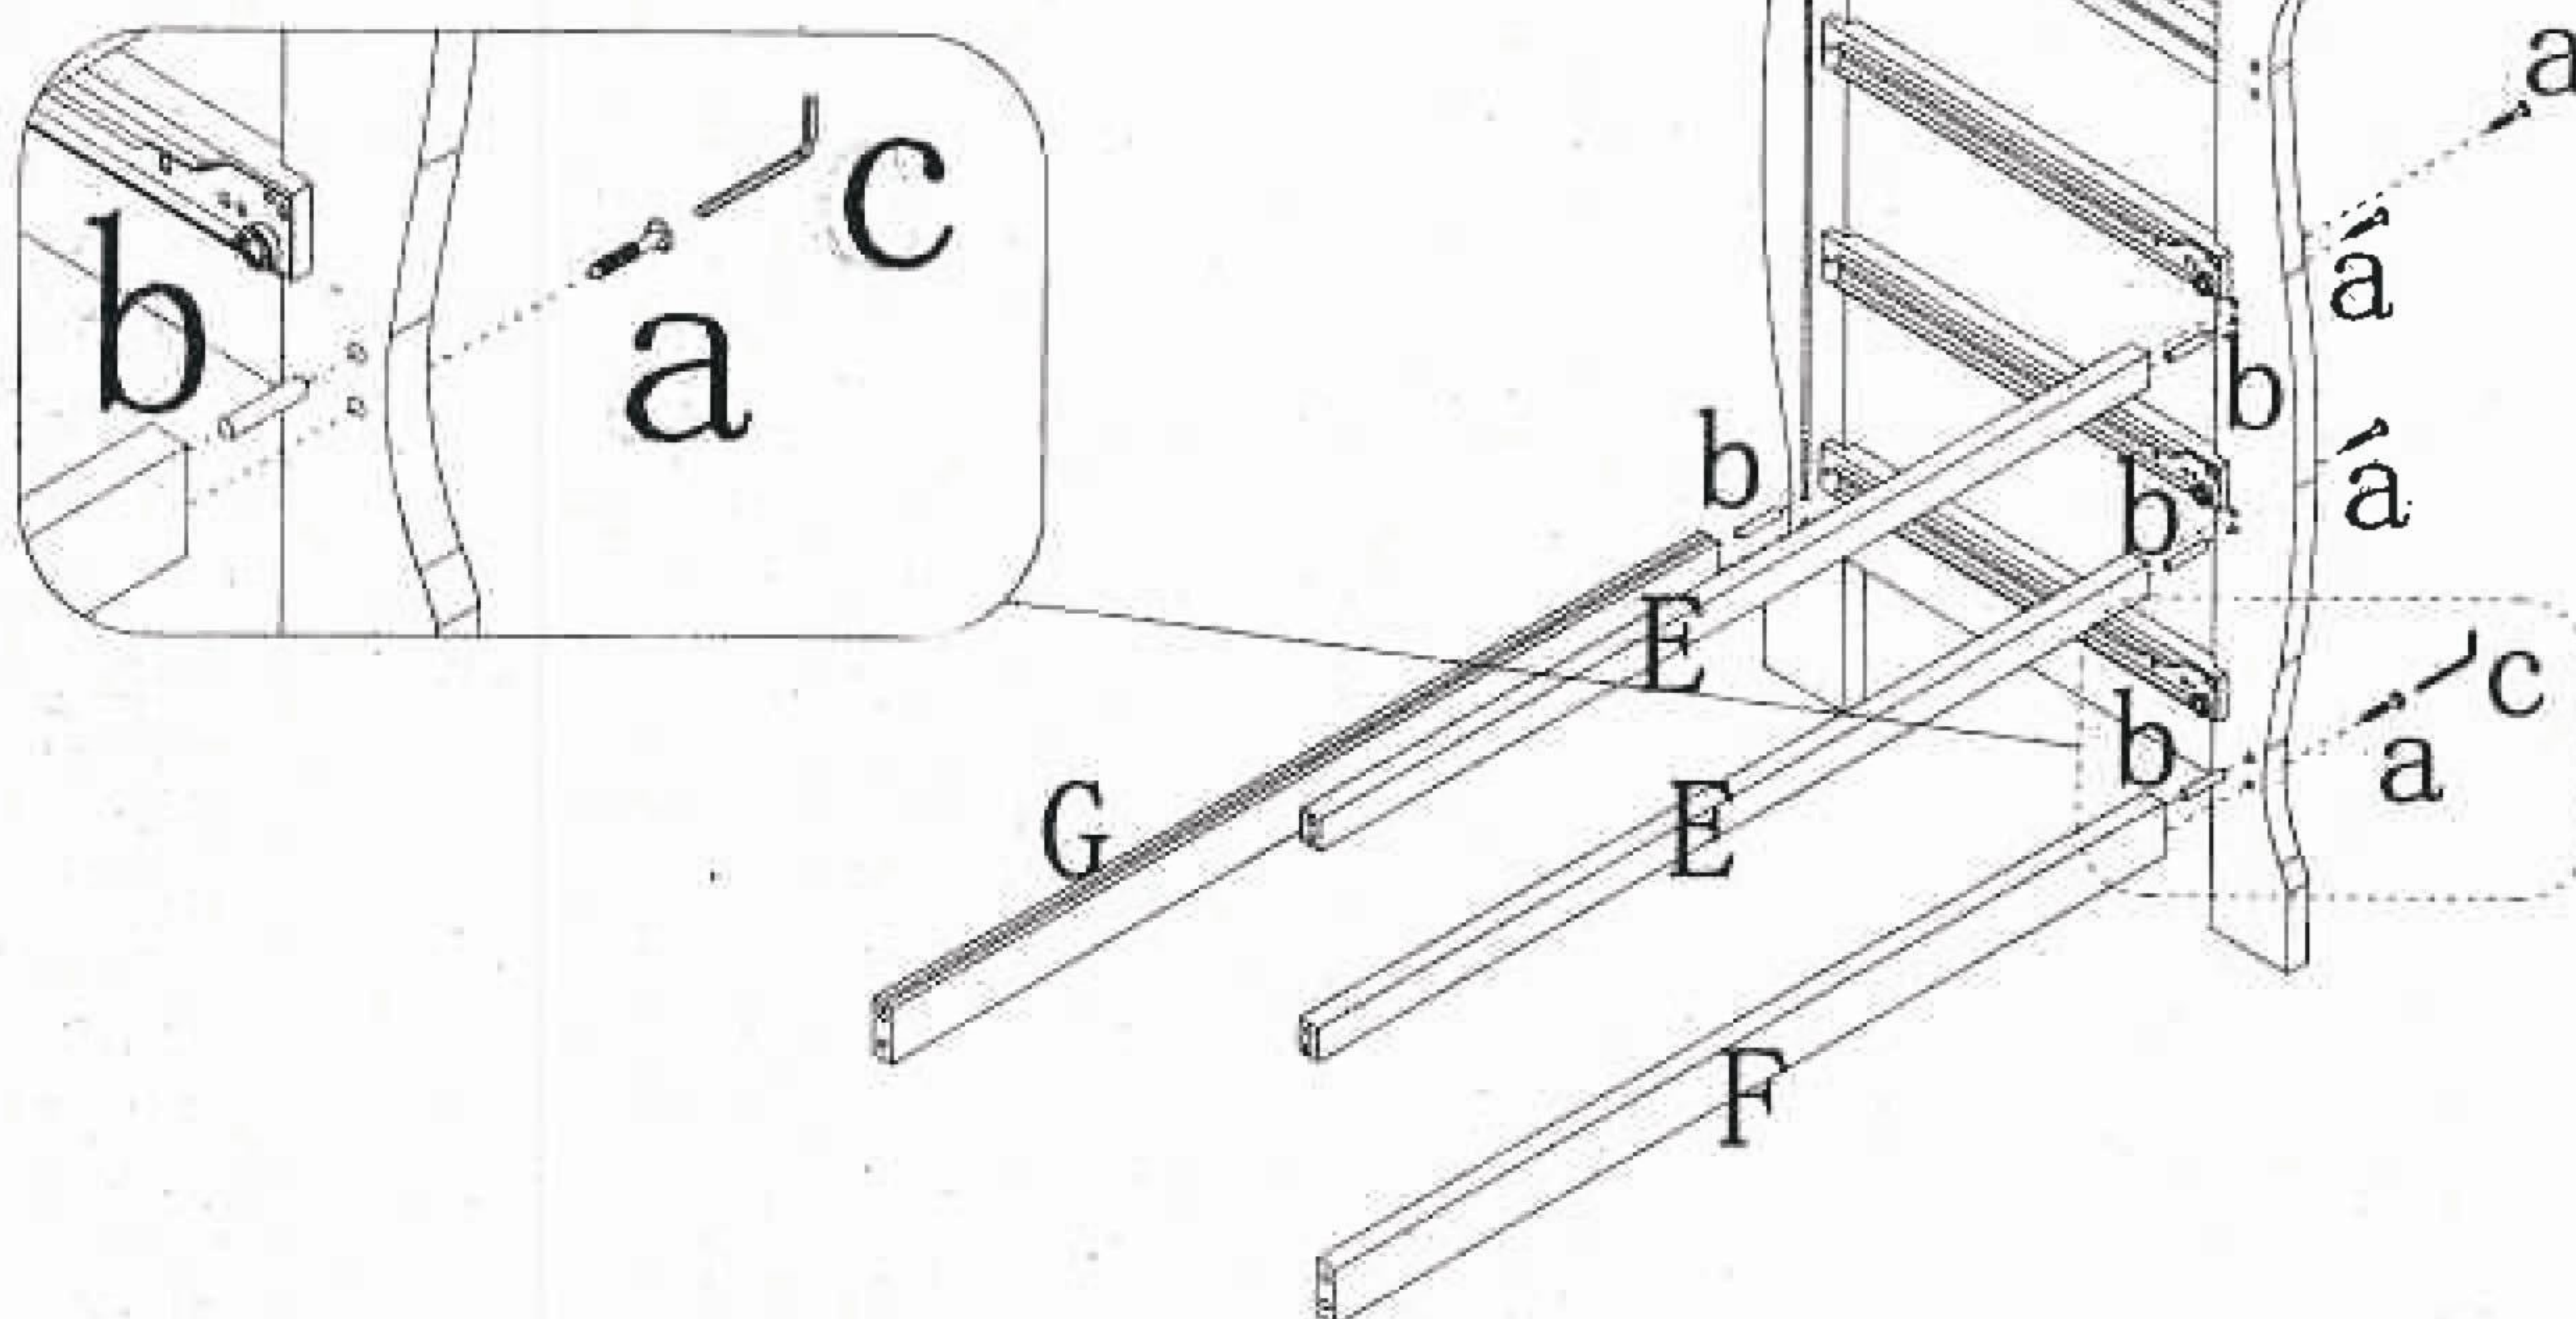

STEP 2

Connect back rail (C) and front rail (D)
to right head (B) by the wood dowels (b)
and bolts (a) using the allen wrench (c).

DO NOT fully tighten the bolts.

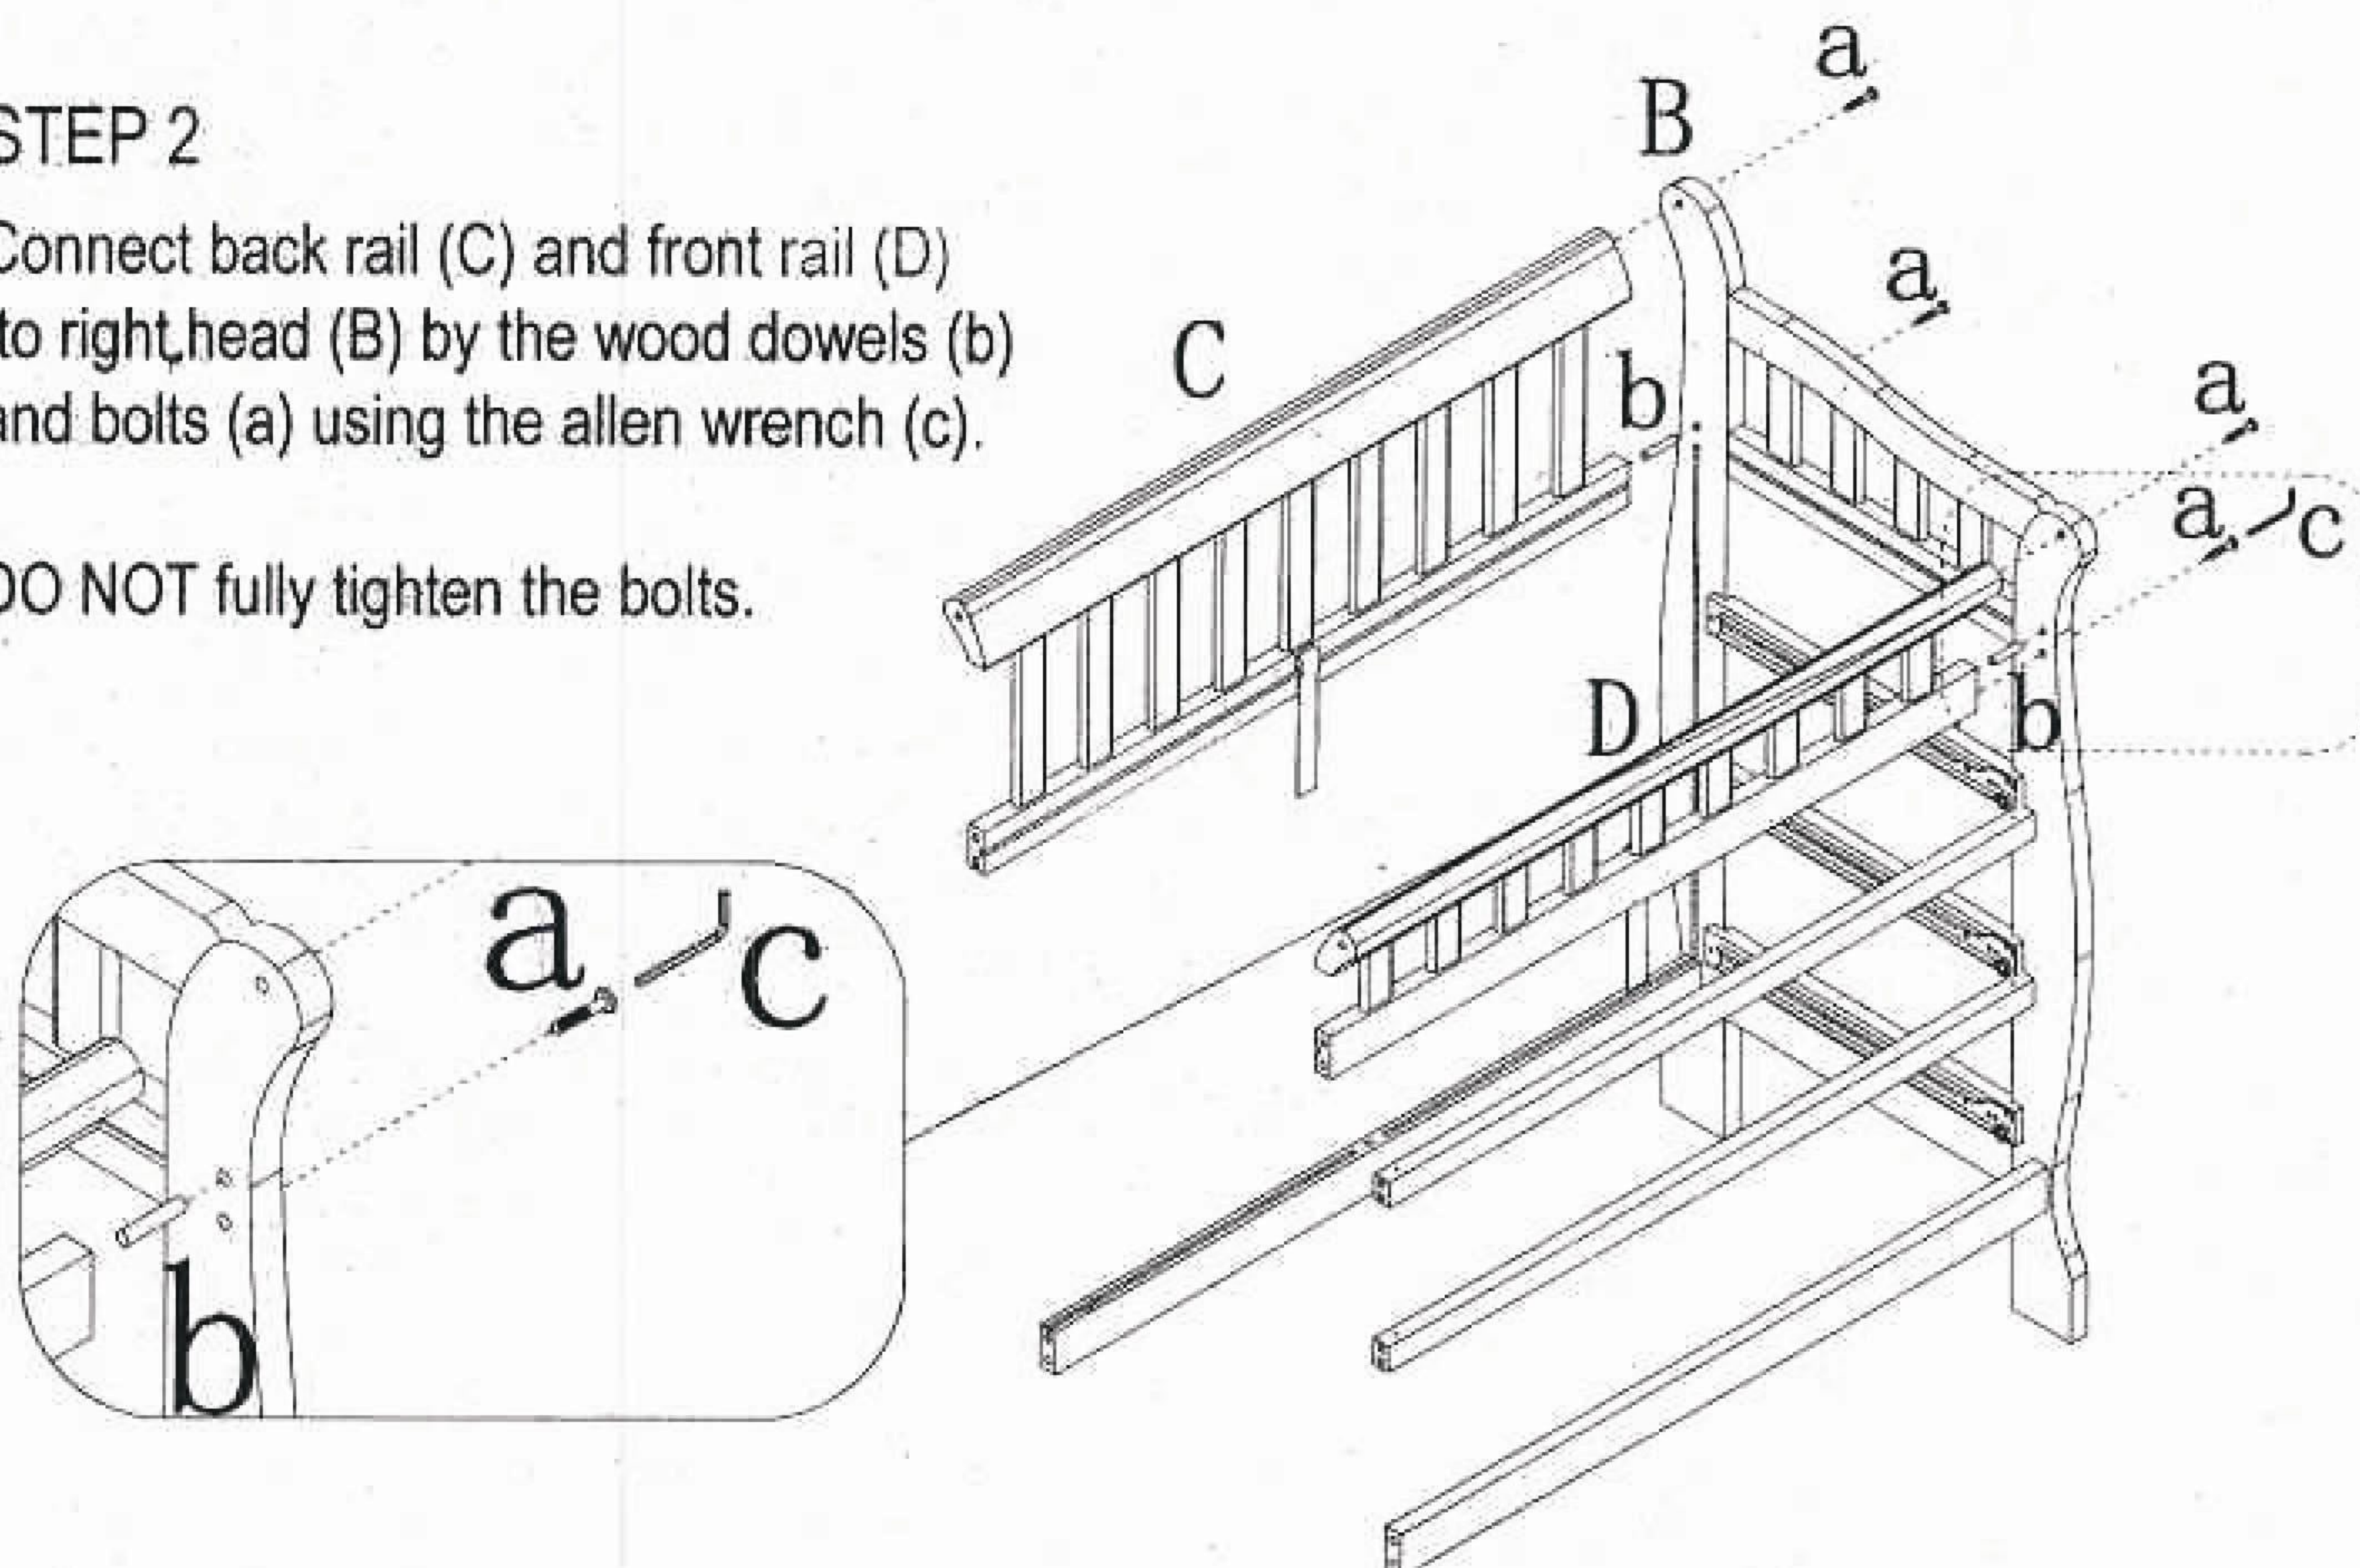


STEP 3

1: Insert one piece of back panel (H) into groove between back rail (C) and back stabilizer bar (G);

2: Connect central back bar (J) to back rail (C) and back stabilizer bar (G) by wood dowels (b);

3: Insert another back panel (H).



4: Insert platform (K) into groove between back rail (C) and front rail (D).

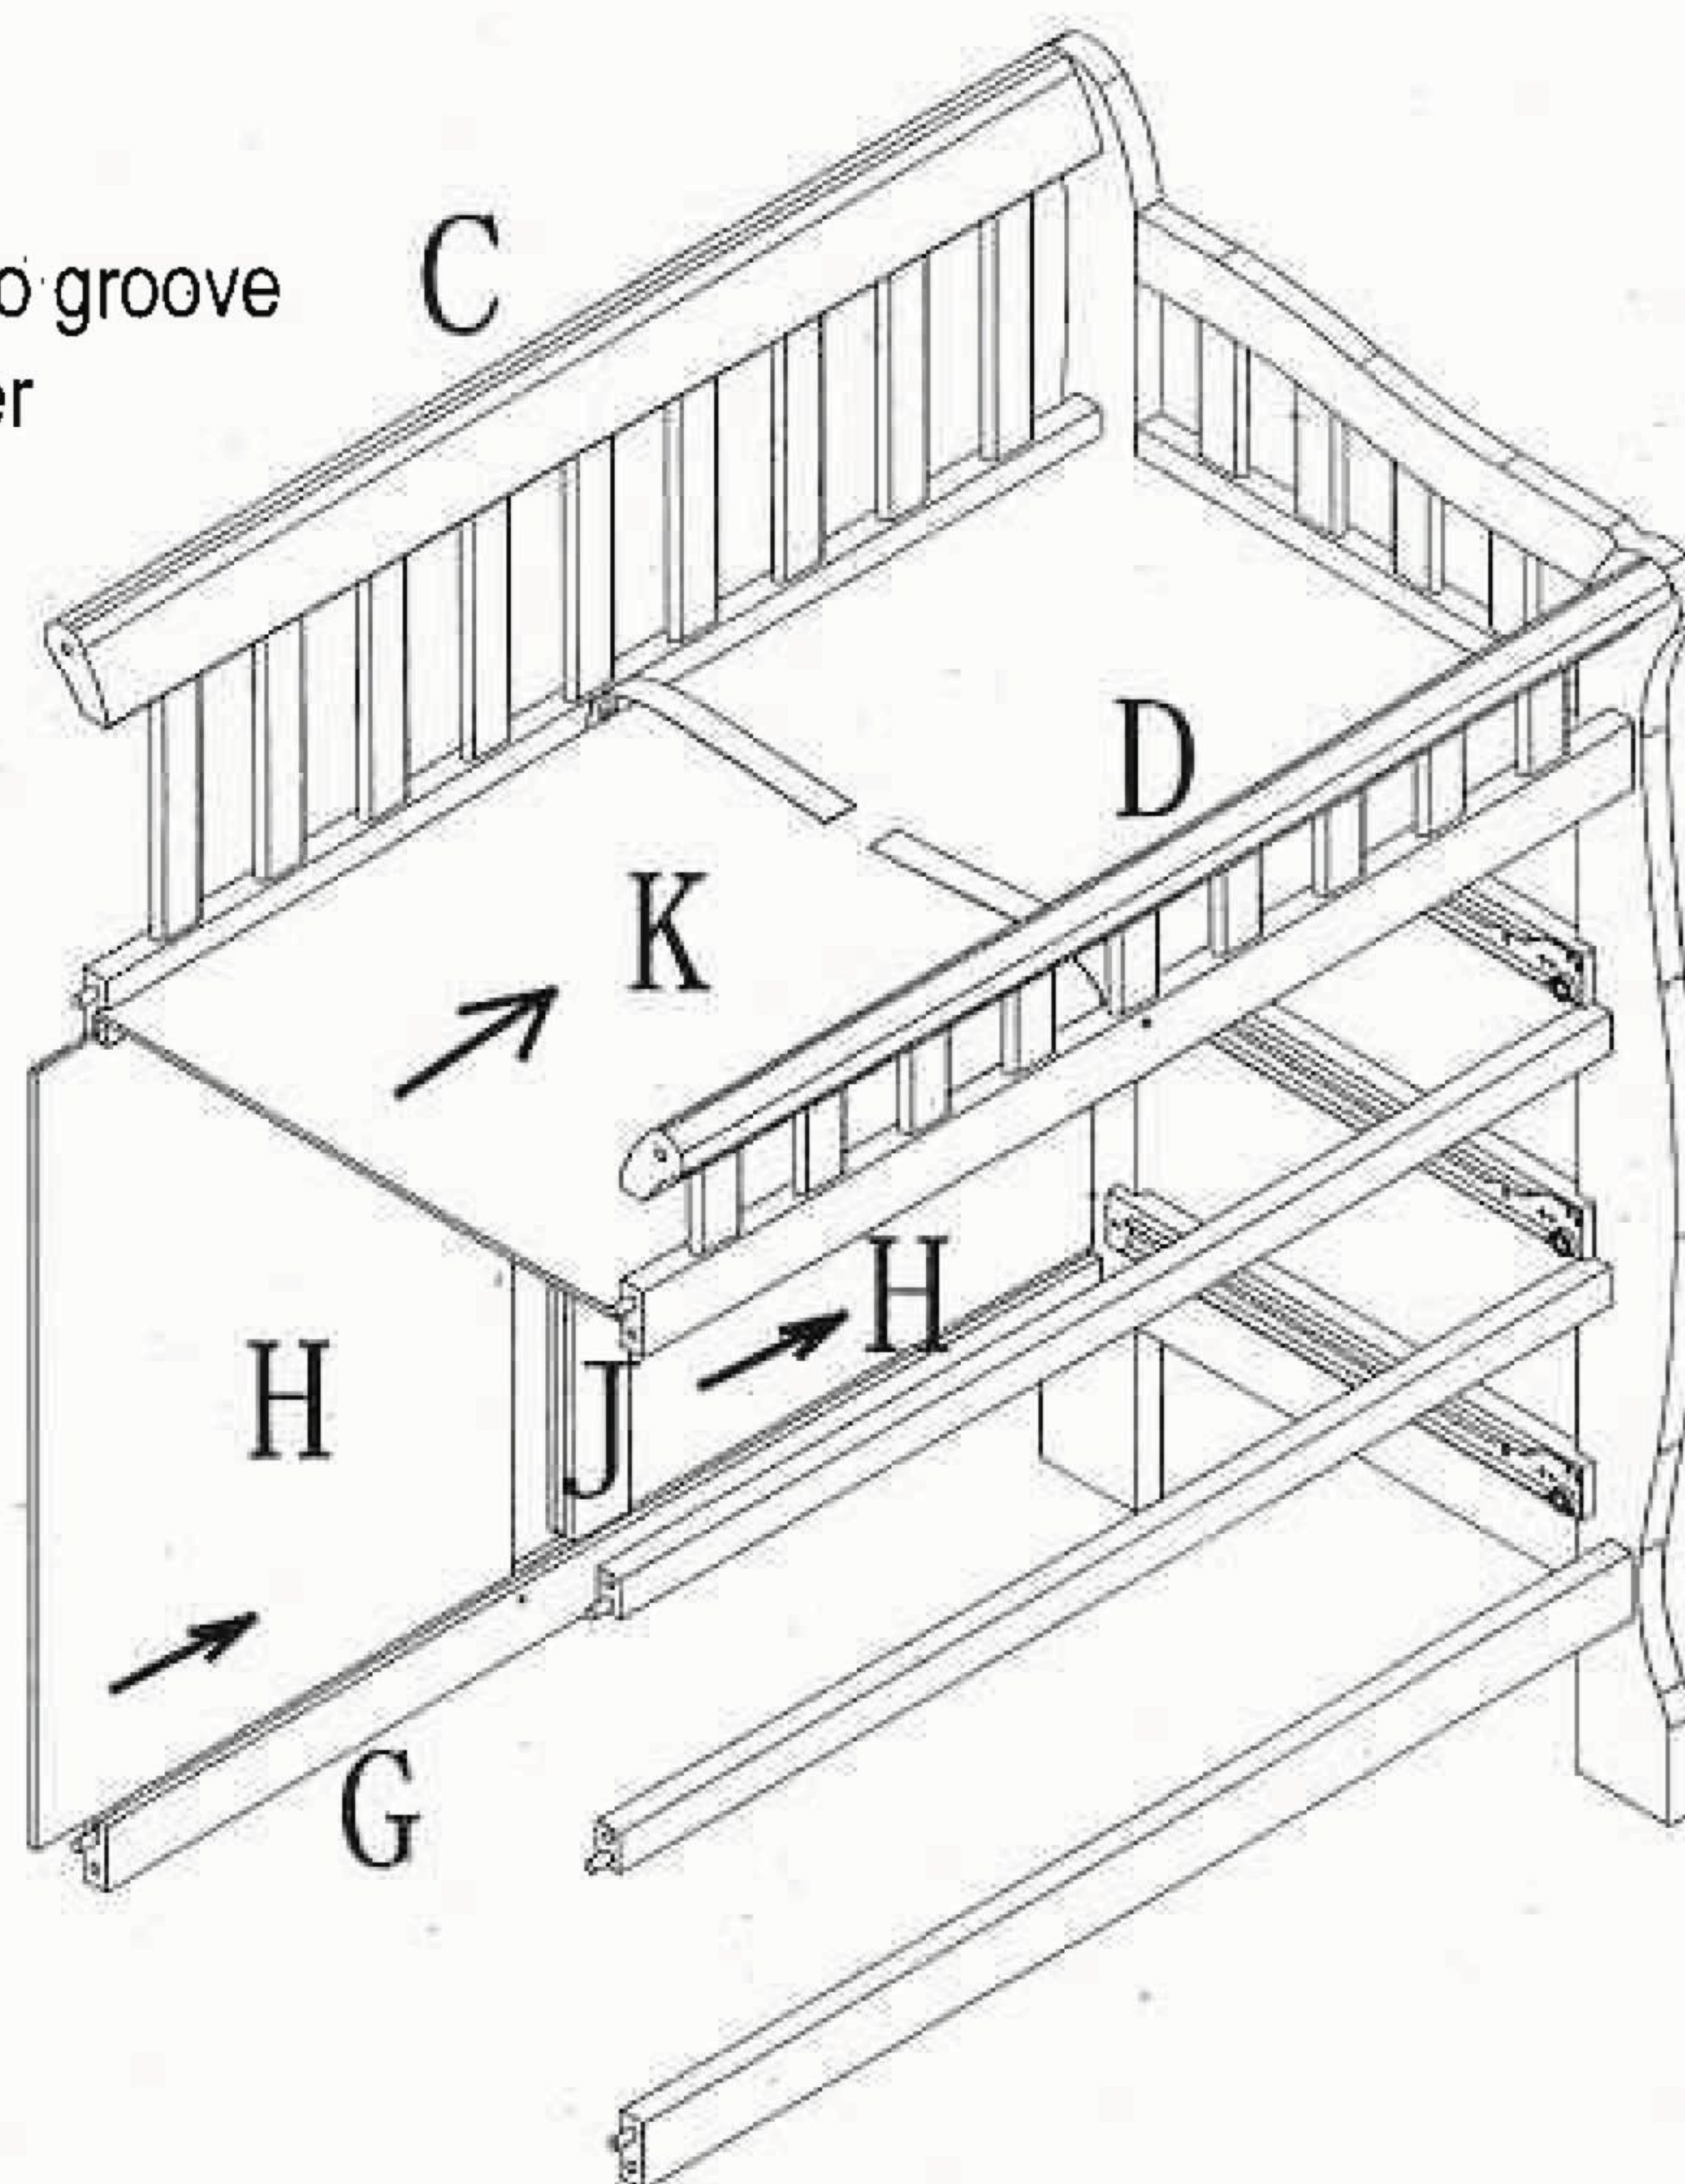

STEP 4

Connect back rail (C), front rail (D) and stabilizer bars (F&G), middle piece (E) to left head board (A) by wood dowels (b) and bolts (a).

THEN FULLY tighten all the bolts.

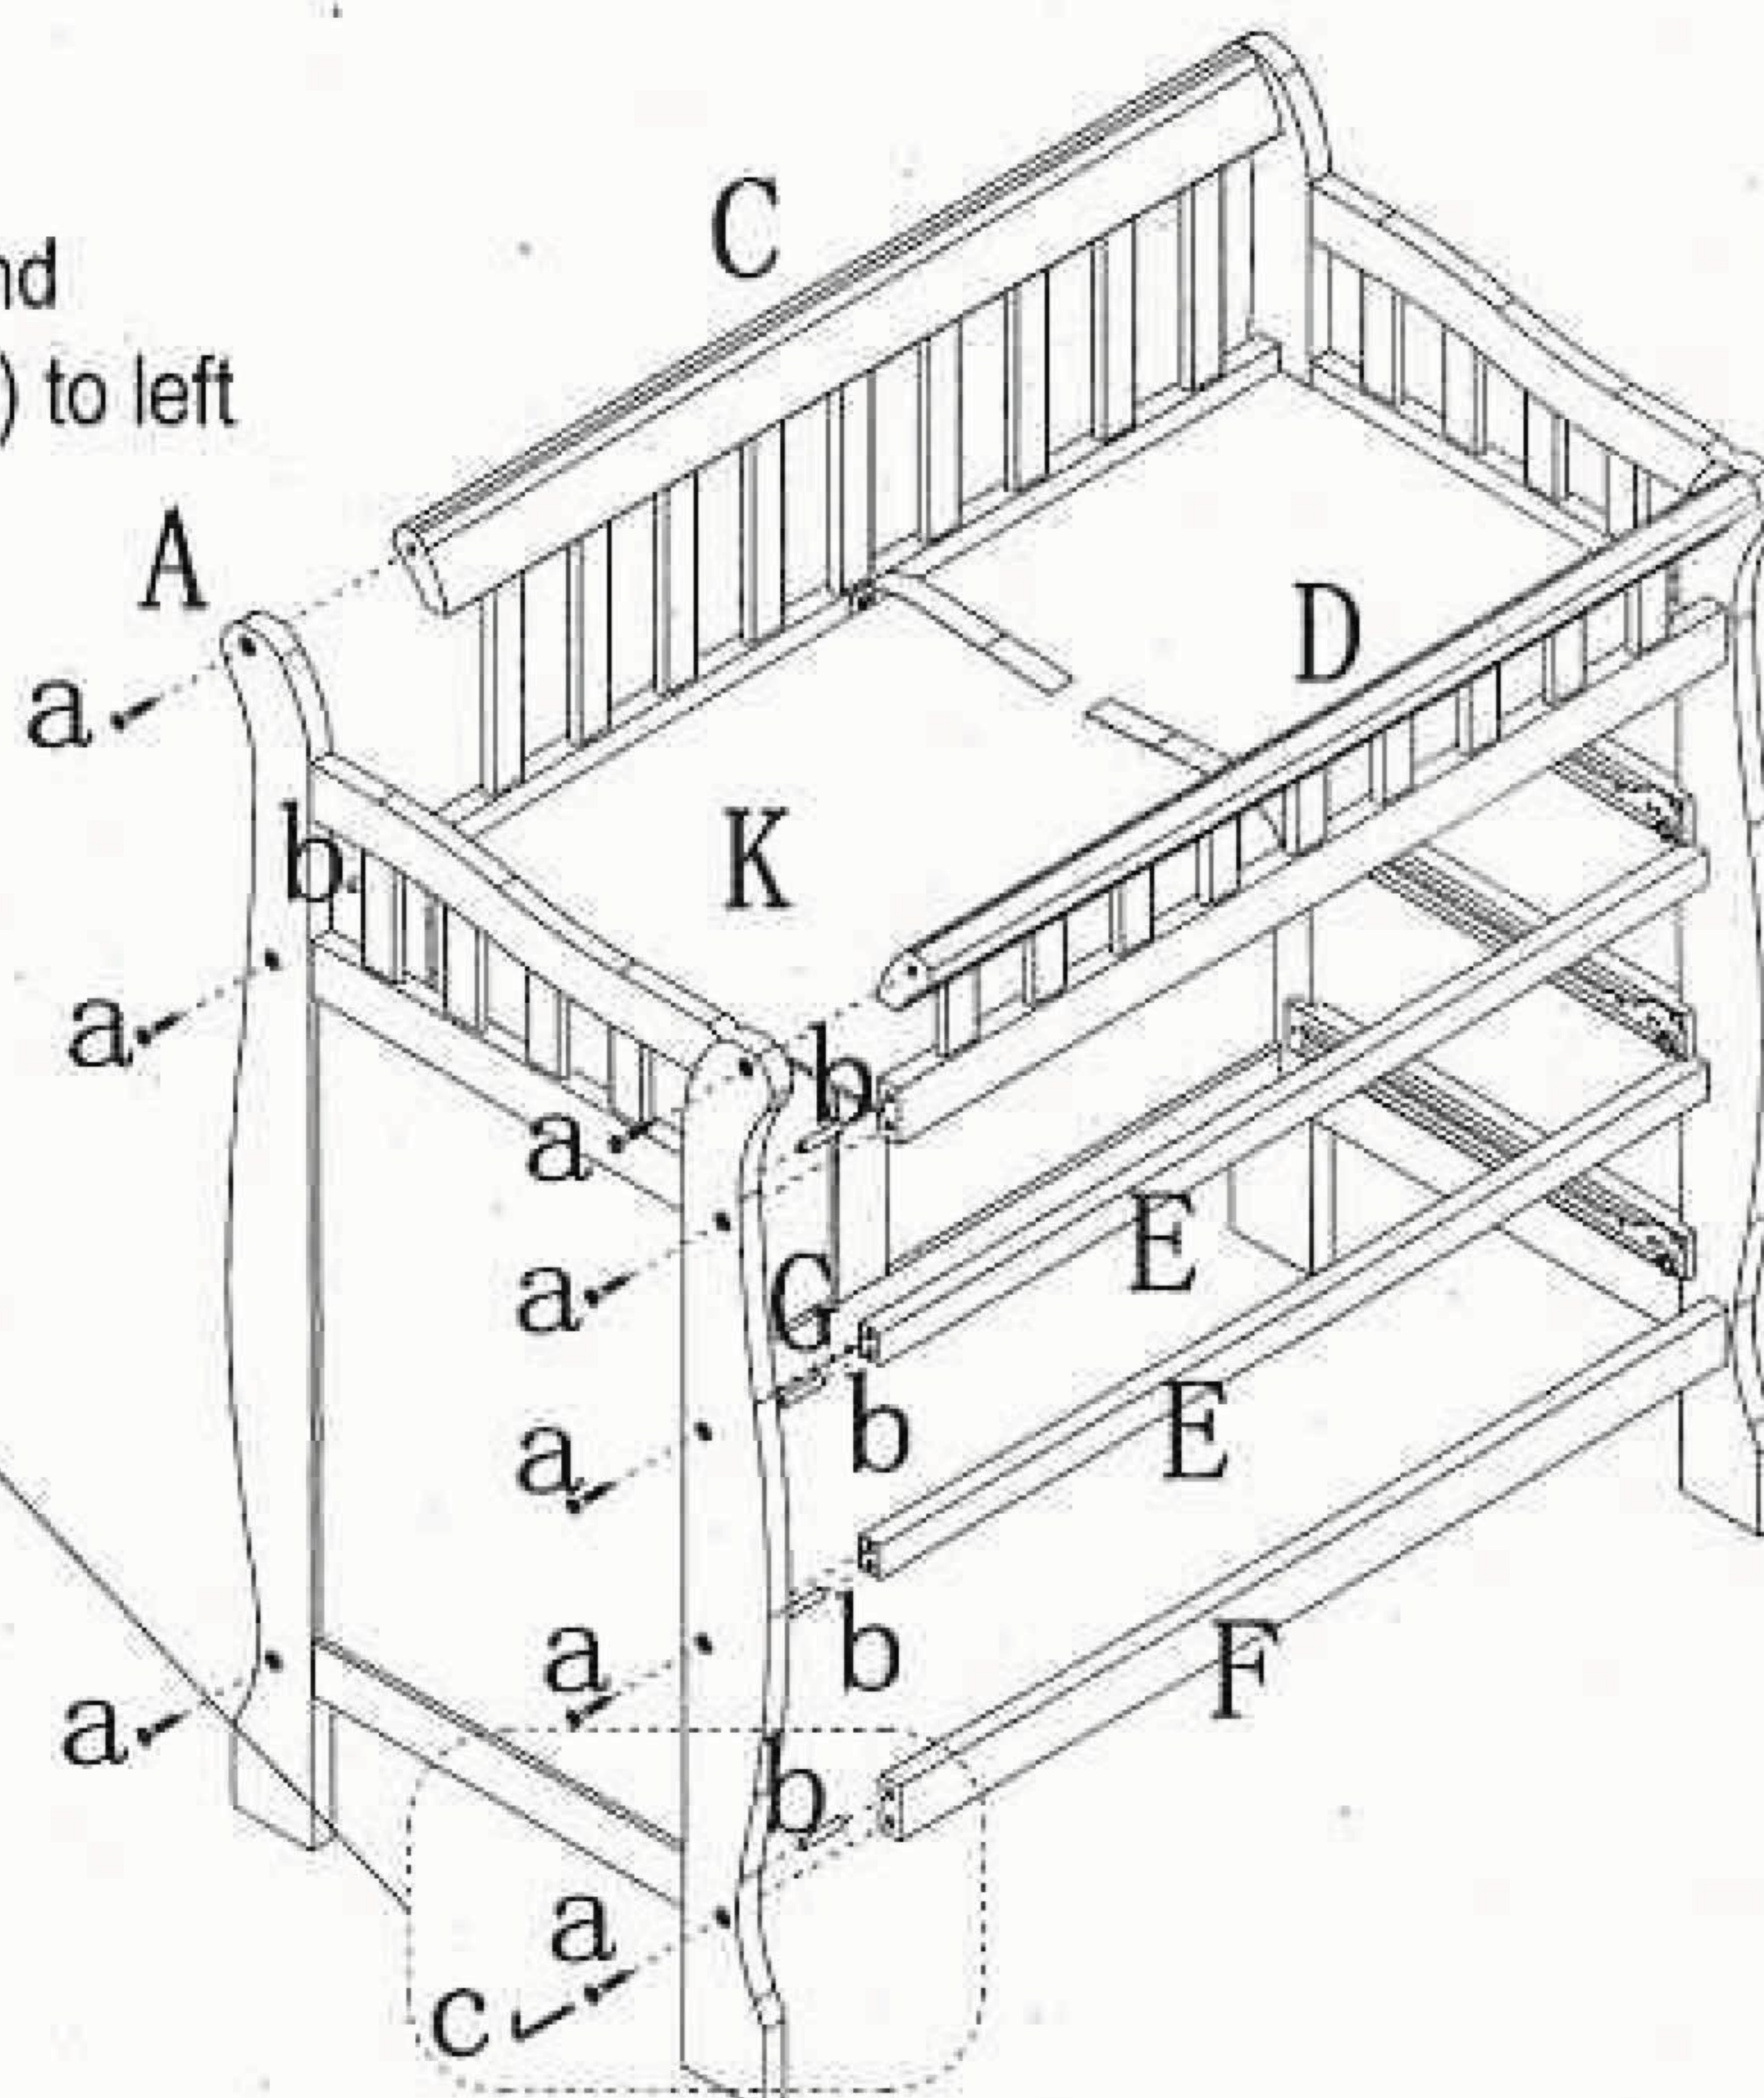
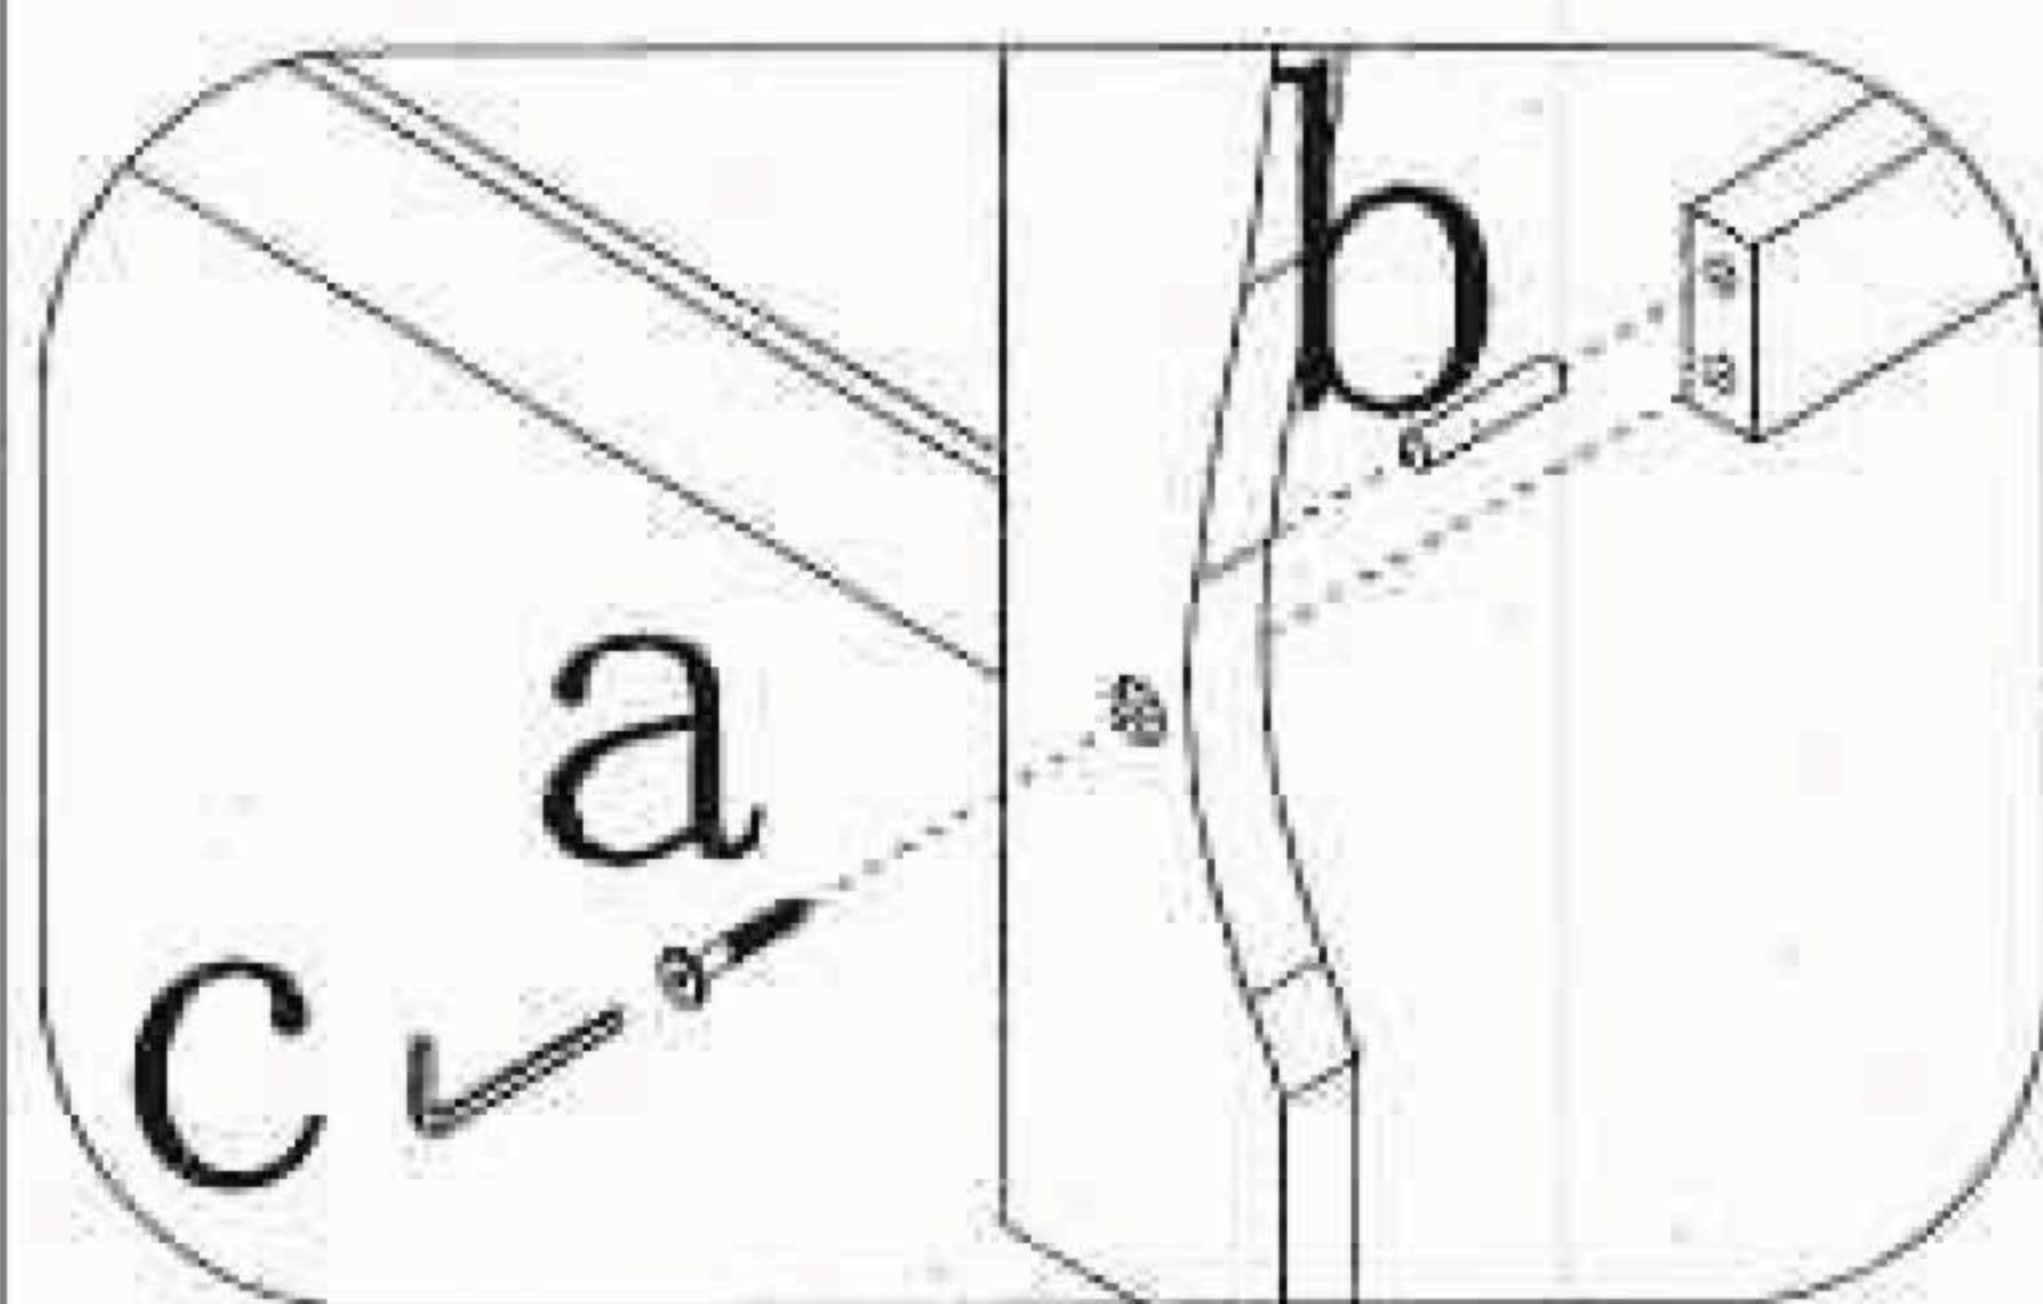


STEP 5

1: Thread cam bolts (f) into the pre-drilled holes on the front panel (DR1), side panel (DR2&DR3), back panel (DR4).

2: Insert cams (g) into the holes on side panel (DR2&DR3), back panel (DR4).

3: Attach the knob (e) to the front panel (DR1) by screws (d).

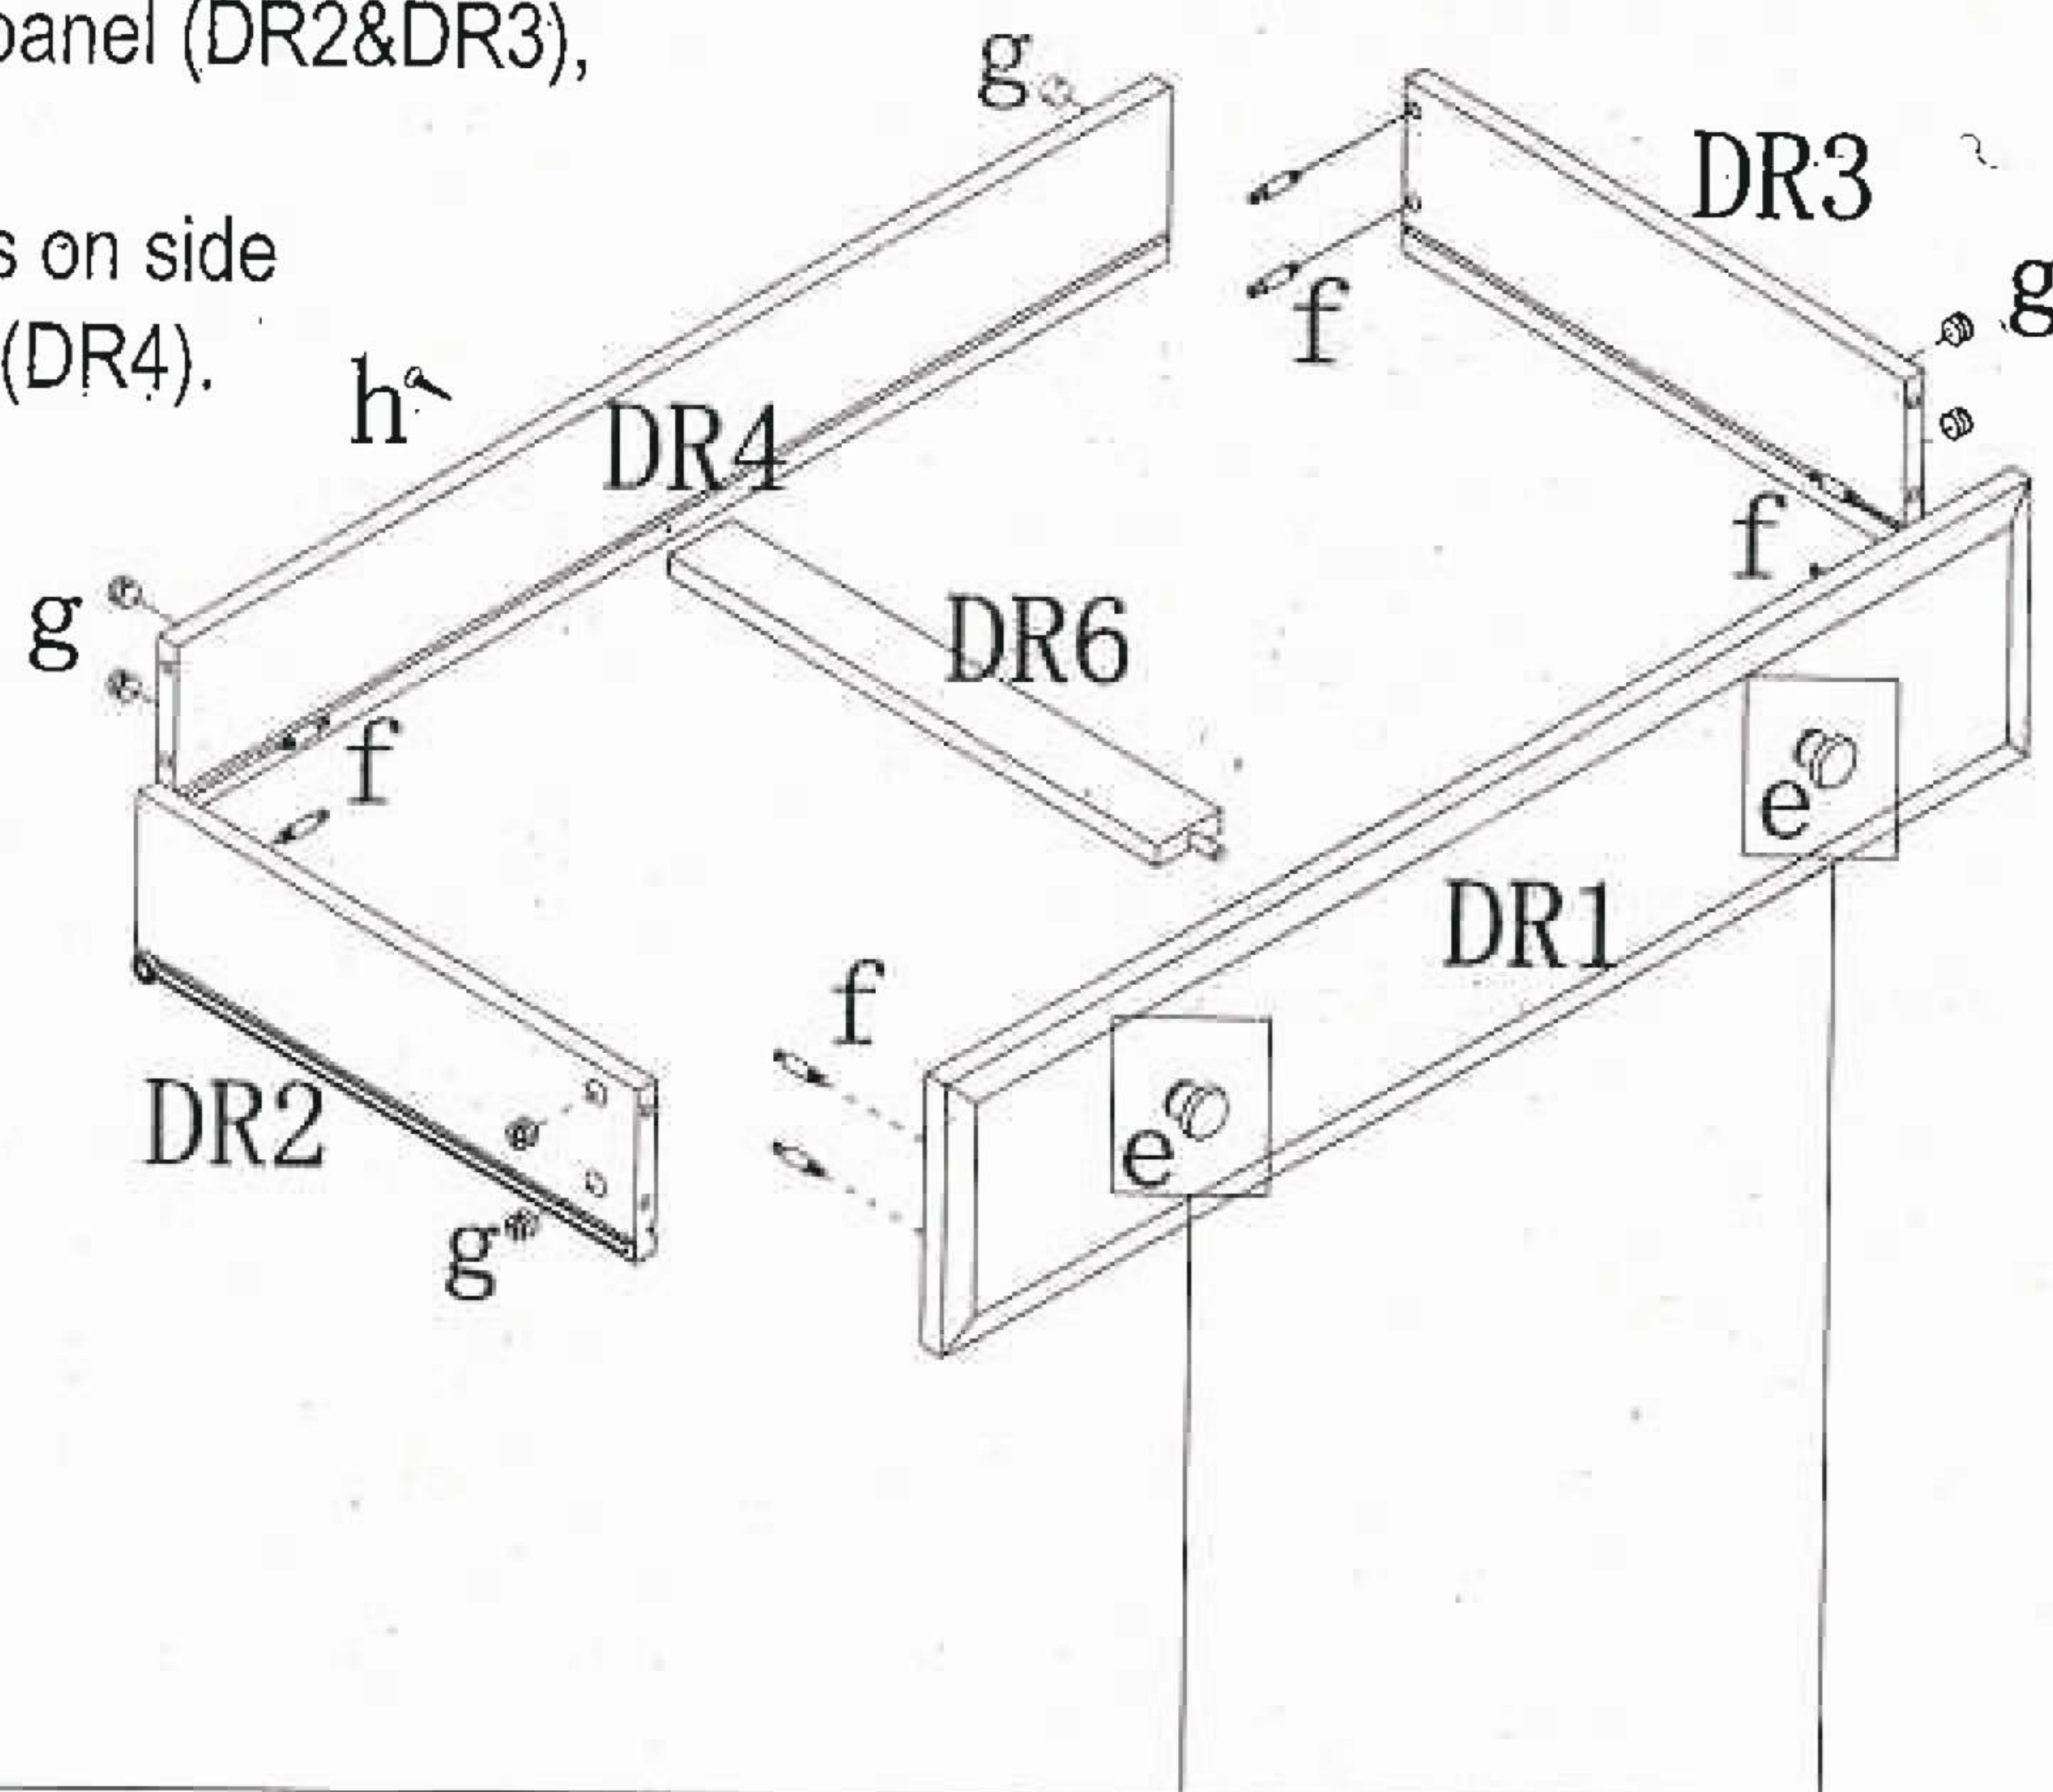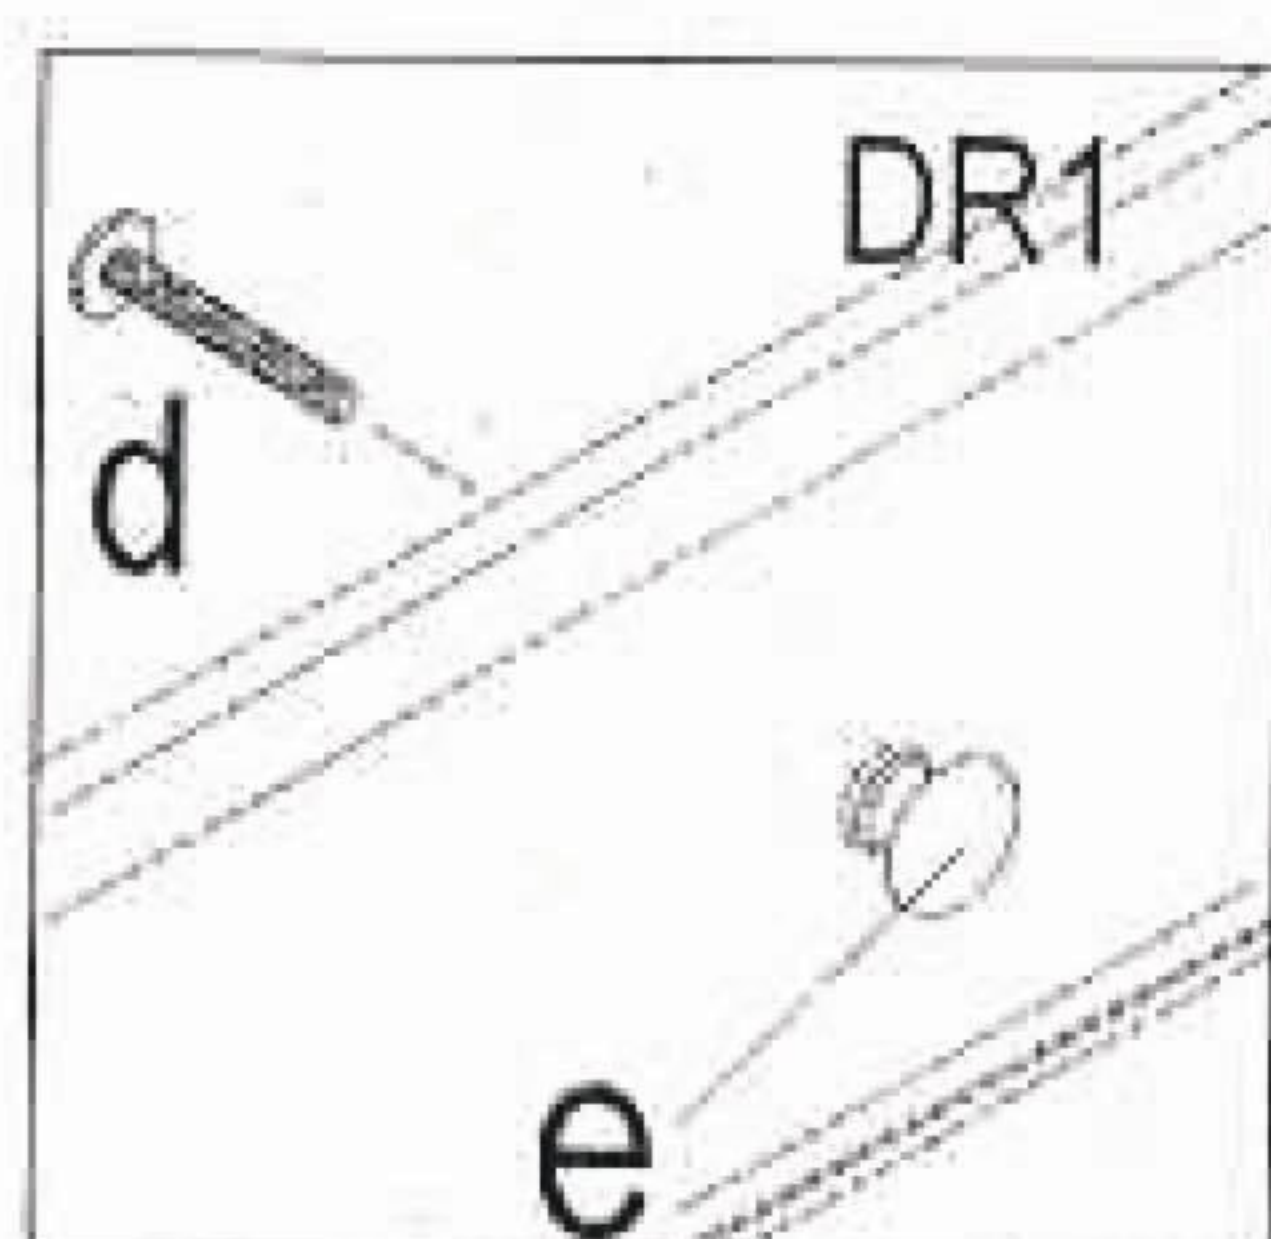


STEP 6

1: Attach side panel (DR2&DR3) to the back panel (DR4) by inserting the cam bolts (f) to the end holes of back panel (DR4).

MAKE SURE the grooves line up and face inside.


LOCK the cams (g) in the back panel (DR4) by turning them.

2: Slide the bottom panel (DR5) painted side up, into grooves of side panel (DR2&DR3).

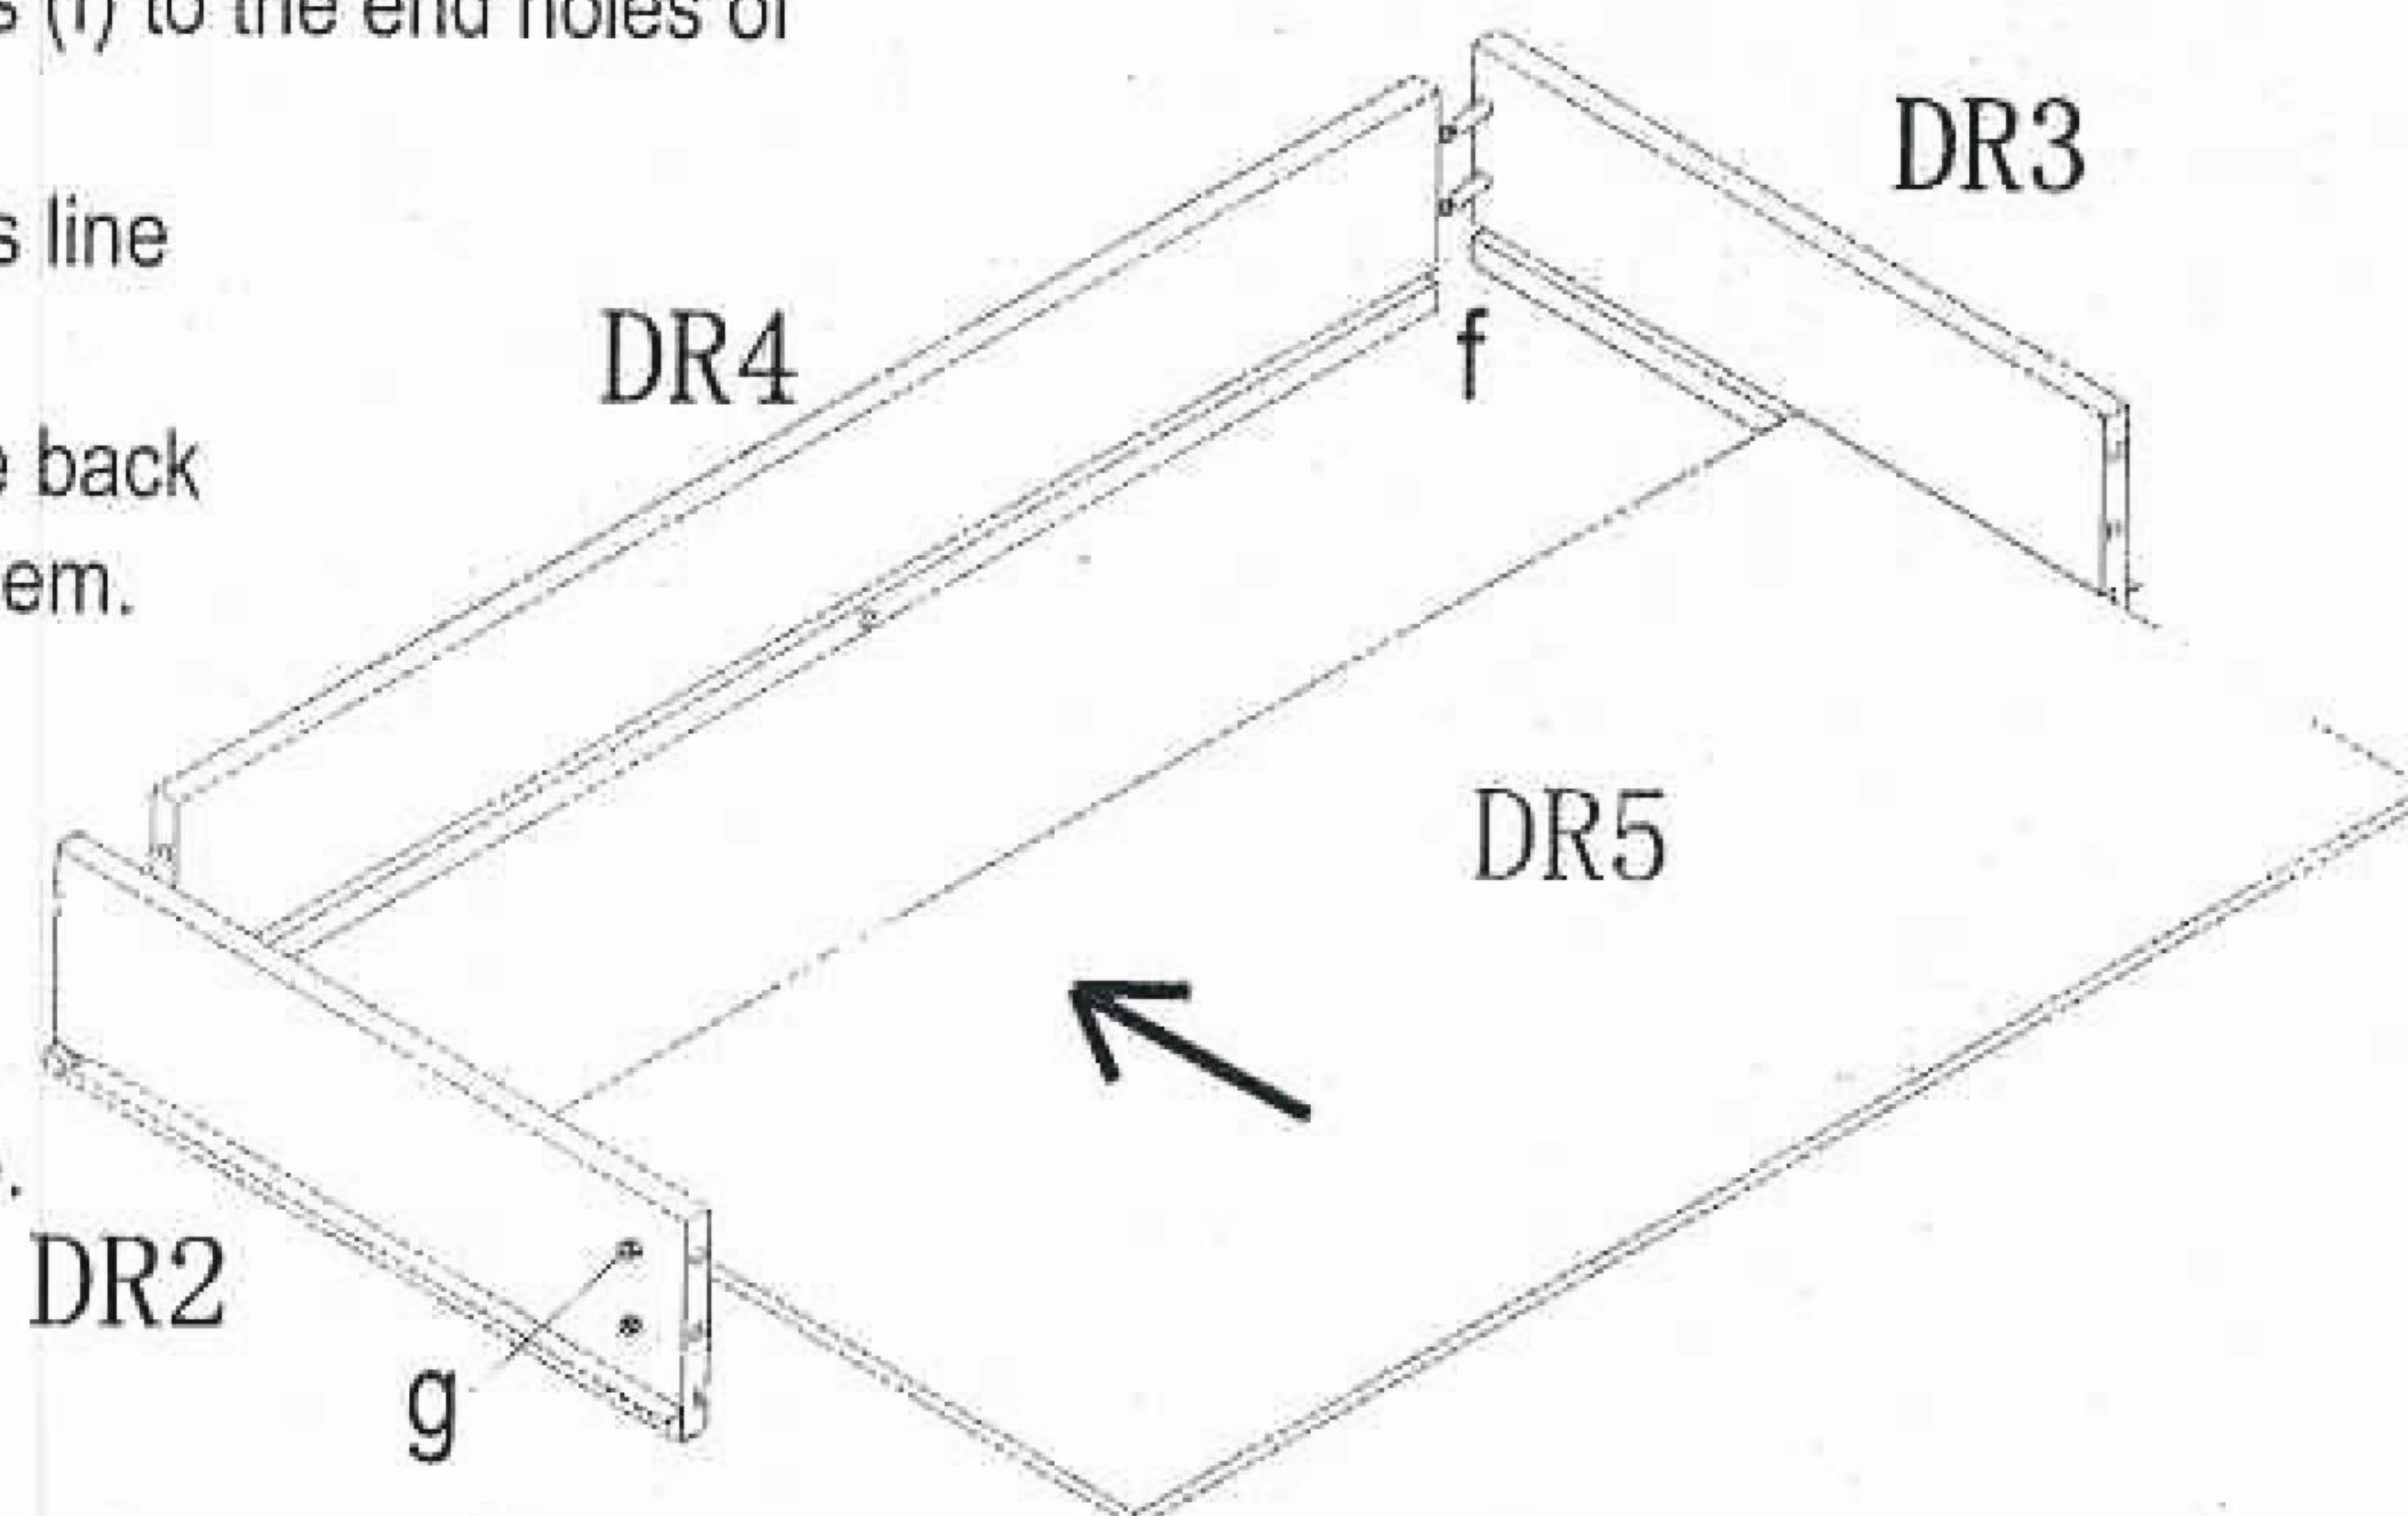


STEP 7

- 1: Attach the bottom support panel (DR5) to the back panel (DR4) by self-tapping (h), to front panel (DR1) by dowel.
- 2: Attach the front panel (DR1) to side panel (DR2&DR3).
- 3: LOCK the cams (g) in the side panel (DR2&DR3) by turning them.
- 4: Assemble the rest two drawers follow step 5,6,7.

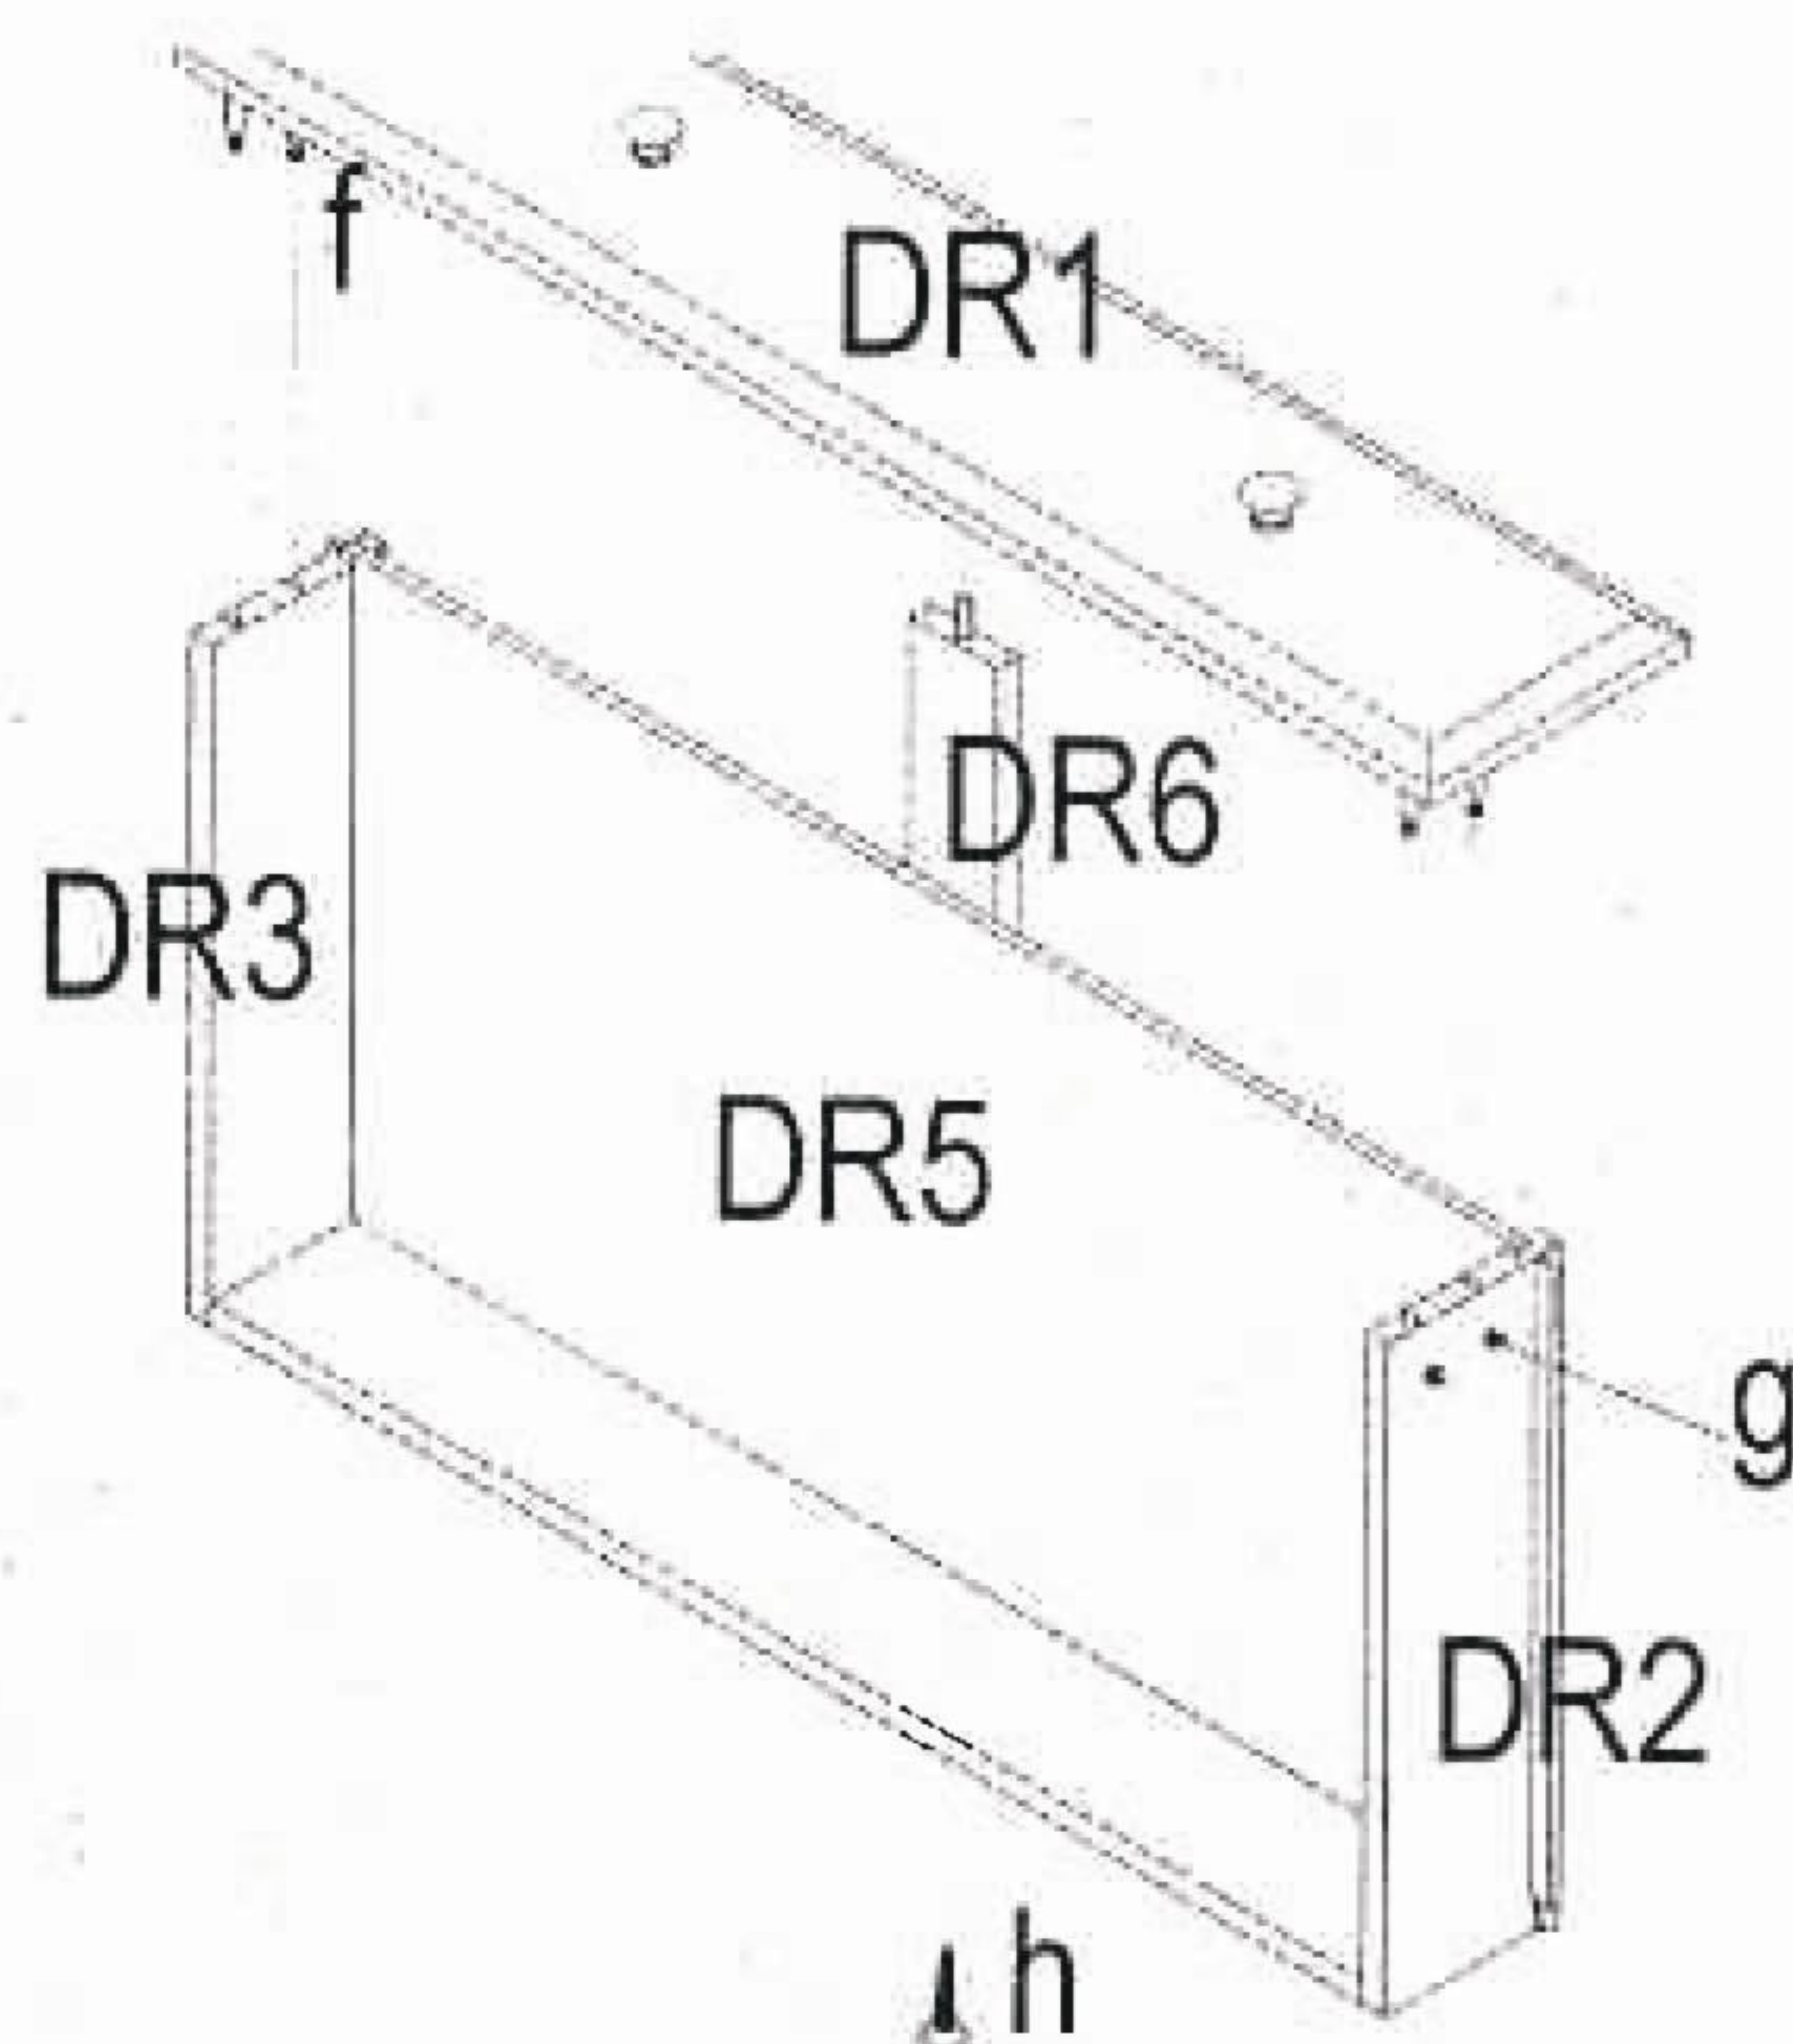


STEP 8

- 1: Slide the drawers into rails on head board (A&B).
- NOTE :PLEASE PUT THE DRAWER WITH CLEAN STICKER AS THE FIRST ONE.
- 2: Add the pad (L).
 - 3: Put the child on the pad, then insert safety restraint system of the tape across child's waist. The tightness can be adjusted by increasing the tension of the tape.

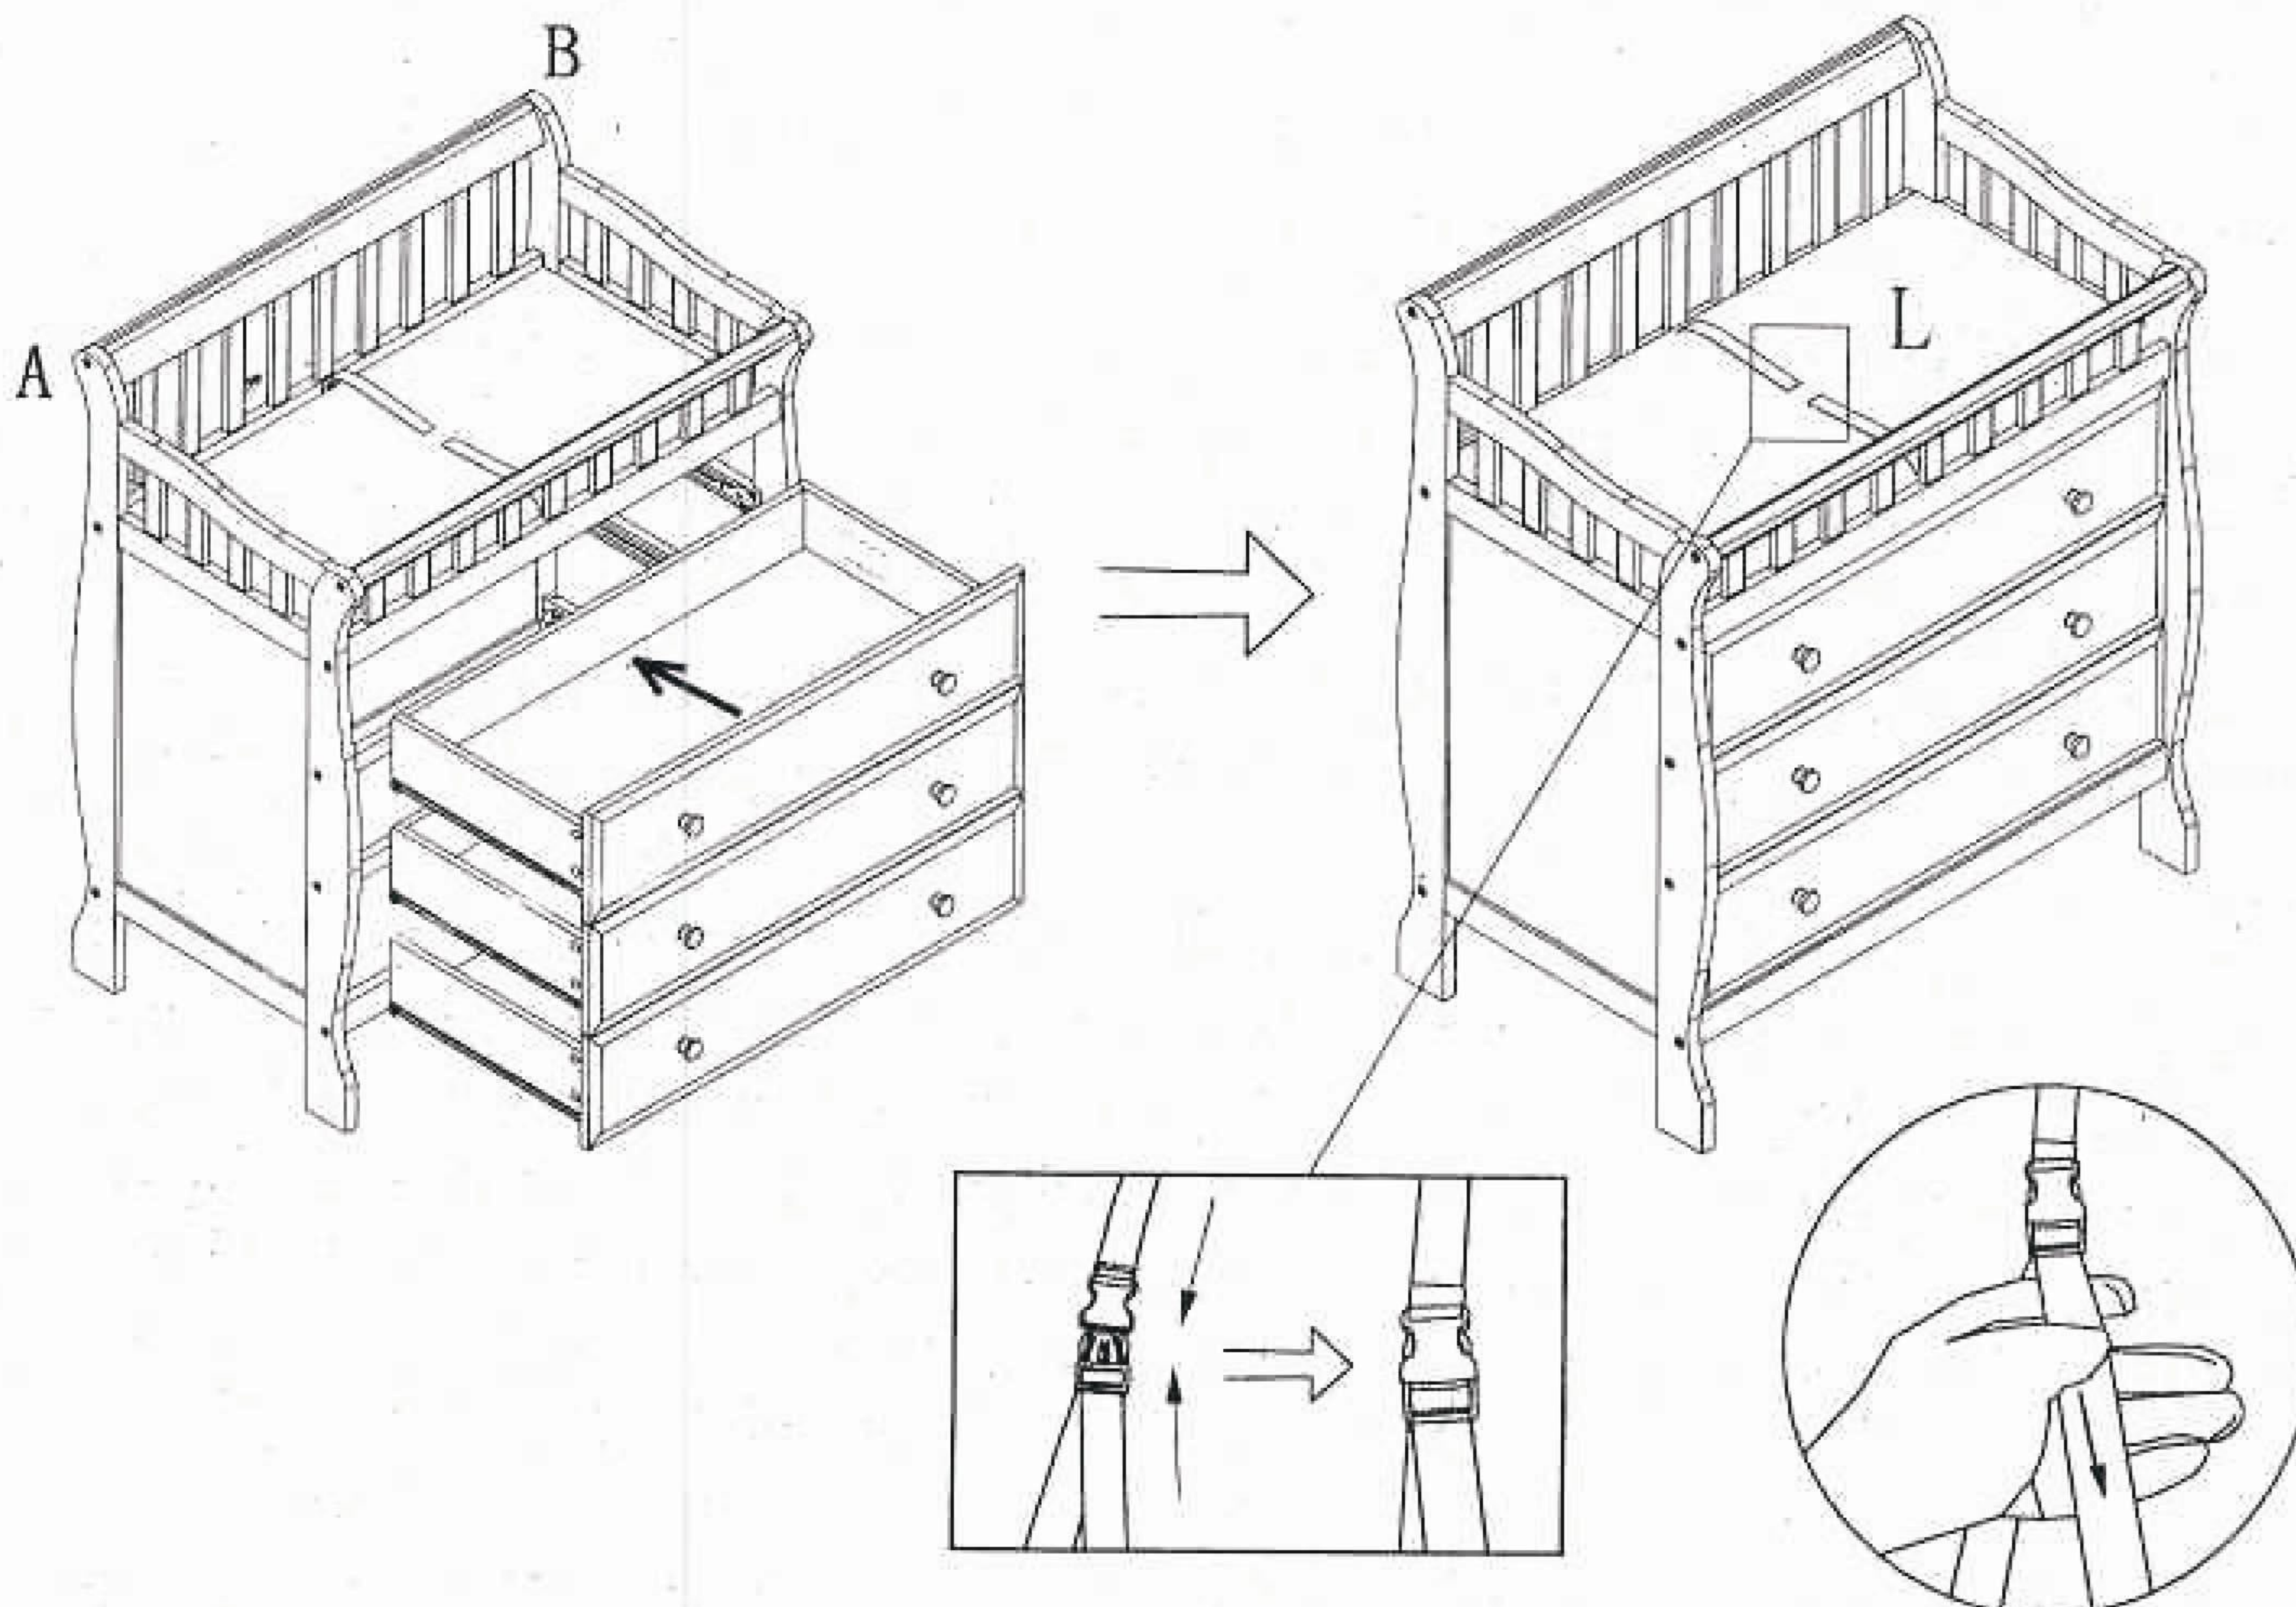

FURNITURE TIPPING DETERRENT HARDWARE

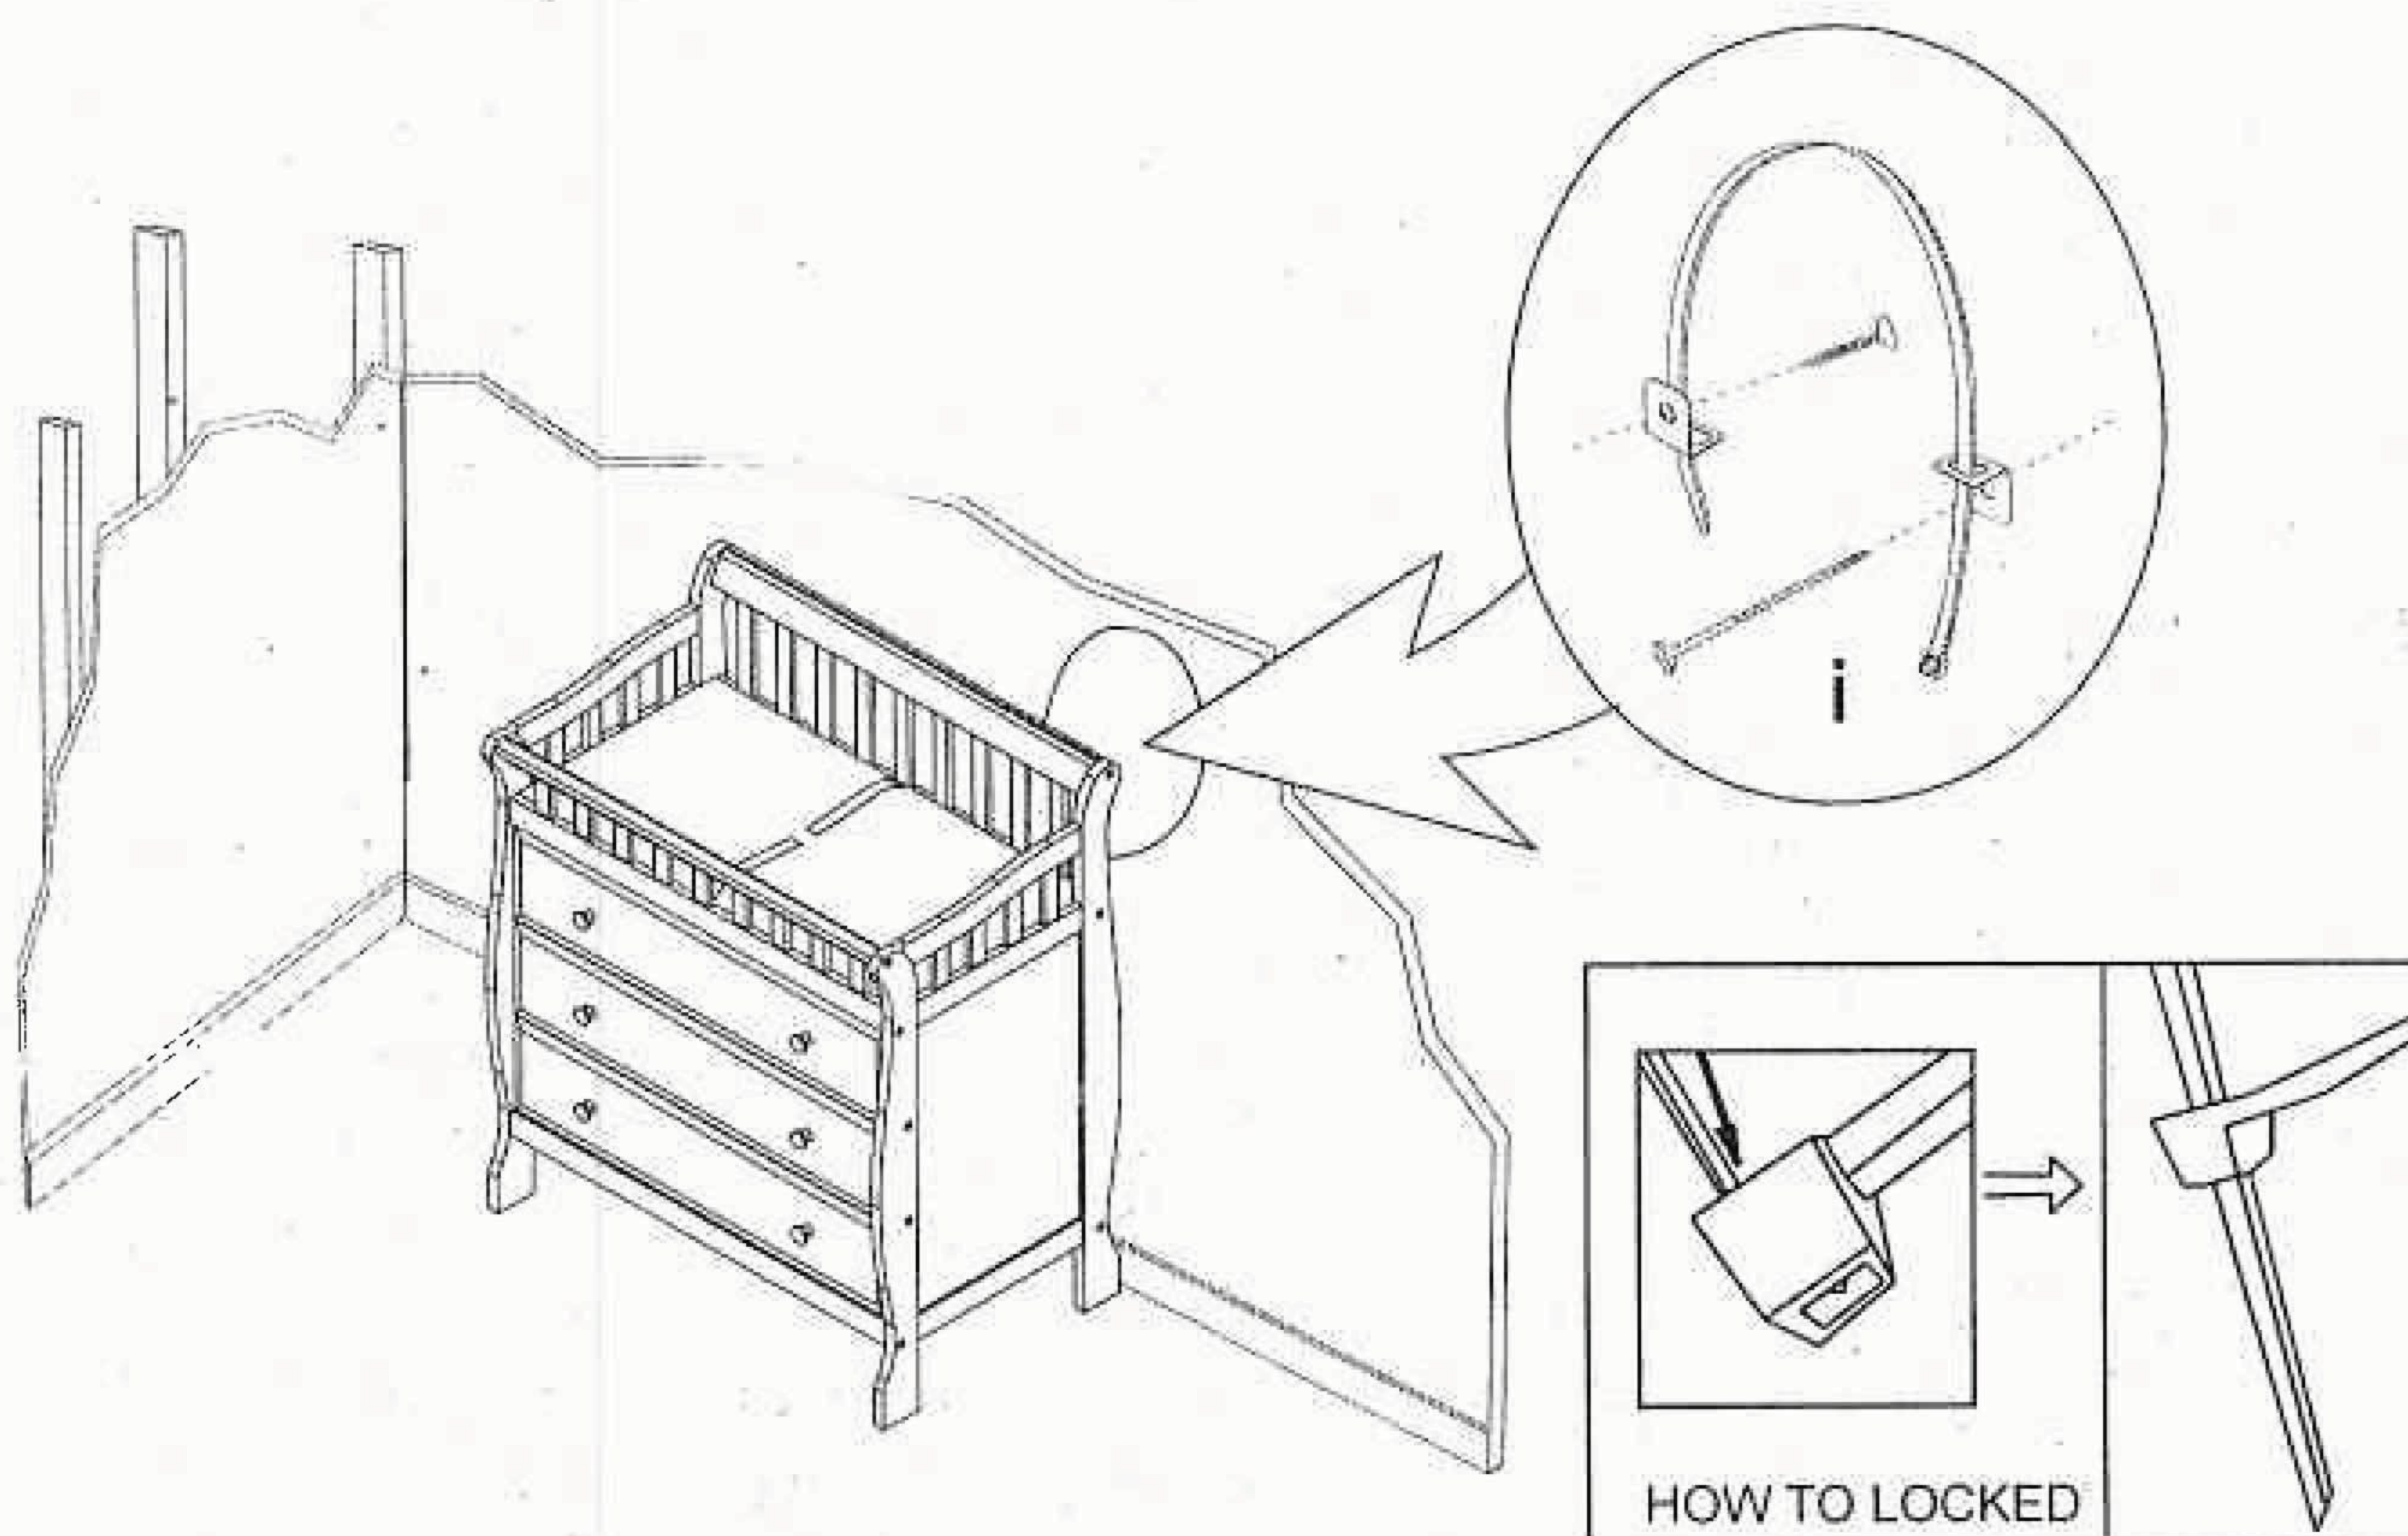

Tipping furniture may injury young children . Use of this tipping restraint hardware is highly recommended .

This hardware , when properly installed , could provide protection against the unexpected tipping of furniture due to improper use .

⚠ WARNING : This hardware is only a deterrent . Adult supervision is the only proper deterrent to prevent improper use of the units .

1. Attach one of the mounting brackets securely to the back top edge of the furniture using the short screw .
2. Find the stud in the wall and mark the location on the wall for mounting the second bracket, with a 2" wood screw , approximately 2" below the bracket mounted to the edge of the furniture .
3. If a stud cannot be found , purchase a "Hollow-Wall Anchor Bolt" and attach the second bracket to the wall using that bolt . Make sure to follow all instructions by the manufacturer .
4. Place the furniture so the bracket on the back edge is in line with the bracket on the wall .
5. Lace an end of the nylon restraint strap down through each bracket . Bring both ends together and slide the beaded end of the strap through the key hole shaped slot in the other end unit snug . Pull down on the beaded end until it snap locks into the keyhole .
6. Check to make sure the strap is securely laced and locked to the brackets .




1532, S. Washington Avenue
Piscataway, NJ 08854
E-mail: info@dreamonme.com

www.dreamonme.com

Follow us on



@dreamonmeinc

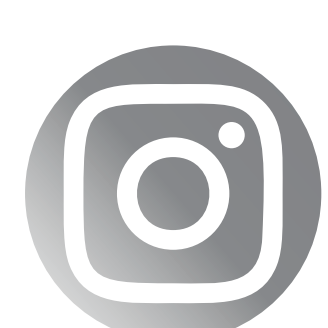

@dreamonmeinc

to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.



DOM
FAMILY

