


# COMBO CHEST

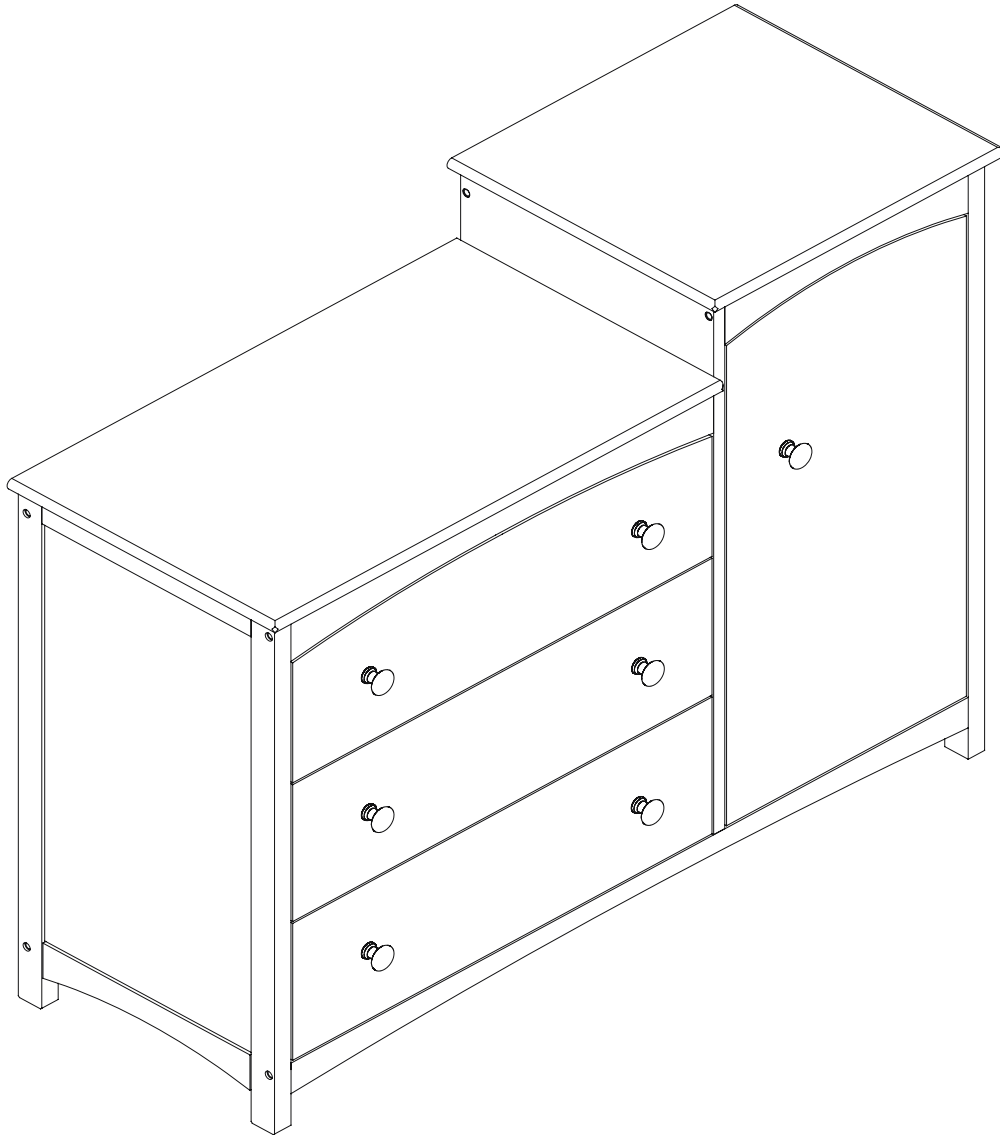

Scan the QR code to register your product  
<https://dreamonme.com/customer care/registration/>



## Assembly Instructions

Model shown is example only. Styles may vary

# ASSEMBLY INSTRUCTIONS

Adult assembly required.  
Small parts may present choking hazard prior to assembly.


Enclosed please find simple step-by-step instructions to help you quick assemble your product. Before you begin, we recommend that you follow the steps below:

1. Please read the instructions thoroughly
2. Identify all parts and hardware
3. You may need to provide the following tools:
  - Philips Head screw driver
  - Flat head screw driver
  - Hammer

**⚠ Do Not Use Power Drills Or Drivers**

To protect your parts during assembly please place them on a soft surface. To clean surface, use only water on a damp cloth. Do not use window cleaner or cleaning abrasive as it will scratch the surface and could damage the protective coating.

---

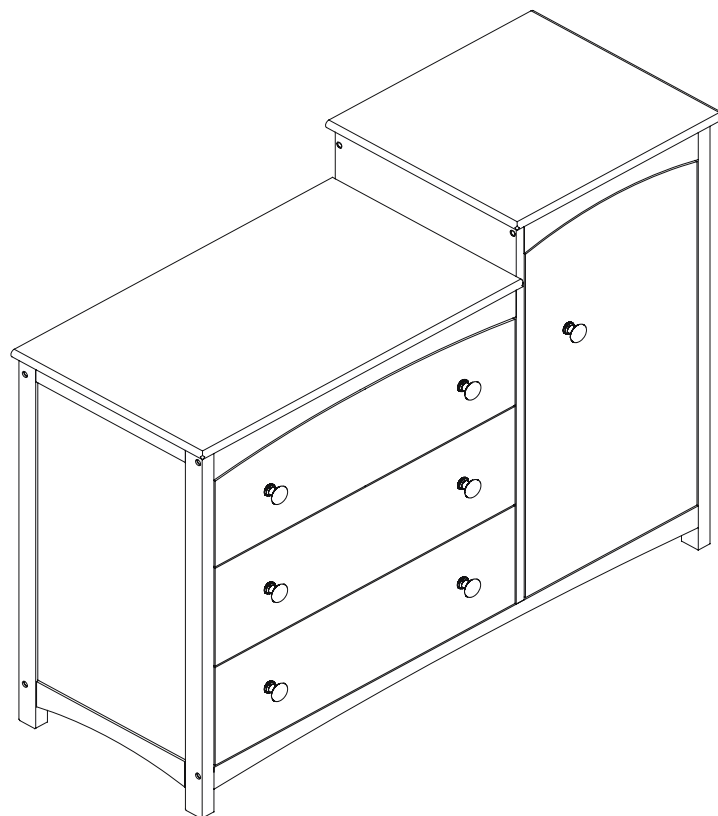

Model shown is example only.  
Styles may vary.

---

Dream On Me Inc., 1532 S Washington Ave, Piscataway Township, NJ 08854

# **Furniture Care Instructions**

## **Room Climate Control**

Wood, when first cut contains more than 50 percent water. When it is prepared for furniture construction it is placed in a Kiln and the moisture content is brought down to 8 to 10 percent. Wood is porous and responds to its environment. If the room has high humidity it will absorb it and expand and if the humidity is low it will lose moisture and shrink.

It is important that the humidity levels in the room be controlled from extremes of too much humidity or too little. Furniture should not be placed close to air-conditioning outlets, fire places, radiators, space heaters, humidifiers or dehumidifiers. Exposure to extreme variations of temperature and humidity can damage any fine wood product.

## **The Ideal Environment for Fine Furniture**

Fine wood furniture will have fewer problems when its environment is controlled at a temperature between 65 and 75 degrees and a relative humidity between 35 and 40 percent. Wood placed in an environment out side of those limits can and will shrink or expand and may develop some small cracks which are not material or structural defects.

## **Sticking Doors and Drawers**

With the minor changes in temperature and humidity doors and drawers may swell and be difficult to open or close. Tolerances have been built into the units but extreme conditions may still cause sticking. This will adjust back to normal over time but until it does consider using a dehumidifier or rub candle wax or paraffin on the sides that stick.

## **Avoid Direct Sunlight**

Keep the furniture out of direct sunlight. Ultraviolet rays will fade colors and in some cases darken them. It can also cause crazing or hair line cracks in the finish. White finishes will yellow naturally over time and exposure to direct sunlight will hasten this natural process along with some woods darkening naturally over time; this is not considered to be a quality defect.

## **Proper Storage**


If you need to put your furniture in storage for any period of time do not store them in a damp basement or hot dry attic. Allow air movement around the furniture and do not stack anything on it.

## **In General**


- Protect furniture surface from hot or extremely cold items.
- Use coasters under hot or cold beverages
- Do not use synthetic fabric under accessories or lamps
- Protect tops from pens, markers and crayons
- Oils from potpourri and other scented items can damage the furniture finish.
- Do not drag items across the surface of the furniture.
- Allow the surface to breath by rotating your accessories and lamps.
- Do not over polish the furniture, do it only two or three times a year. Over polishing can distort the natural finish of the product.
- Do not wax the furniture as wax build up can destroy the natural finish of the product
- When moving furniture always lift the unit. Do not push or drag it to avoid damage to legs
- Keep the furniture level so doors and drawers open and close freely.
- Clean with a damp, not wet, cloth. Use only a mild soap. Do not use abrasive cleaners.

# ASSEMBLY INSTRUCTIONS


## PARTS AND TOOL DIAGRAM

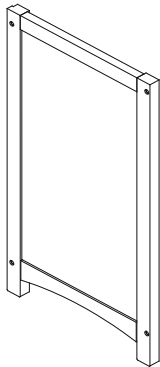


(3) LEFT SIDE

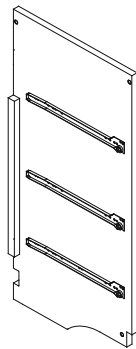


(4) MIDDLE PANEL

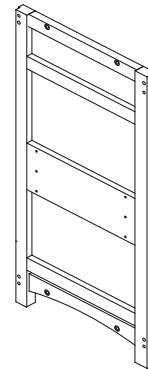


(5) RIGHT SIDE

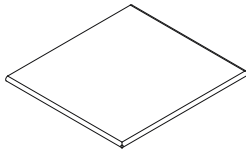


(1) HIGHT TOP PANEL

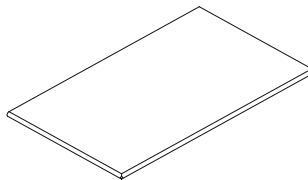


(2) LOW TOP PANEL

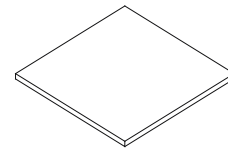


(6) SHELF

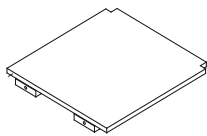


(7) BOTTOM PANEL




(8) DOOR




(15) RIGHT BACK PANEL

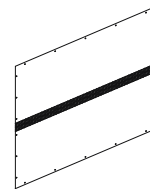


(16) LEFT BACK PANEL

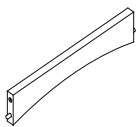


(9) TOP FRONT SHORT RAIL

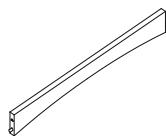


(10) TOP FRONT LONG RAIL




(11) TOP BACK SHORT RAIL

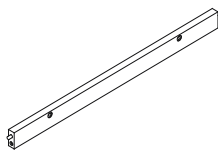


(12) TOP BACK LONG RAIL

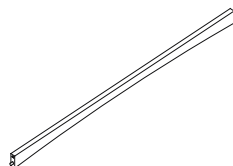

(13) BOTTOM FRONT RAIL

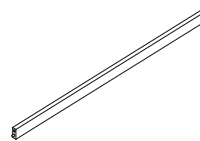

(14) BOTTOM BACK RAIL

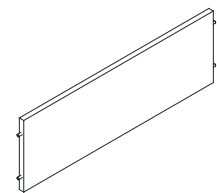


(17) WEIGHT BACK PANEL


# ASSEMBLY INSTRUCTIONS

## PARTS AND TOOL DIAGRAM


### DRAWER PARTS

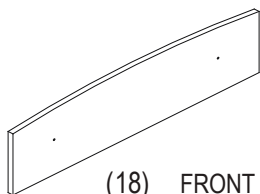


(18) FRONT PANEL x 1

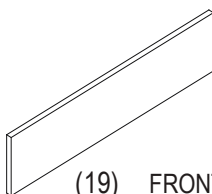


(19) FRONT PANEL x 2




(20) BOTTOM SUPPORT x 3

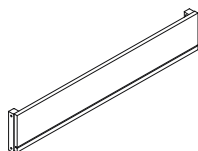


(21) BACK x 3

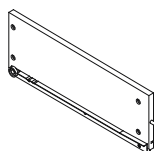

(22) LEFT PANEL x 3

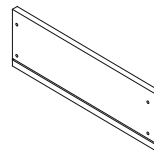


(23) RIGHT PANEL x 3

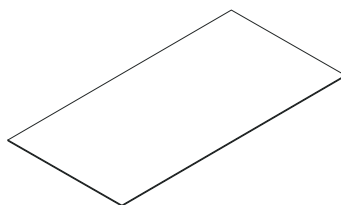


(24) BOTTOM PANEL x 3

# ASSEMBLY INSTRUCTIONS


## HARDWARE AND TOOL DIAGRAM

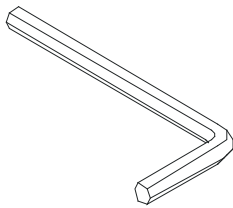


(A) ALLEN WRENCH




(B) KNOB x 7




(C) 1-1/4" SCREW x 7




(D) 1-1/4" BOLT x 12



(E) 5/8" BACK SCREWS x 40




(F) 1" SCREW x 24




(G) PUSH PIN x 18




(H) FLAT WASHERS x 12




(M) SHELF PIN x 4




(N) SHELF SCREW x 4




(O) DOOR PIN




(P) DOOR PINE SCREW x 2




(Q) 5/8" BOLT x 2




(R) 5/8" SCREW x 12



(S) DOOR HINGE x 2




(T) "L" BRACKET

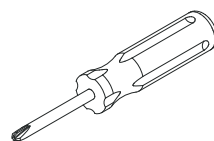


(NOT PROVIDED)

# ASSEMBLY INSTRUCTIONS

## STEP 1

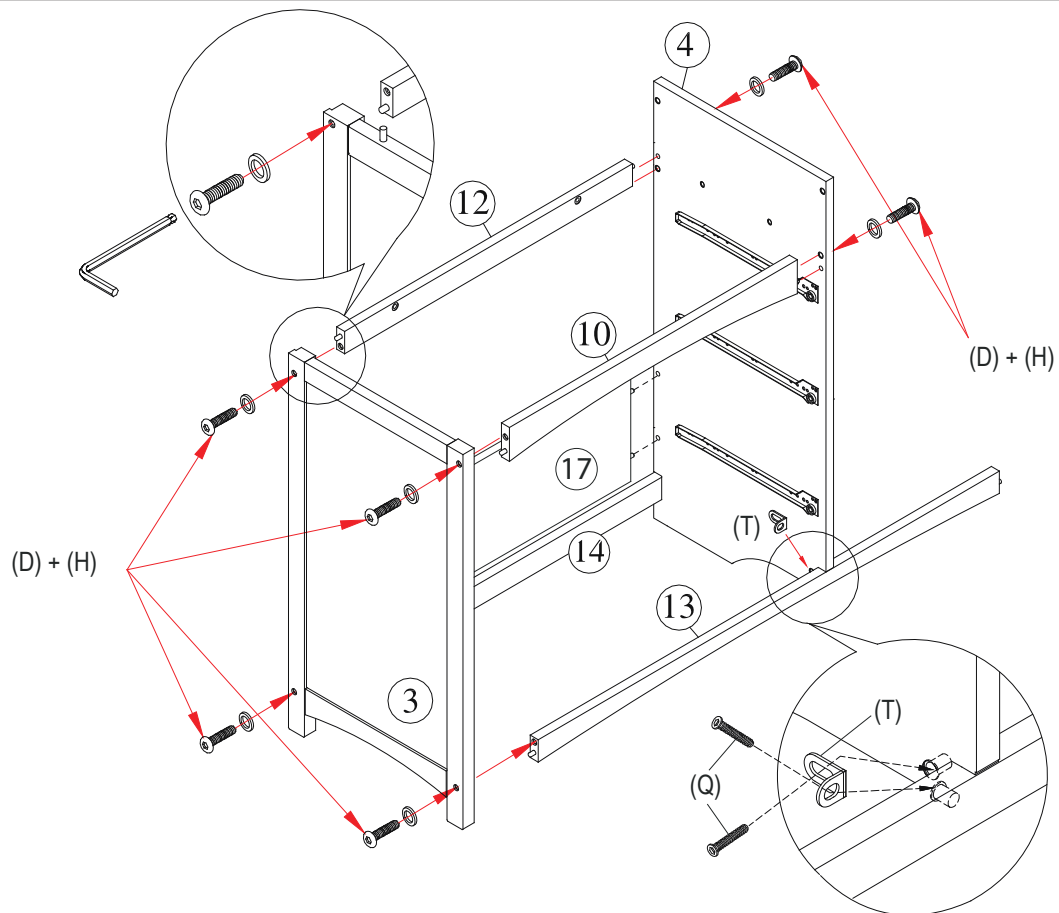


## STEP 2

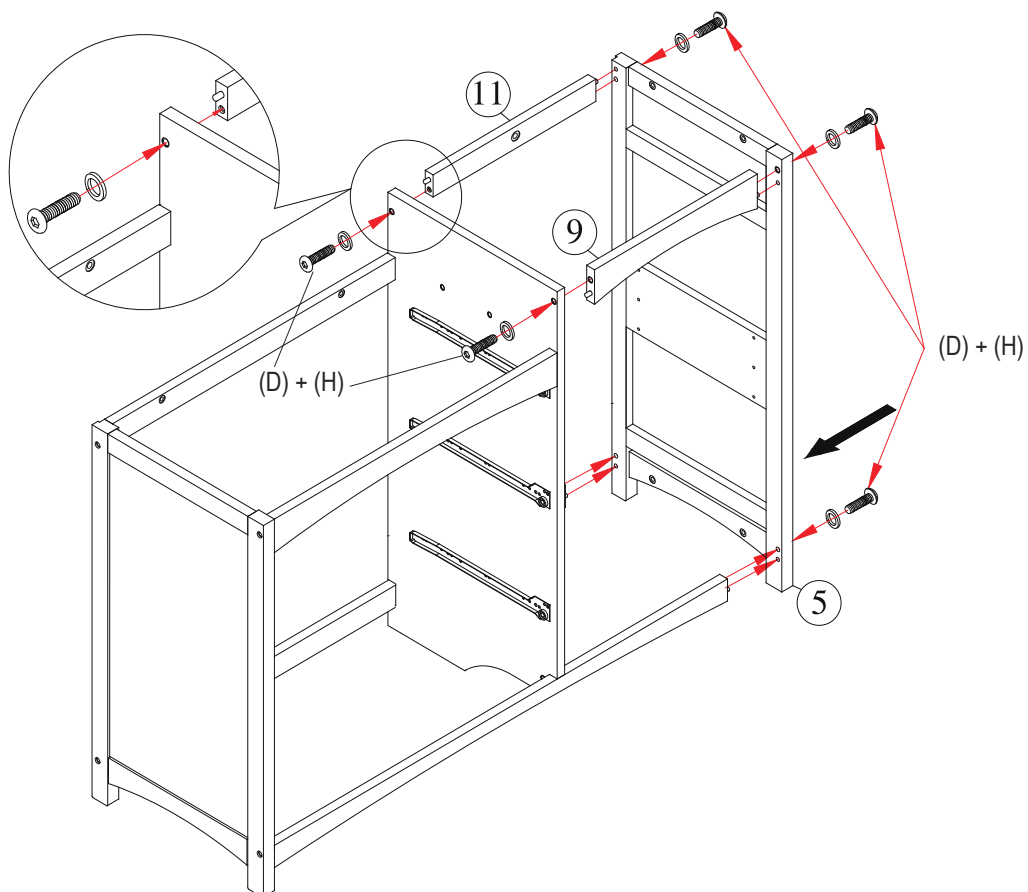


## ASSEMBLY INSTRUCTIONS

### STEP 3

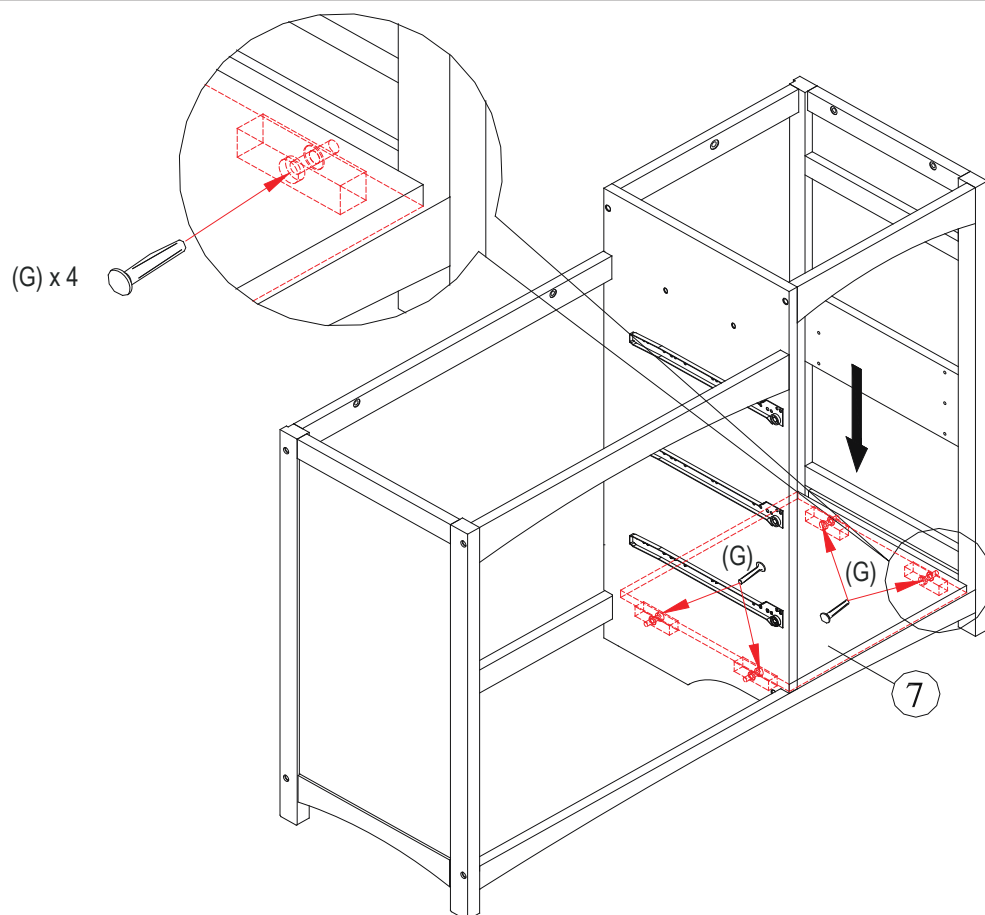


### STEP 4

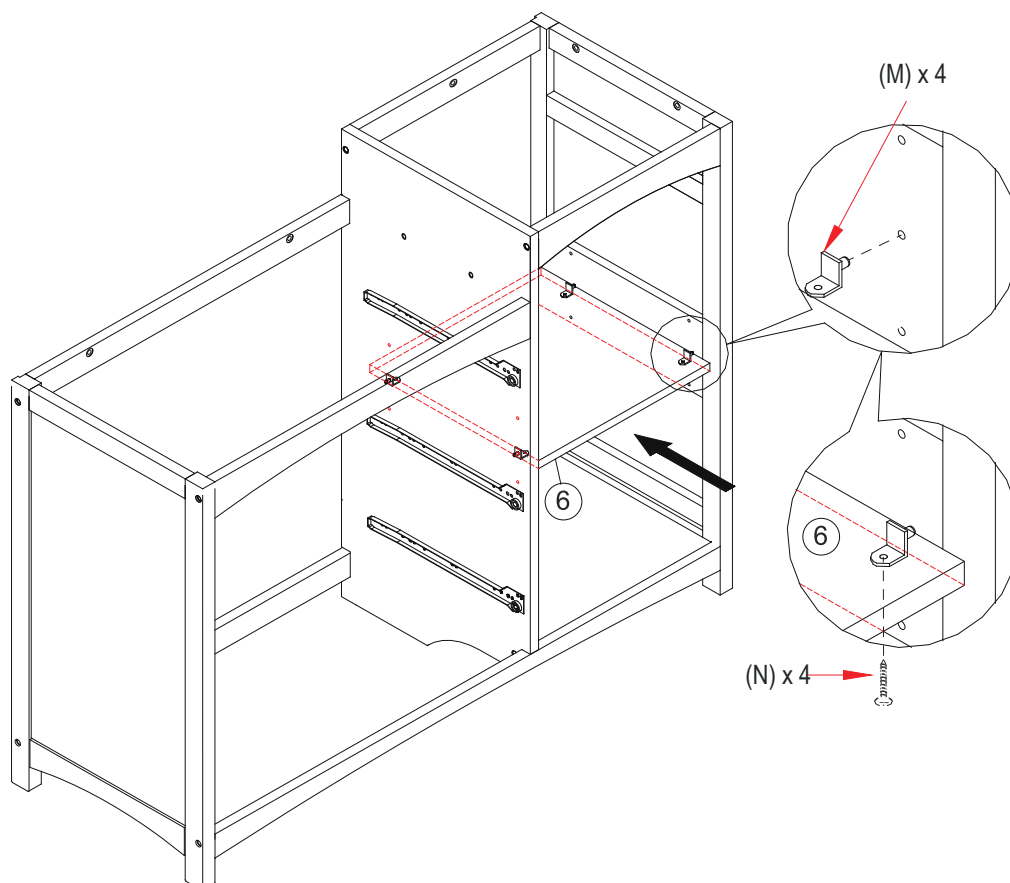




## ASSEMBLY INSTRUCTIONS

### STEP 5

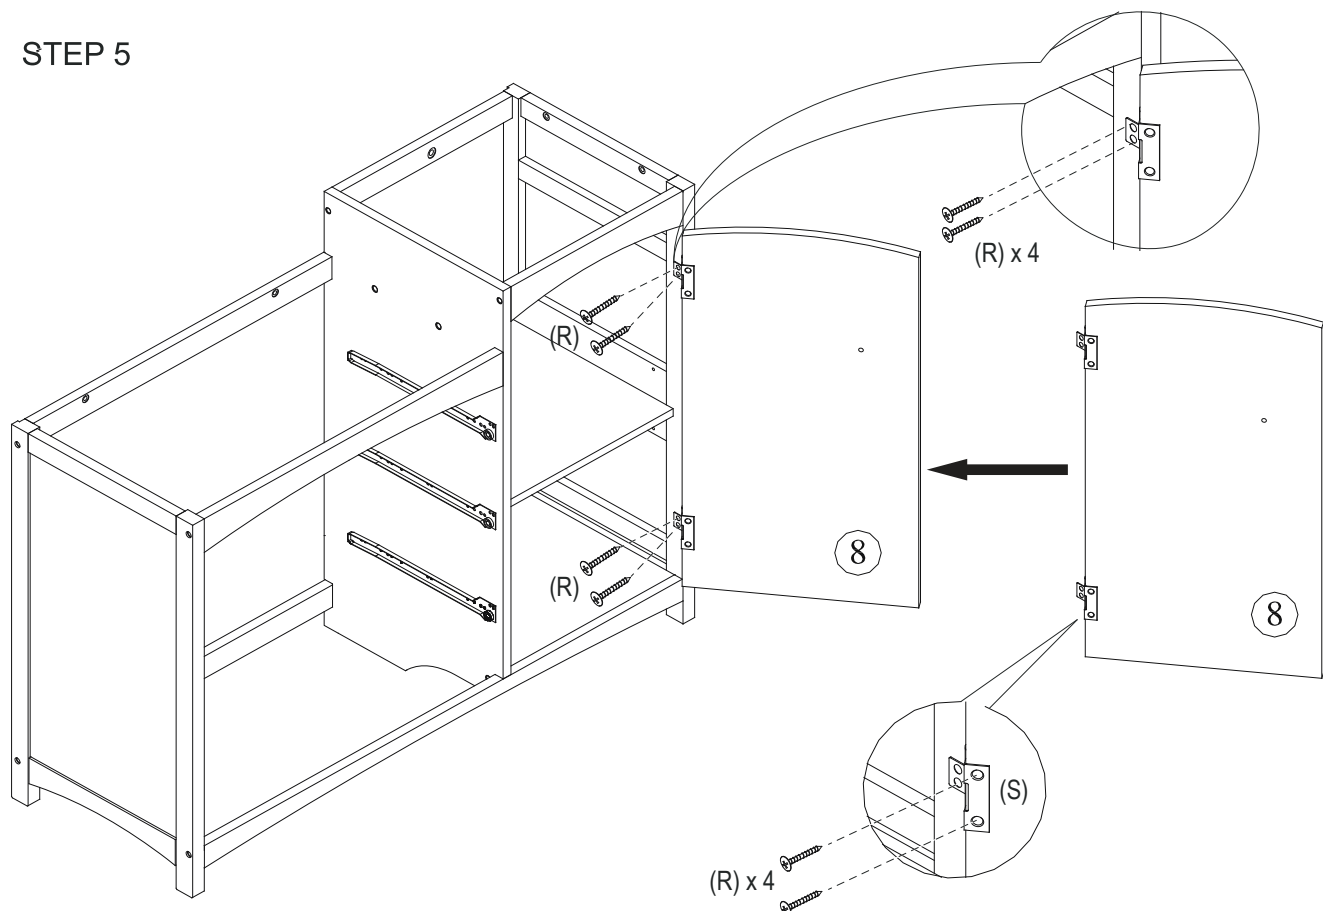


### STEP 6

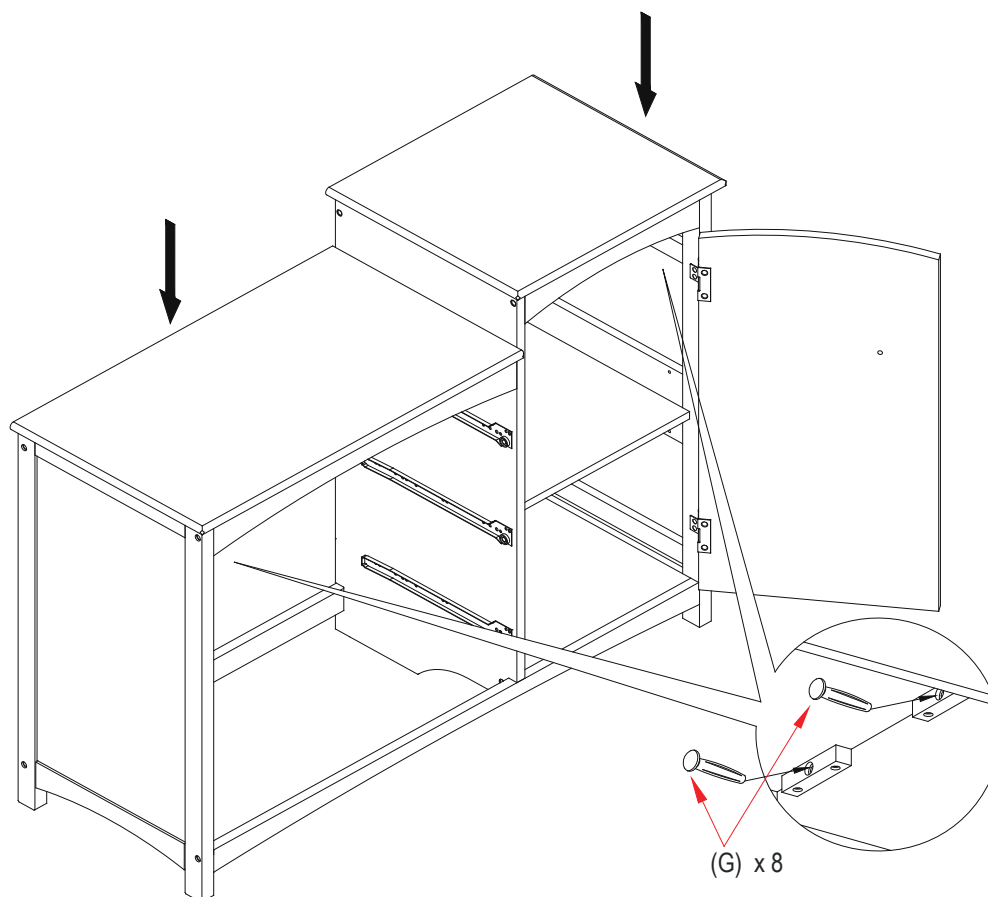


## ASSEMBLY INSTRUCTIONS

### STEP 7

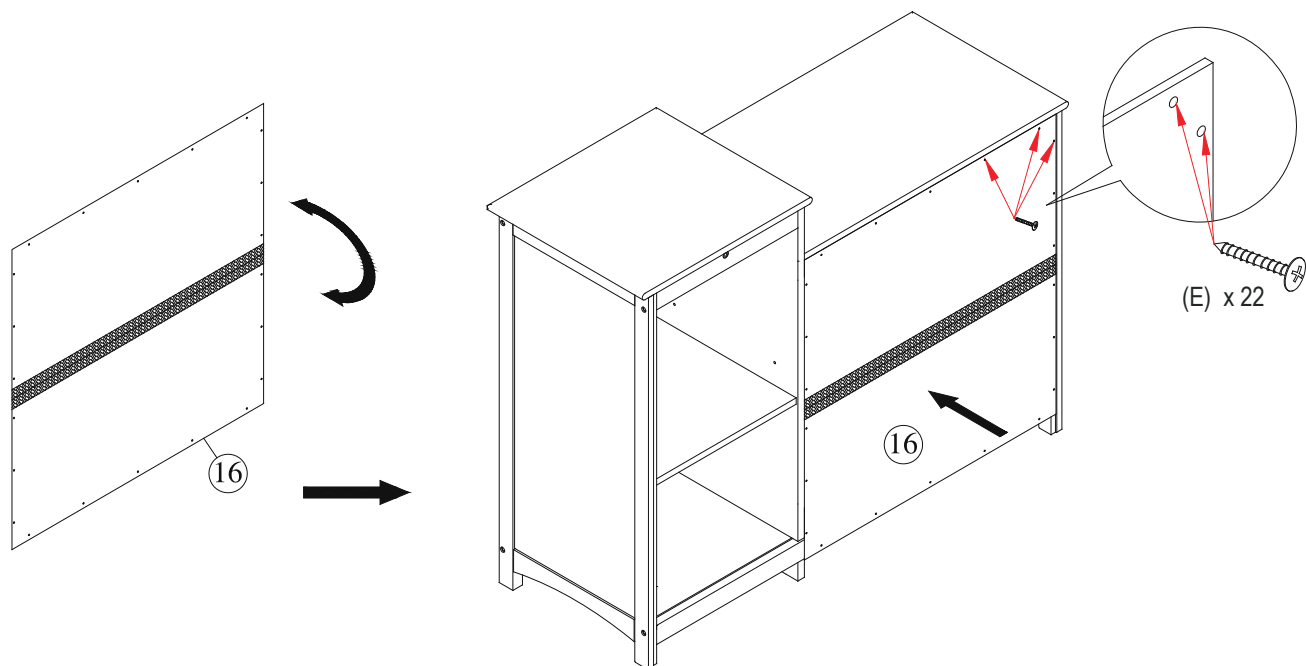


### STEP 8

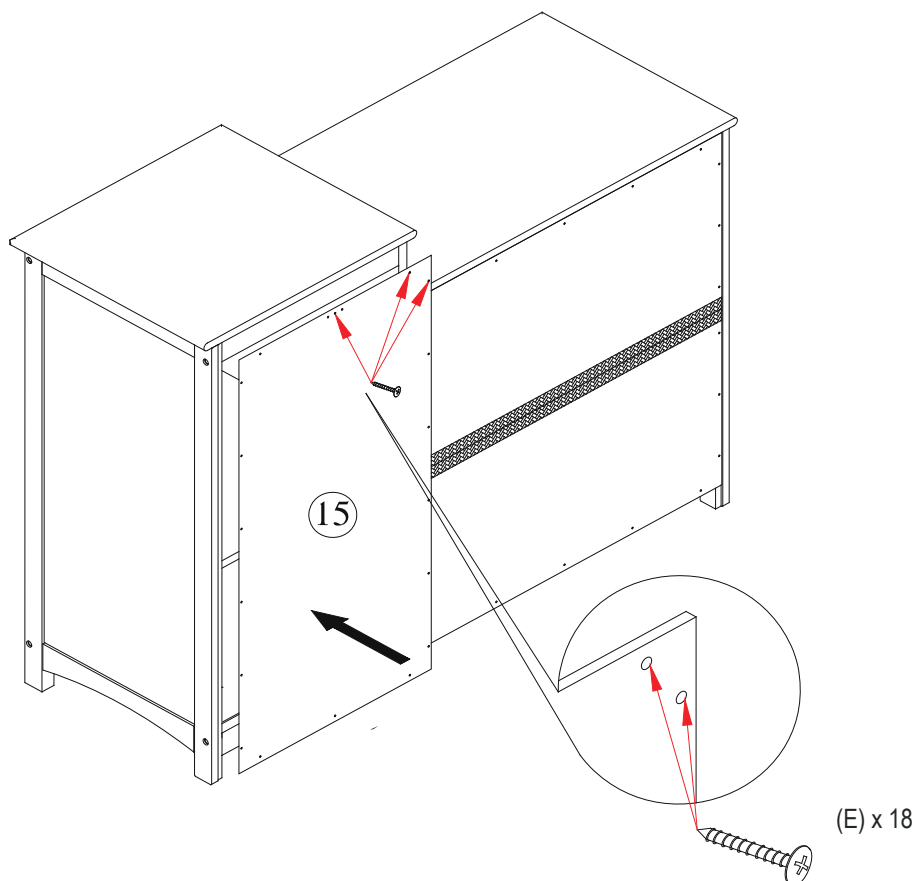


## ASSEMBLY INSTRUCTIONS

### STEP 5 DRAWER BOX

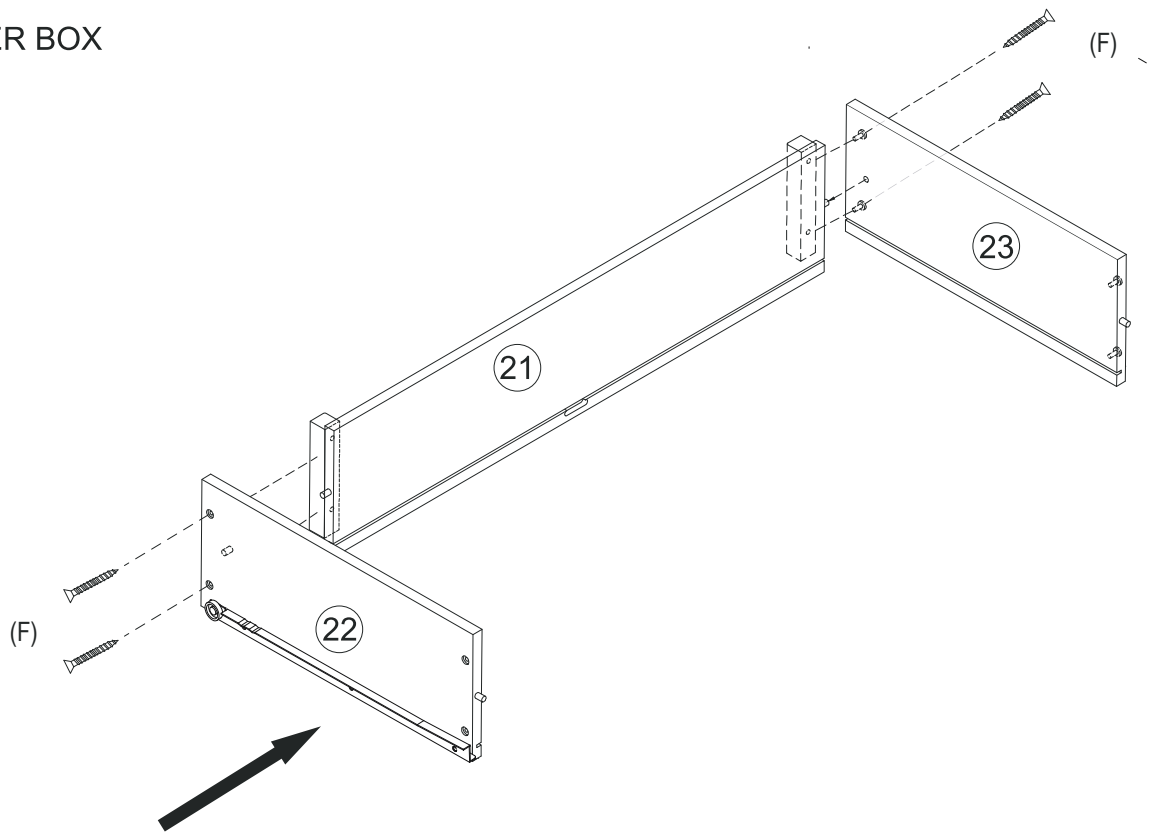


### STEP 6 DRAWER BOX

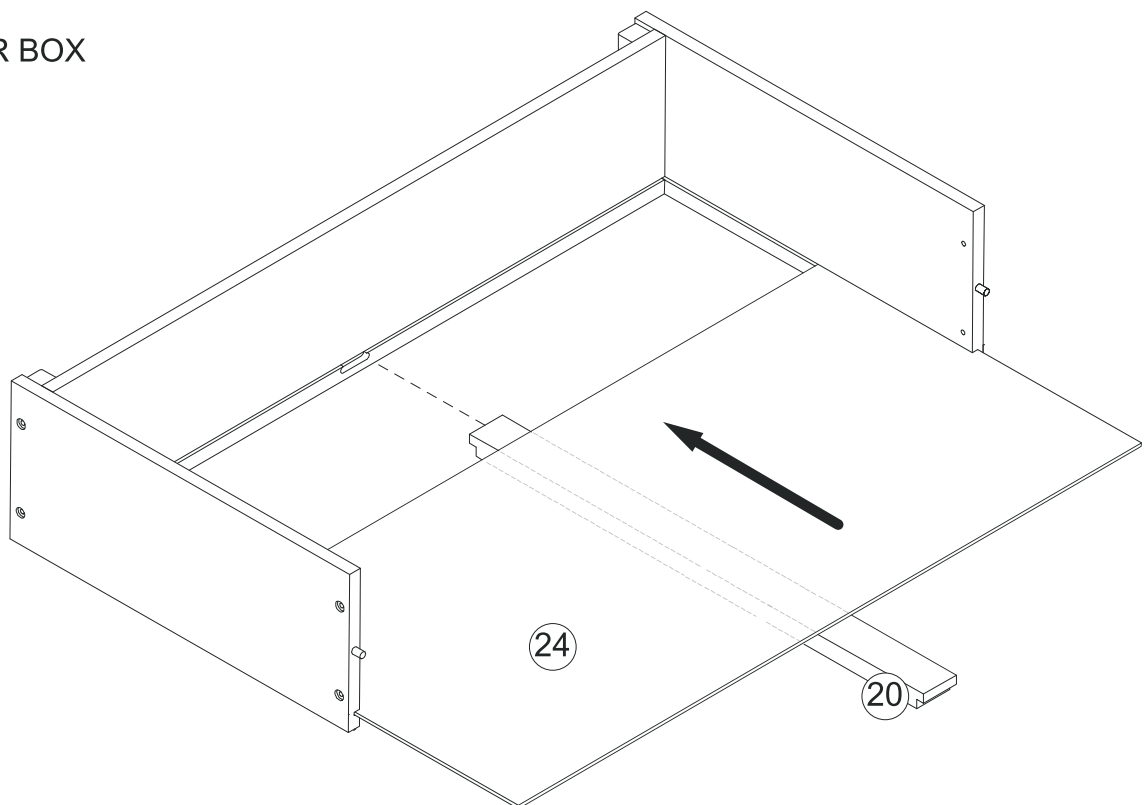


## ASSEMBLY INSTRUCTIONS

### STEP 7 DRAWER BOX


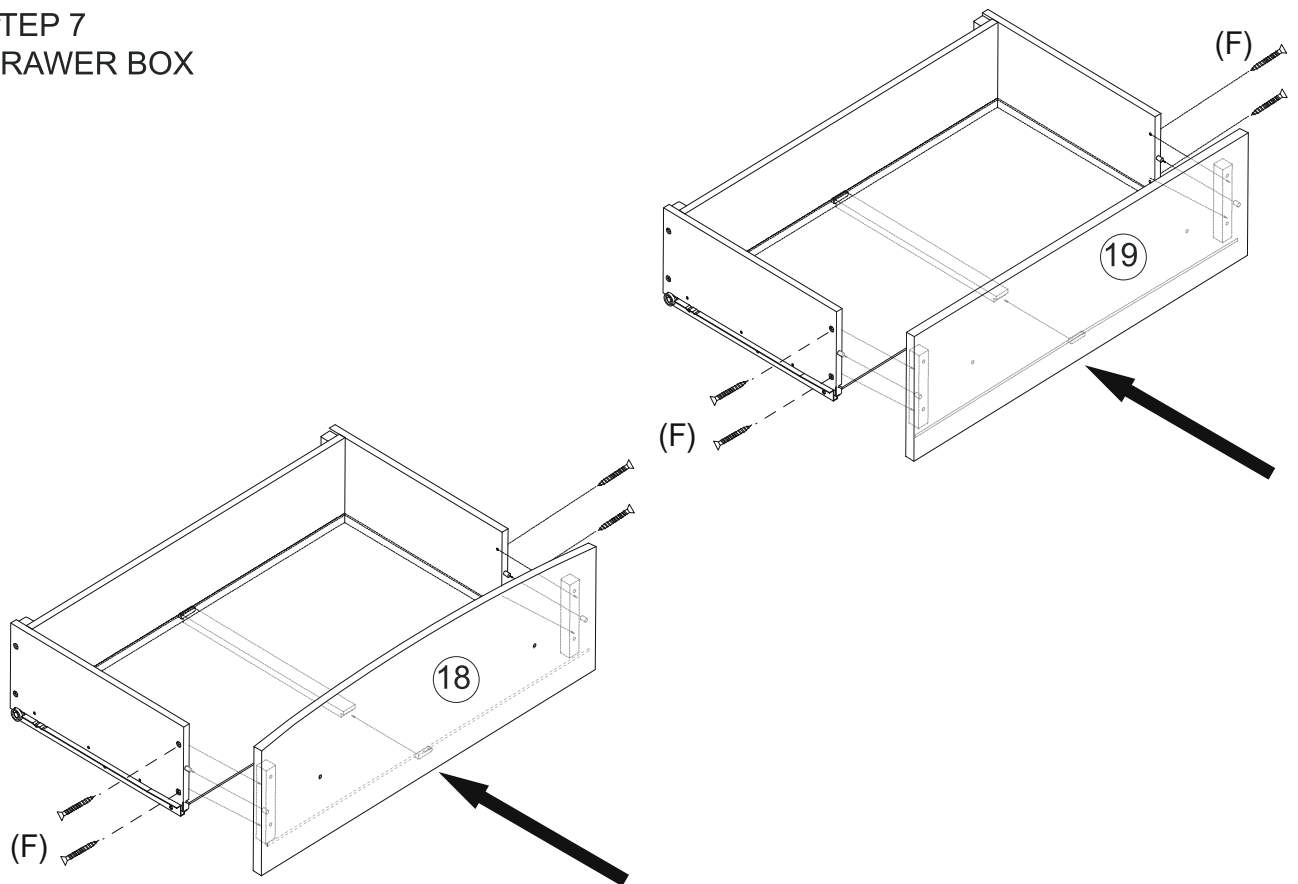


### STEP 8 DRAWER BOX

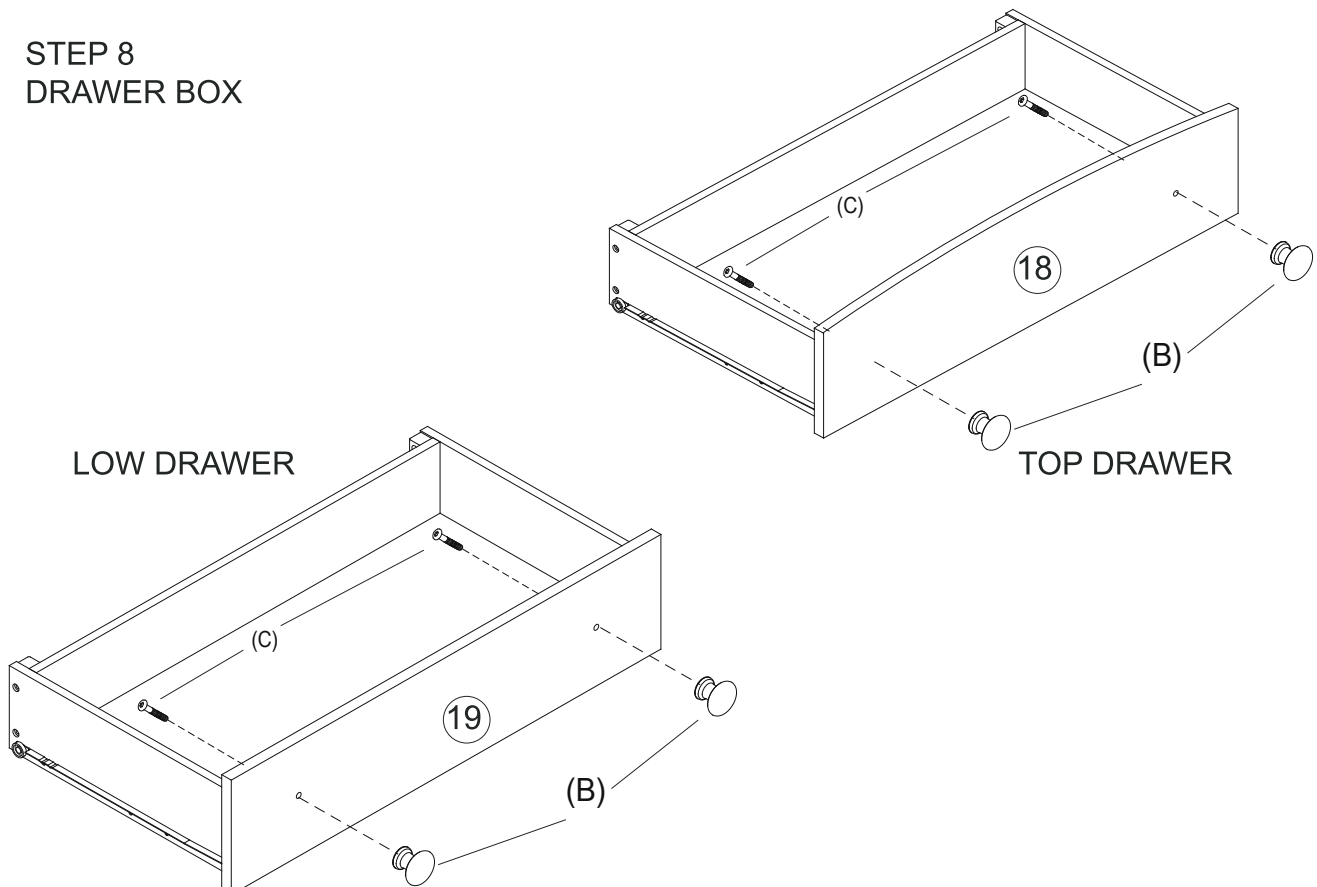


# ASSEMBLY INSTRUCTIONS

## STEP 9

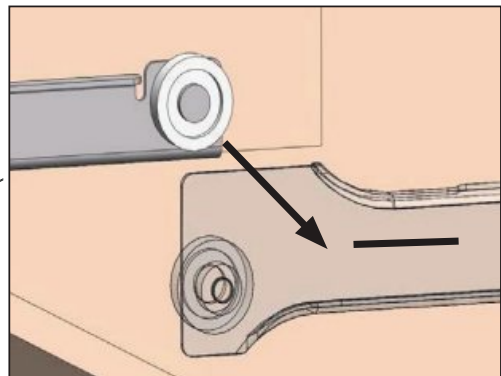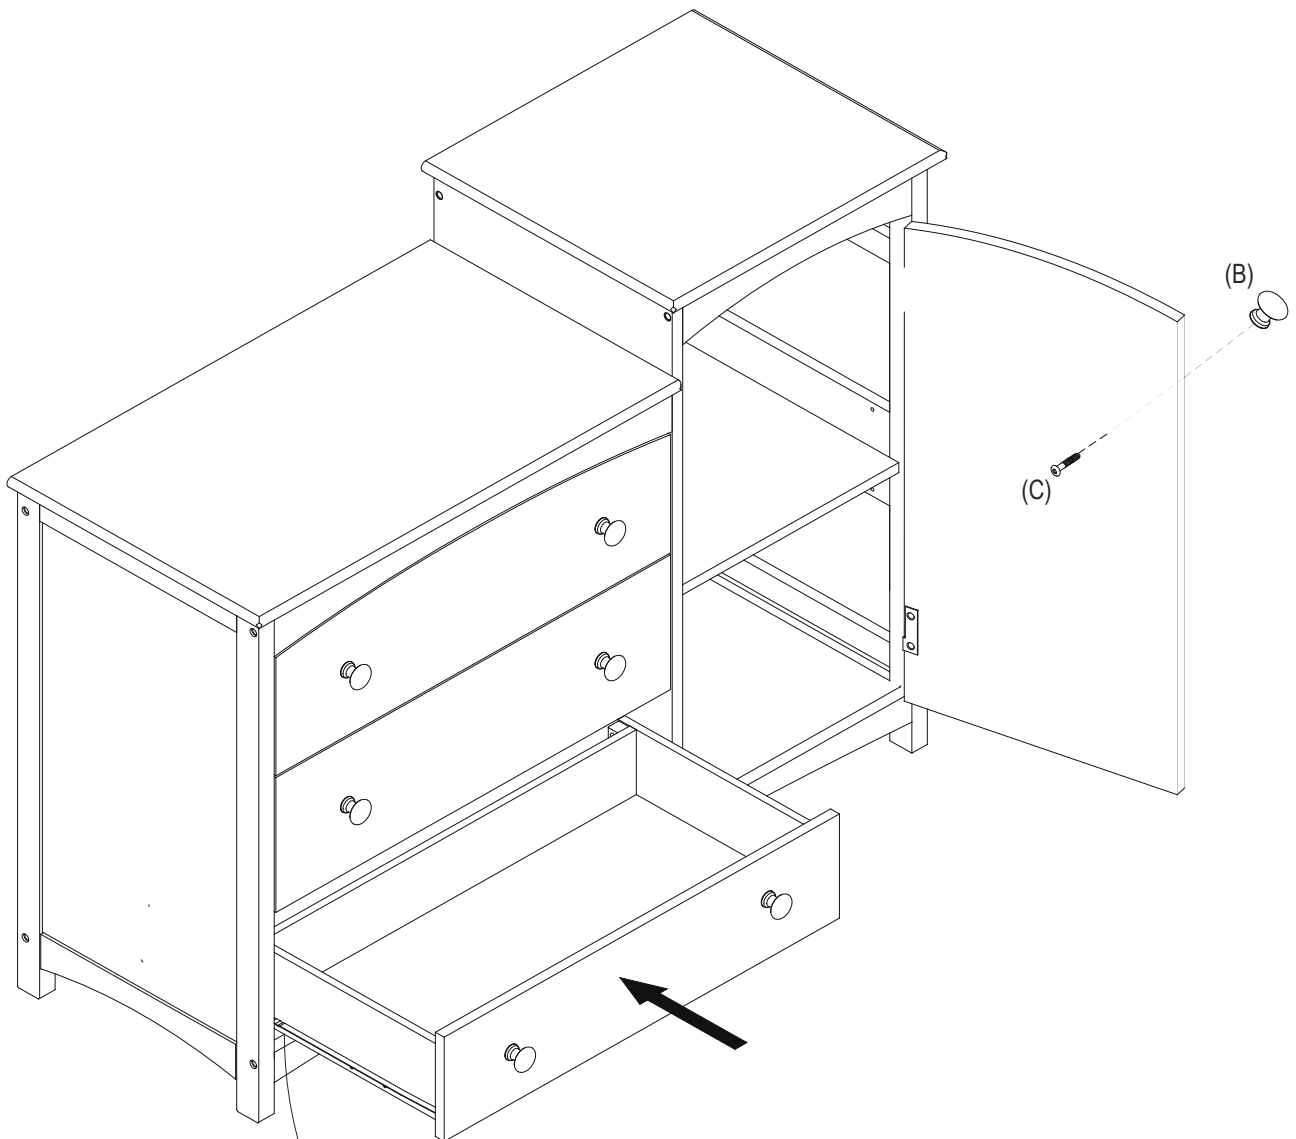

## ASSEMBLY INSTRUCTIONS

### STEP 10

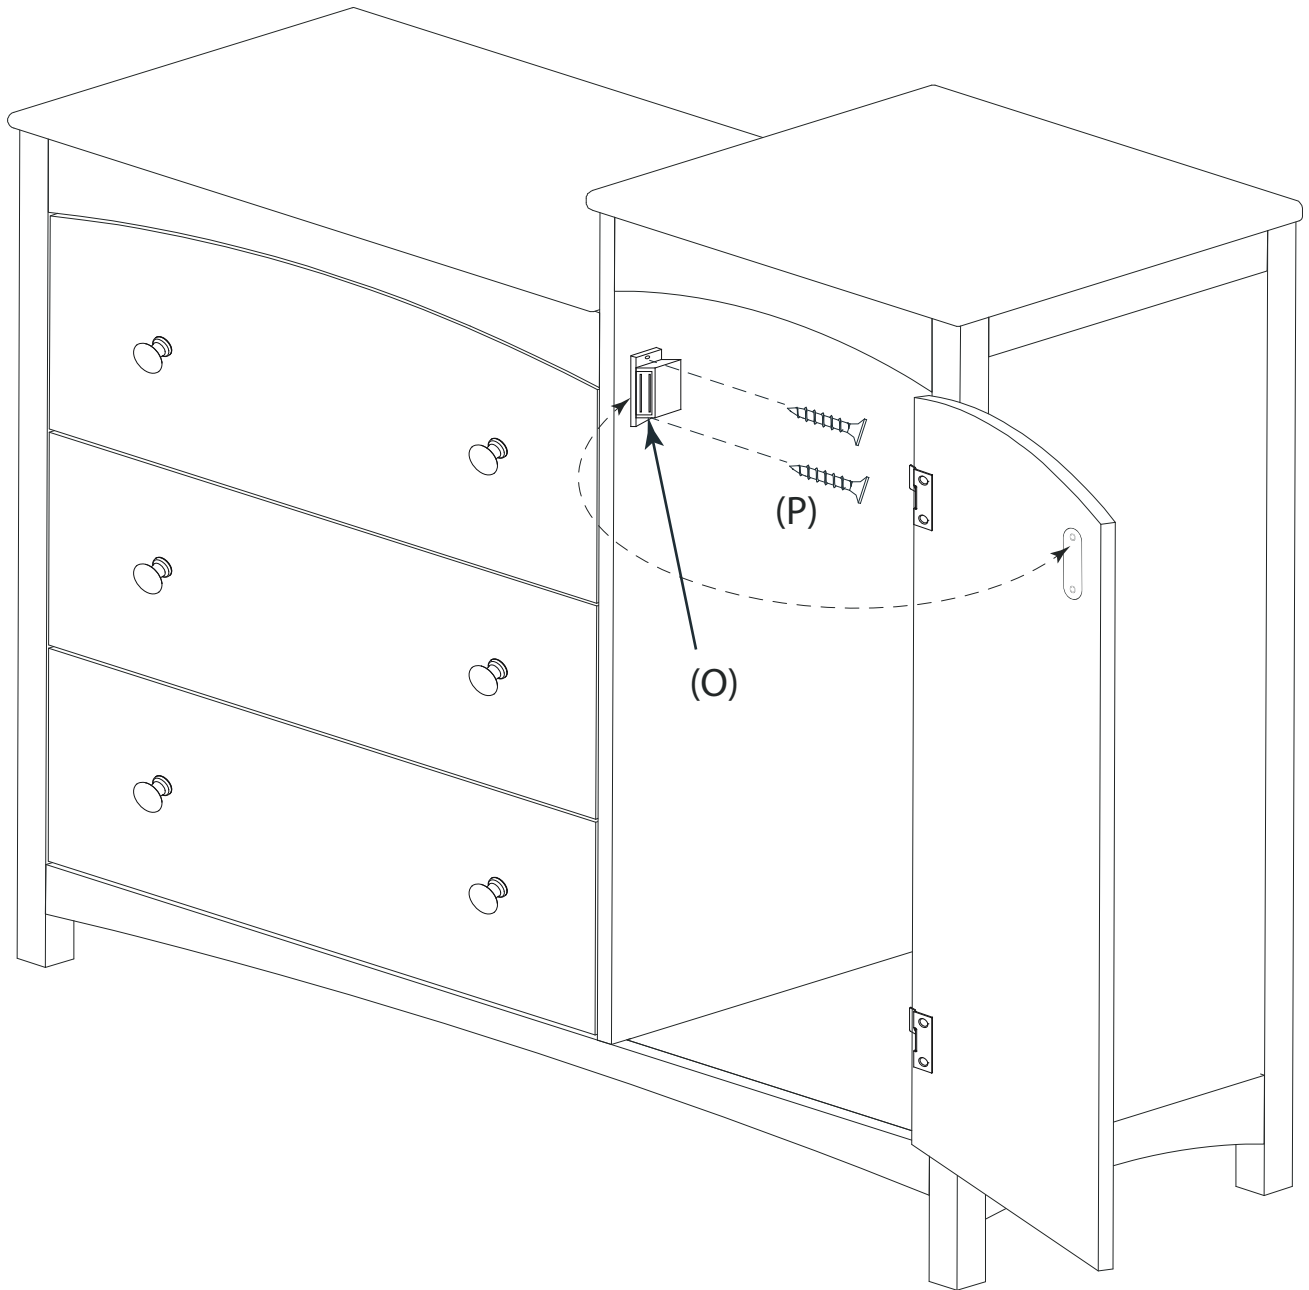



1532, S. Washington Avenue  
Piscataway, NJ 08854  
E-mail: [info@dreamonme.com](mailto:info@dreamonme.com)

[www.dreamonme.com](http://www.dreamonme.com)

Follow us on



**@dreamonmeinc**



**@dreamonmeinc**

to get your nursery featured on our social media.

**Enter our monthly giveaway!**

Simply scan the QRcode to register.



**Chat with us!**

For any questions or concerns or feedback.



**DOM**  
FAMILY

