

Dream On Me Inc.
1532 S Washington Ave
Piscataway Township
NJ 08854
Email: info@dreamonme.com
www.dreamonme.com



ASSEMBLY INSTRUCTIONS

ITEM NO: 653

Adult assembly required.

Small parts may present choking hazard prior to assembly.

Enclosed please find simple step-by-step instructions to help you quickly assemble your products. Before you begin we recommend that you following the steps below:

- 1. Please read the instructions thoroughly.**
- 2. Identify all parts and hardwares**
- 3. You will need the following tools:**

Philips head screw driver


Flat head screw driver

Hammer

Do Not Use Power Drills or Drivers

To protect your parts during assembly please place them on a soft surface.

To clean surface use only water on a damp cloth. Do not use window cleaners or cleaning abrasives as it will scratch the surface and could damage the protective coating.

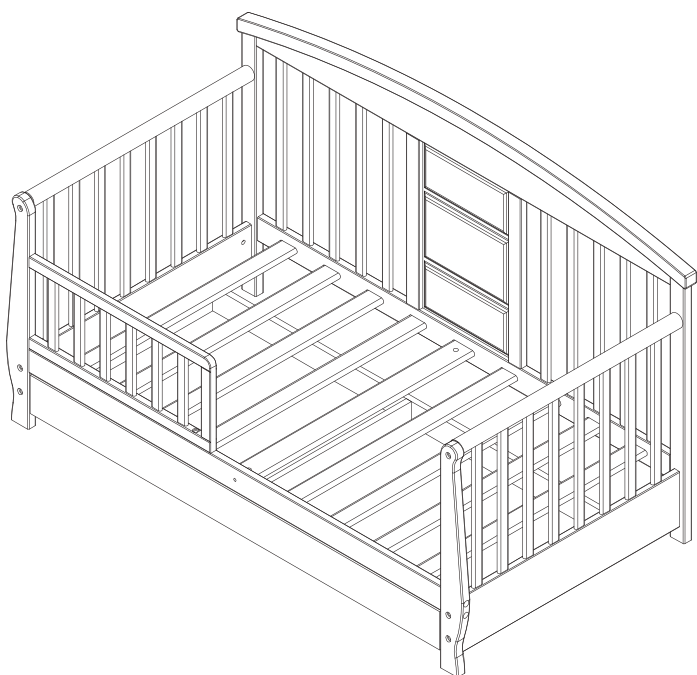

Scan the QR code to register your product
<https://dreamonme.com/customer care/registration/>






WARNING !


- FAILURE TO FOLLOW THESE WARNINGS AND THE ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.
- READ ALL INSTRUCTIONS BEFORE ASSEMBLING CRIB. KEEP INSTRUCTIONS FOR FUTURE USE.
- UPON COMPLETION OF ASSEMBLY, MAKE SURE ALL SCREWS, BOLTS AND FASTENERS HAVE BEEN SECURELY TIGHTENED.
A FREQUENT AND PERIODICALLY CHECK SHOULD BE MADE TO CONFIRM ALL THE SCREWS AND NUTS REMAIN TIGHT.
- NEVER USE THIS PRODUCT IF THERE ARE ANY LOOSE, MISSING FASTENERS, LOOSE JOINTS, BROKEN PARTS, OR TORN MESH/FABRIC. CONTACT DREAM ON ME 1532 S WASHINGTON AVE PISCATAWAY TOWNSHIP, NJ 08854 732-752-7220 FOR REPLACEMENT PARTS AND INSTRUCTIONAL LITERATURE IF NEEDED.
- NEVER SUBSTITUTE PARTS, THE PRODUCT INCLUDING SIDE RAILS, MUST BE FULLY ERECTED PRIOR TO USE.
- NEVER USE BED FOR INFANTS, THIS TODDLER BED IS NOT A SUBSTITUTE FOR A CRIB, THE TODDLER BED IS USED FOR A CHILD BETWEEN THE AGE OF 15 MONTHS TO 5 YEARS WITH A MAXIMUM WEIGHT OF 50 POUNDS (22.7KG).
- NEVER USE PLASTIC SHIPPING BAG OR OTHER PLASTIC FILM AS A MATTRESS COVERS NOT SOLD AND INTENDED FOR THAT PURPOSE, THEY CAN CAUSE SUFFOCATION.
- CAUTION ENTRAPMENT HAZARD: TO AVOID DANGEROUS GAPS, ANY MATTRESS USED IN THIS BED SHALL BE FULL SIZE CRIB MATTRESS AT LEAST 51-58IN (1310MM) IN LENGTH, 27-1/4IN (690MM) IN WIDTH AND 4IN (100MM) IN THICKNESS, OR GREATER, BUT NOT EXCEED 5IN.
- NEVER USE A WATER MATTRESS WITH THIS TODDLER BED.
- WARNING STRANGULATION HAZARD: STRINGS CAN CAUSE STRANGULATION! NEVER PLACE BED NEAR WINDOW WHERE CORDS FROM BLINDS OR DRAPES MAY STRANGLE A CHILD. NEVER SUSPEND STRINGS OVER BED.
NEVER PLACE ITEMS WITH A STRING CORD, OR RIBBON, SUCH AS HOOD STRINGS, PACIFIER CORDS AROUND A CHILD'S NECK. THESE ITEMS MAY CATCH ON BED PARTS.
- WARNING: INFANTS HAVE DIED IN TODDLER BEDS FROM ENTRAPMENT. OPENINGS IN AND BETWEEN BED PARTS CAN ENTRAP HEAD AND NECK OF A SMALL CHILD. NEVER USE BED WITH CHILDREN UNDER 15 MONTHS. ALWAYS FOLLOW THE ASSEMBLY INSTRUCTIONS.
- TO REDUCE THE RISK OF SIDS, PEDIATRICIANS RECOMMEND HEALTHY INFANTS BE PLACED ON THEIR BACK TO SLEEP, OR ADVISED BY YOUR PHYSICIAN.
- DO NOT USE BED IF THE SPACE BETWEEN BED AND SOLID OBJECTS IS LESS THAN 12IN (31CM), A CHILD COULD SLID INTO THE SPACE AND SUFFOCATE.
- IF REFINISHING, USE A NON-TOXIC FINISH SPECIFIED FOR CHILDREN'S PRODUCTS.
TO WASH, CLEAN WITH MILD SOAP AND DAMP CLOTH.
TO STORE, PLEASE KEEP IN A COOL PLACE.

MADE IN CHINA


COMPONENT PARTS

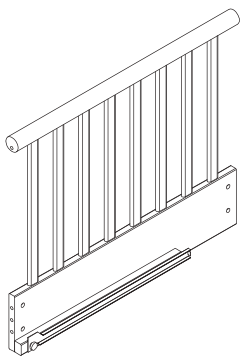

(A) Headboard (1pc)

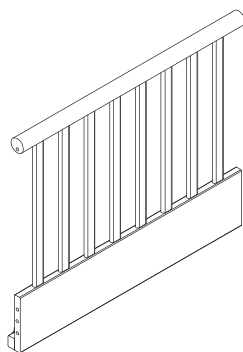

(B) Footboard (1pc)

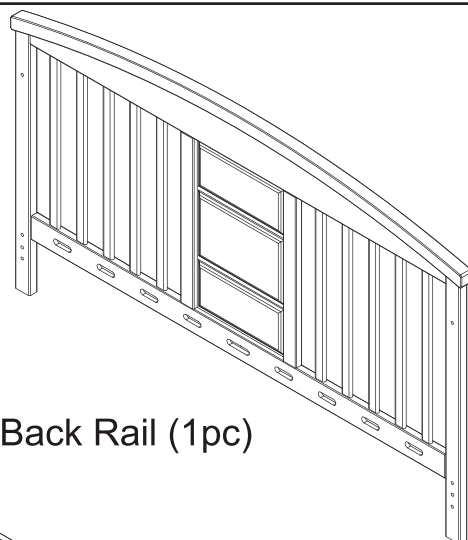

(C) Back Rail (1pc)




D




E


(D) Left Leg (1pc)
(E) Right Leg (1pc)

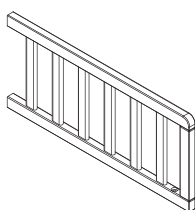


(F) Bed Rail (1pc)

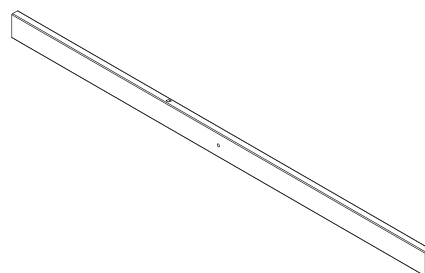


(G) Side Bar (1pc)

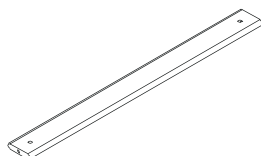


(H) Cross Middle Bar (1pc)

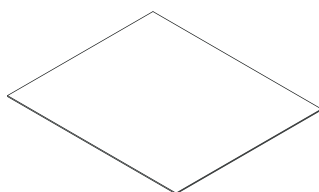


(I) Drawer Bottom panel
(2pcs)

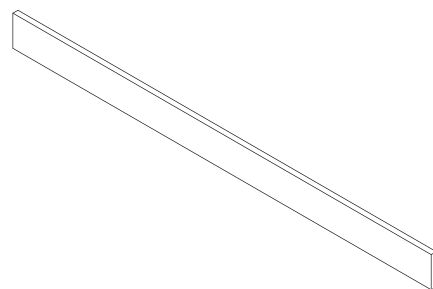


(K) Drawer Front Panel (1pc)

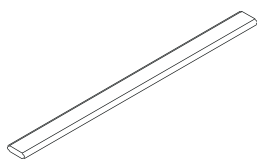


(J) Cross Bar (8pcs)

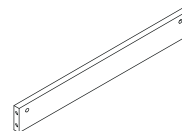

(N) Drawer Middle Panel
(1pc)

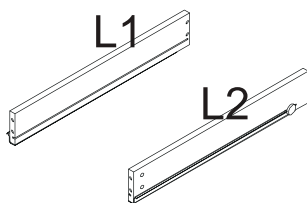


L1

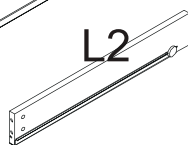


L2

(L1) Drawer Left panel (1pc)

(L2) Drawer Right panel (1pc)

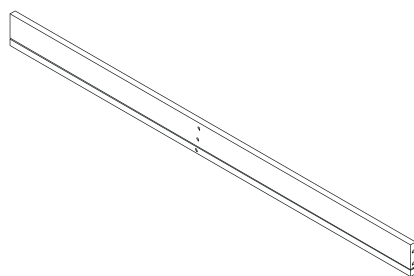


(M) Drawer Back Panel
(1pc)

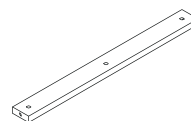


(O) Drawer Bottom Support
(1pc)

HARDWARE AND TOOL DIAGRAM

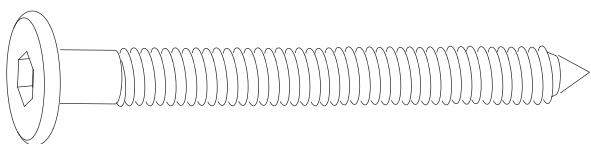


(a) Bolt 3' (5pcs)

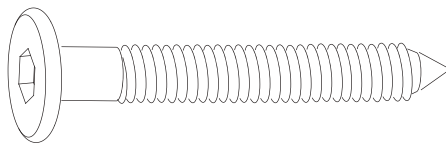


(b) Bolt 2-1/5' (14pcs)




(c) Barrel nut (19pcs)




(d) Allen Wrench (1pc)




(e) Bolt 1-3/5' (2pcs)

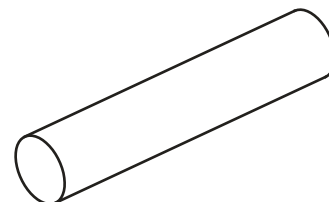

(f) Wood Dowel (6pcs)




(g) Cam Bolt (12pcs) (h) Cams (12pcs) (i) Wood Screw (1pc)




PHILLIPS-HEAD SCREWDRIVER REQUIRED
FOR ASSEMBLY — NOT INCLUDE

STEP 1

Connect the side bar (G) to the left leg (D) and the right leg (E) using barrel nuts (c) and bolts (a). Make sure that the hole on the side bar (G) are facing up, and nearer the left leg (D).

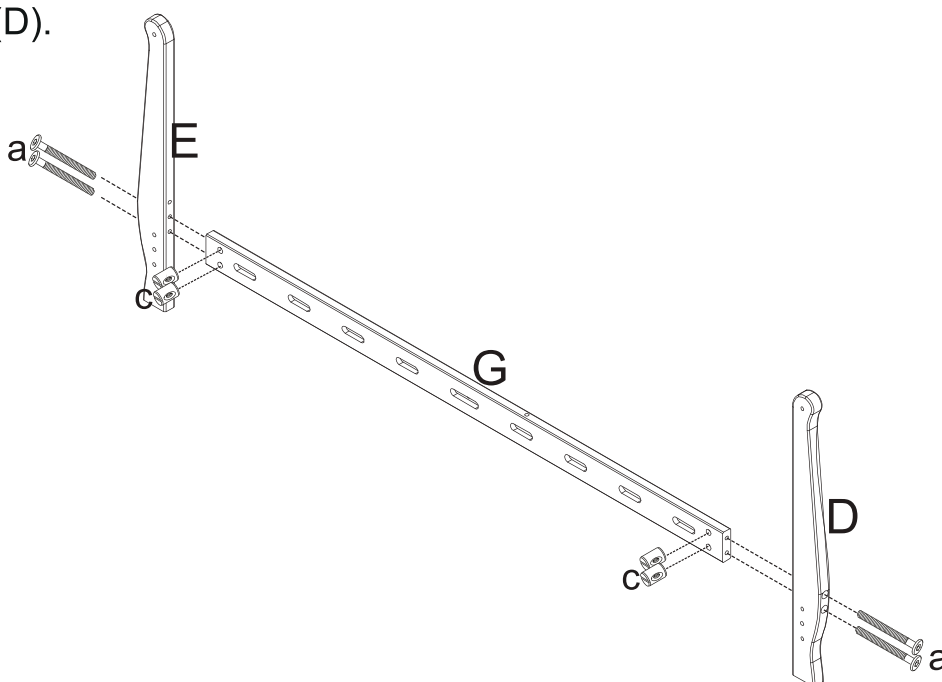


STEP 2

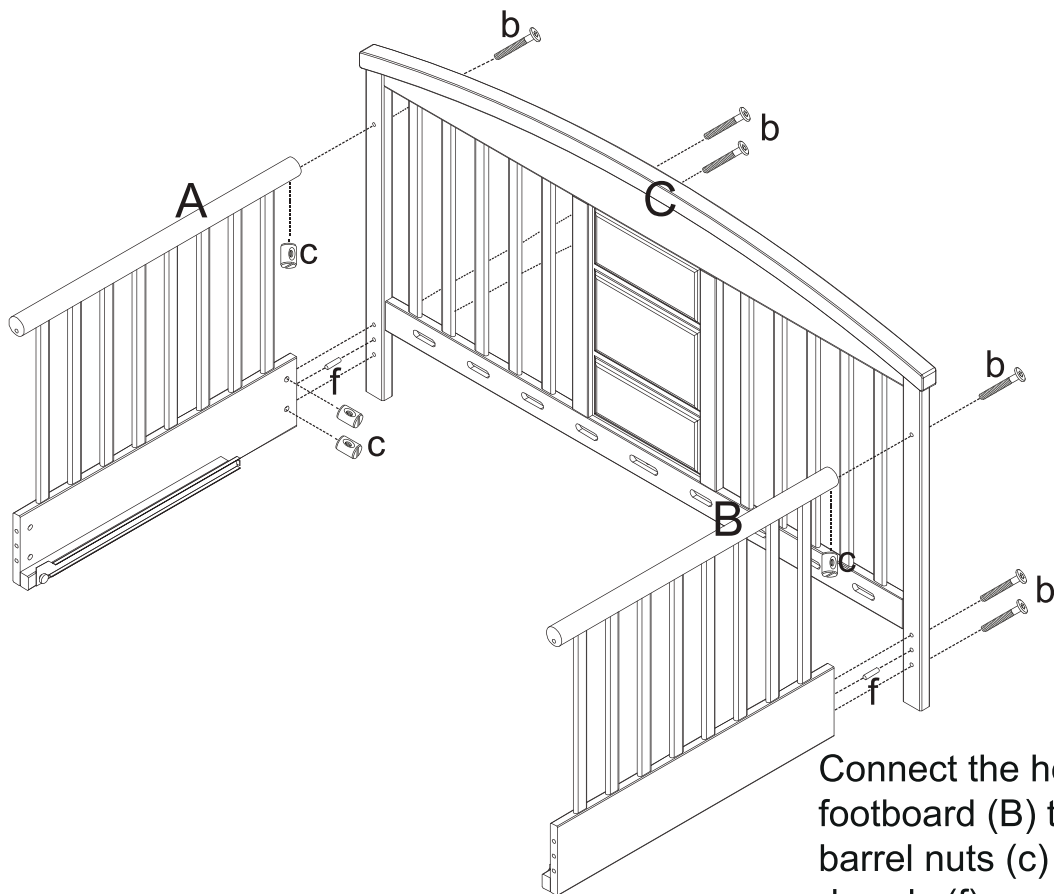


Connect the headboard (A) and the footboard (B) to the back rail (C) using barrel nuts (c) , bolts (b) and wood dowels (f) .

STEP 3

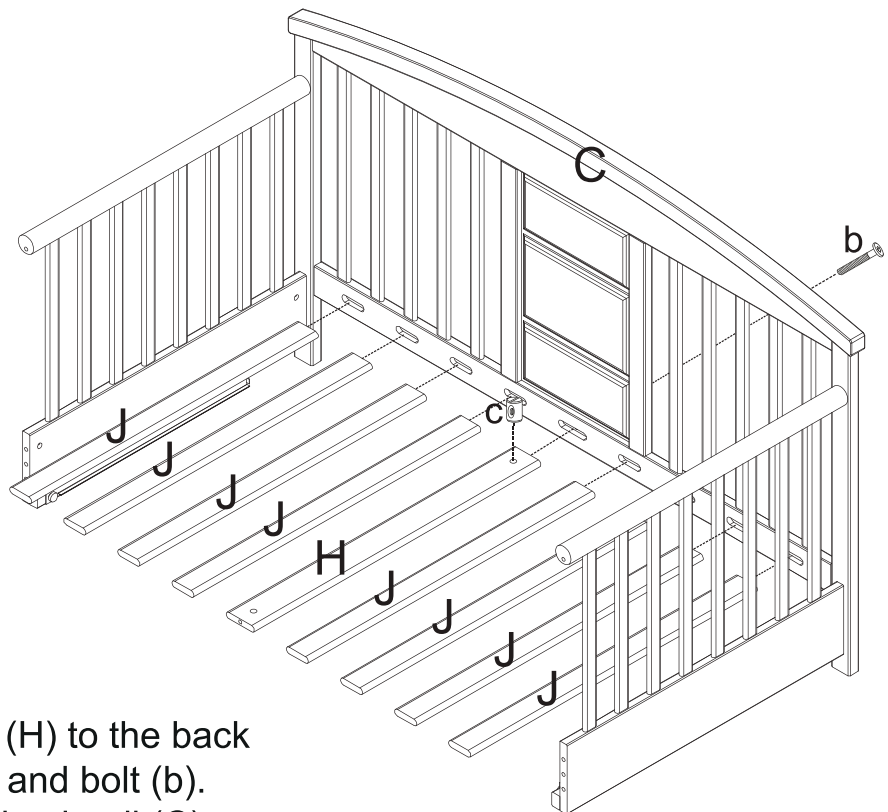

Connect Cross middle bar (H) to the back rail (C) using barrel nut (c) and bolt (b).
Attach cross bar (J) to the back rail (C).
Please note: the cross end should fit into hole.

STEP 4

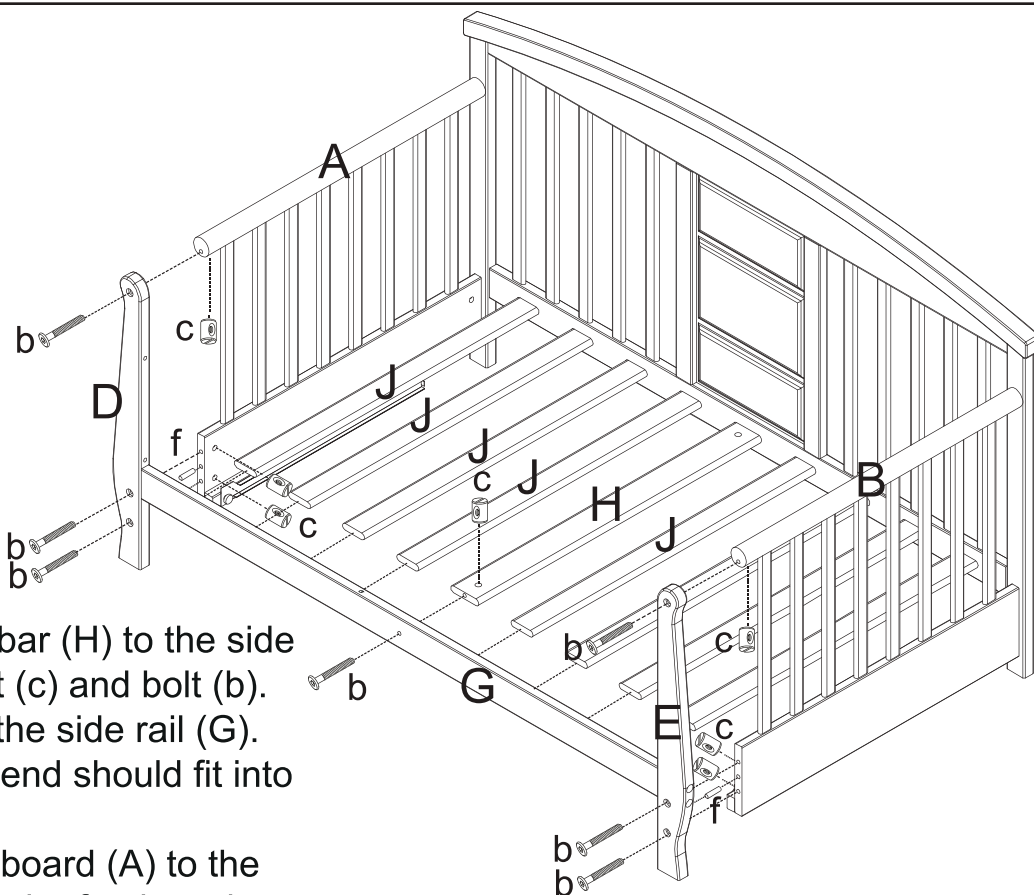


Connect Cross middle bar (H) to the side bar (G) using barrel nut (c) and bolt (b). Attach cross bar (J) to the side rail (G). Please note: cross bar end should fit into hole.


Then connect the headboard (A) to the left leg (D) and connect the footboard (B) to the right leg (E) using barrel nuts (c) bolts(b) and wood dowels (f) .

STEP 5

Connect the bed rail (F) to the left leg (D) using the barrel nut (c) and the bolt (a) and bolt (e). Then connect the bed rail (F) to the side bar (G) using the bolt (e) as shown.

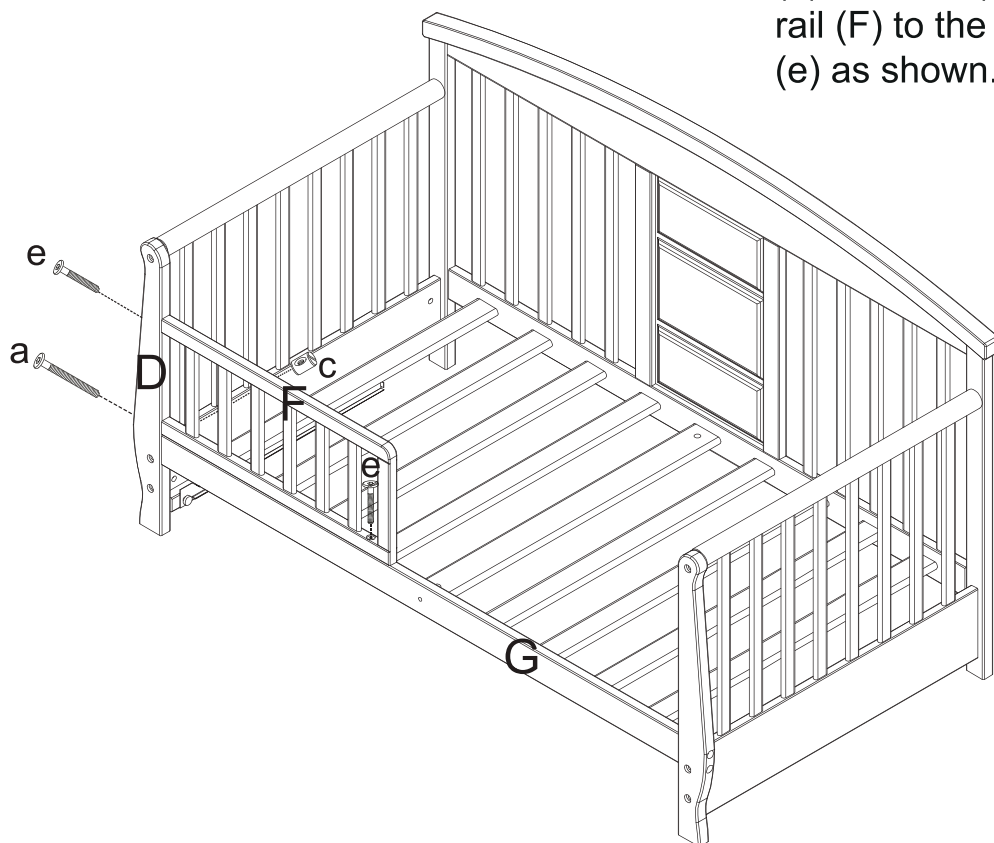


STEP 6

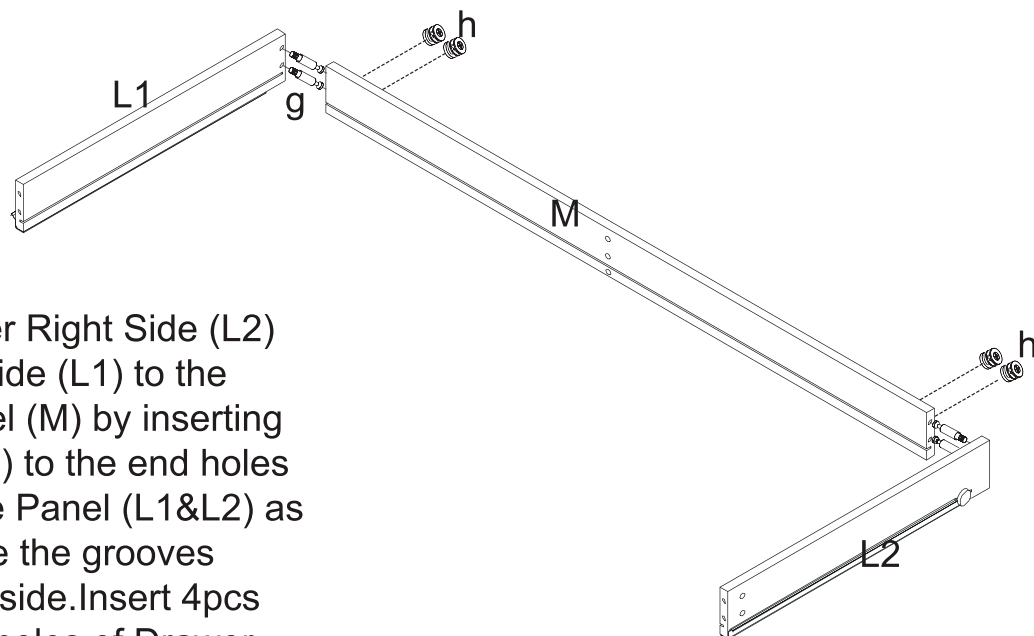

Attach both Drawer Right Side (L2) and Drawer Left Side (L1) to the Drawer Back Panel (M) by inserting 4pcs Cam Bolts (g) to the end holes of the Drawer Side Panel (L1&L2) as shown . Make sure the grooves line up and face inside. Insert 4pcs Cams (h) into the holes of Drawer Back Panel (M) . Lock the Cams (h) in the Drawer Back Panel (M) using phillips-head screwdriver .


STEP 7

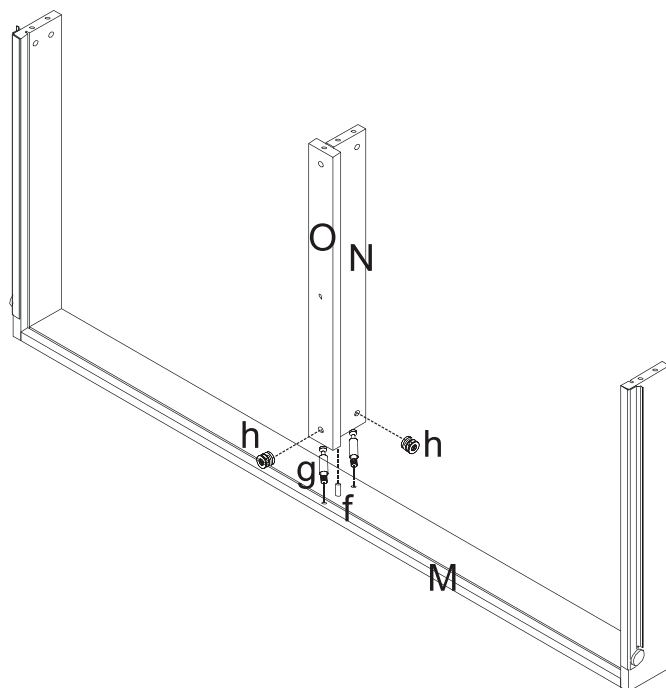


Attach the Middle Panel (N) to the center of the Drawer Back Panel (M) using 1pc Wood Dowel (c) , 1pc Cam Bolt (g) and 1pc Cam (h) . Attach the Bottom Support Bar (O) to the center of the Drawer Back Panel (M) using 1pc Cam Bolt (g) and 1pc Cam (h) .

STEP 8

Slide Drawer Bottom Panels (I) painted side up , into grooves of Drawer Side Panel (L1&L2) , the Bottom Support Bar (O) and the Middle Panel (N) as shown .

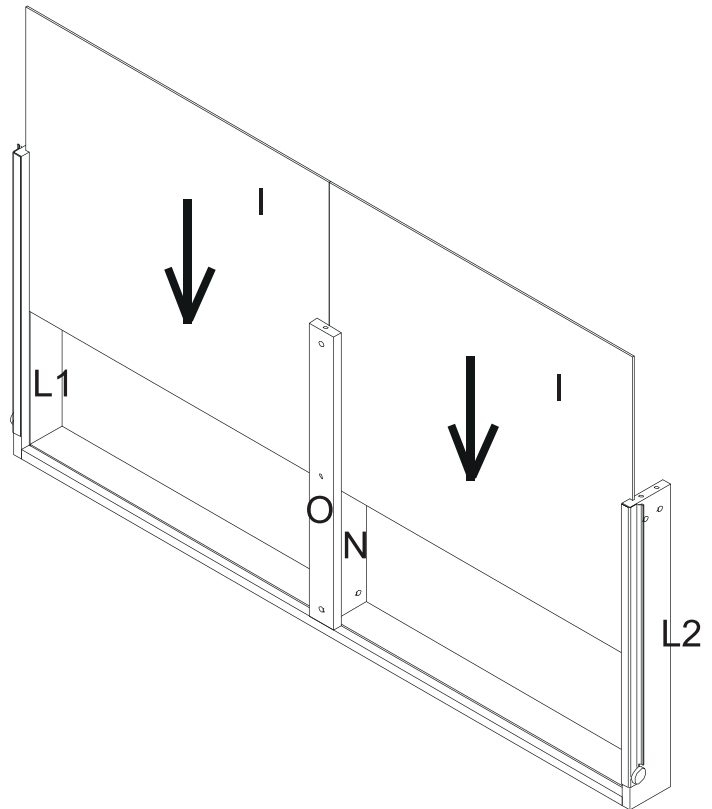

STEP 9

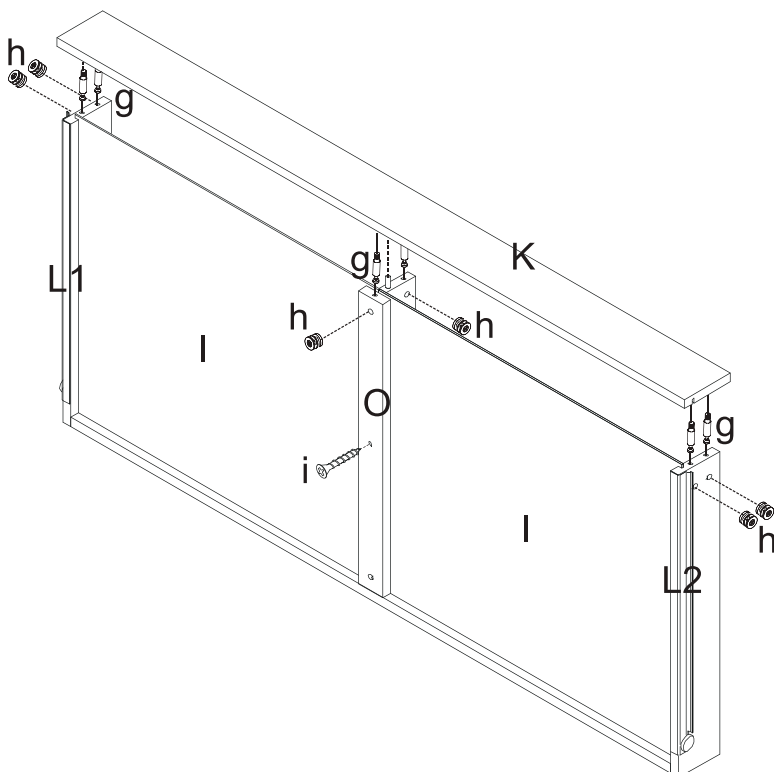


Attach Drawer Front Panel (K) by inserting Cam Bolts (g) into their corresponding Cam Bolts holes on ends of Drawer Side Panel (L1&L2), the Bottom Support Bar (O) and the Middle Panel (J) . Make sure the Drawer Bottom Panels (I) are also inserted into grooves of Drawer Front Panel (K) . Lock Cams (h) by turning them clockwise .

Place the whole drawer flat on the floor with the back up . Screw the screw (i) from the middle of the Bottom Support Bar (O) to the Middle Panel (N) , as the image shown .


STEP 10

Line up the drawer with the wheels and metal tracks on each side .

With the front slightly elevated , slide into the track on the end , lowering the front as it rolls into place under the toddler bed .

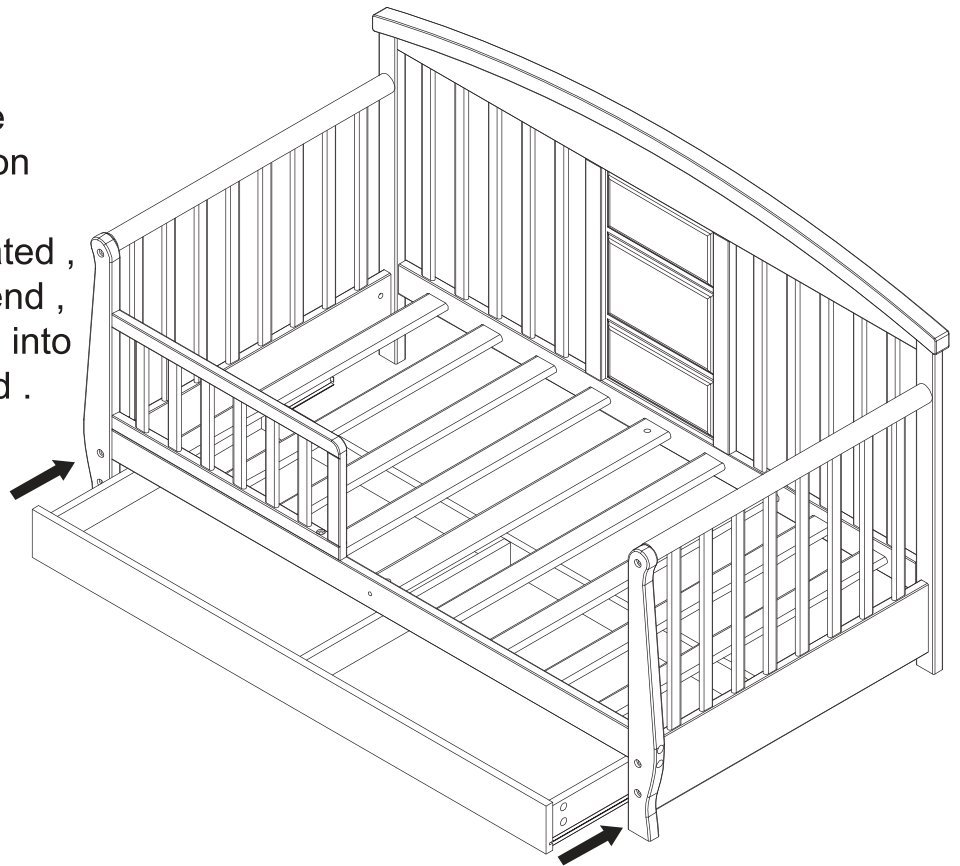

STEP 11

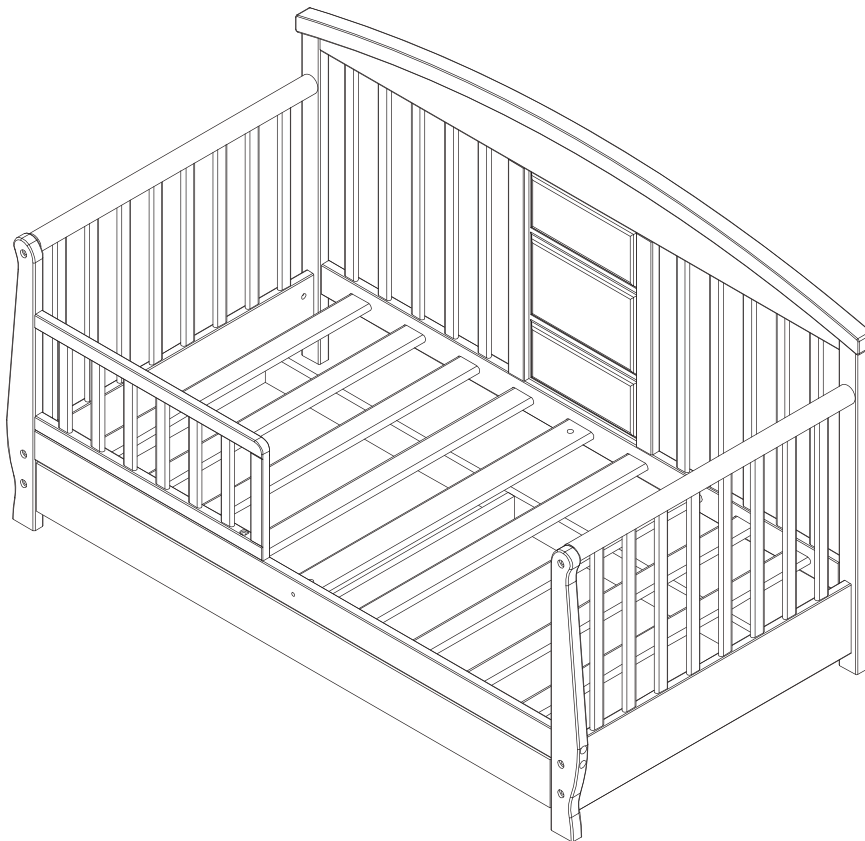

Congratulations , your toddler bed with drawer is ready to use .



1532, S. Washington Avenue
Piscataway, NJ 08854
E-mail: info@dreamonme.com

www.dreamonme.com

Follow us on



@dreamonmeinc



@dreamonmeinc

to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.



DOM
FAMILY



slumber baby


sweetpea baby

évolur
evolving with your baby