

DREAM ON ME INC.
1532 S WASHINGTON AVE
PISCATAWAY TOWNSHIP
NJ 08854
EMAIL: INFO@DREAMONME.COM
WWW.DREAMONME.COM



ASSEMBLY INSTRUCTIONS

ITEM NO: 646

Adult assembly required.

Small parts may present choking hazard prior to assembly.

Enclosed please find simple step-by-step instructions to help you quickly assemble your products. Before you begin we recommend that you following the steps below:

- 1. Please read the instructions thoroughly.**
- 2. Identify all parts and hardware**
- 3. You will need the following tools:**

Philips head screw driver


Flat head screw driver

Hammer

Do Not Use Power Drills or Drivers

To protect your parts during assembly please place them on a soft surface.

To clean surface use only water on a damp cloth. Do not use window cleaners or cleaning abrasives as it will scratch the surface and could damage the protective coating.

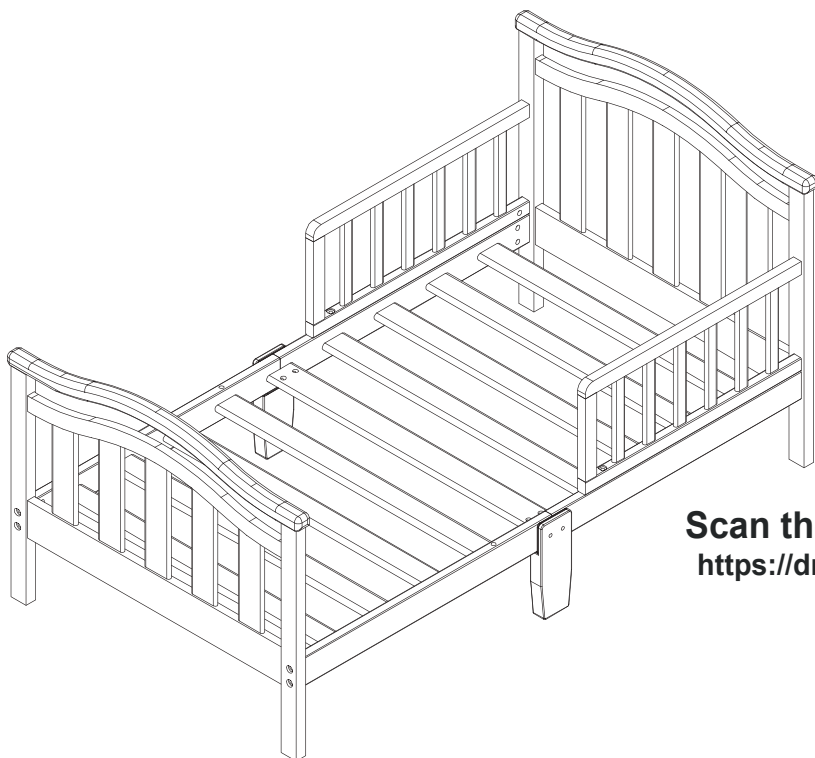

Scan the QR code to register your product
<https://dreamonme.com/customercare/registration/>






WARNING !


- FAILURE TO FOLLOW THESE WARNINGS AND THE ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.
- READ ALL INSTRUCTIONS BEFORE ASSEMBLING CRIB. KEEP INSTRUCTIONS FOR FUTURE USE.
- UPON COMPLETION OF ASSEMBLY, MAKE SURE ALL SCREWS, BOLTS AND FASTENERS HAVE BEEN SECURELY TIGHTENED. A FREQUENT AND PERIODICALLY CHECK SHOULD BE MADE TO CONFIRM ALL THE SCREWS AND NUTS REMAIN TIGHT.
- NEVER USE THIS PRODUCT IF THERE ARE ANY LOOSE, MISSING FASTENERS, LOOSE JOINTS, BROKEN PARTS, OR TORN MESH/FABRIC. CONTACT DREAM ON ME 1532 S WASHINGTON AVE PISCATAWAY NJ 08854 732-366-1788 FOR REPLACEMENT PARTS AND INSTRUCTIONAL LITERATURE IF NEEDED
- NEVER SUBSTITUTE PARTS, THE PRODUCT INCLUDING SIDE RAILS, MUST BE FULLY ERECTED PRIOR TO USE.
- NEVER USE BED FOR INFANTS, THIS TODDLER BED IS NOT A SUBSTITUTE FOR A CRIB, THE TODDLER BED IS USED FOR A CHILD BETWEEN THE AGE OF 15 MONTHS TO 5 YEARS WITH A MAXIMUM WEIGHT OF 50 POUNDS (22.7KG).
- NEVER USE PLASTIC SHIPPING BAG OR OTHER PLASTIC FILM AS A MATTRESS COVERS NOT SOLD AND INTENDED FOR THAT PURPOSE, THEY CAN CAUSE SUFFOCATION.
- CAUTION ENTRAPMENT HAZARD: TO AVOID DANGEROUS GAPS, ANY MATTRESS USED IN THIS BED SHALL BE FULL SIZE CRIB MATTRESS AT LEAST 51-58IN (1310MM) IN LENGTH, 27-1/4IN (690MM) IN WIDTH AND 4IN (100MM) IN THICKNESS, OR GREATER, BUT NOT EXCEED 5IN.
- NEVER USE A WATER MATTRESS WITH THIS TODDLER BED.
- WARNING STRANGULATION HAZARD: STRINGS CAN CAUSE STRANGULATION! NEVER PLACE BED NEAR WINDOW WHERE CORDS FROM BLINDS OR DRAPES MAY STRANGLE A CHILD. NEVER SUSPEND STRINGS OVER BED. NEVER PLACE ITEMS WITH A STRING CORD, OR RIBBON, SUCH AS HOOD STRINGS, PACIFIER CORDS AROUND A CHILD'S NECK. THESE ITEMS MAY CATCH ON BED PARTS.
- WARNING: INFANTS HAVE DIED IN TODDLER BEDS FROM ENTRAPMENT. OPENINGS IN AND BETWEEN BED PARTS CAN ENTRAP HEAD AND NECK OF A SMALL CHILD. NEVER USE BED WITH CHILDREN UNDER 15 MONTHS. ALWAYS FOLLOW THE ASSEMBLY INSTRUCTIONS.
- TO REDUCE THE RISK OF SIDS, PEDIATRICIANS RECOMMEND HEALTHY INFANTS BE PLACED ON THEIR BACK TO SLEEP, OR ADVISED BY YOUR PHYSICIAN.
- DO NOT USE BED IF THE SPACE BETWEEN BED AND SOLID OBJECTS IS LESS THAN 12IN (31CM), A CHILD COULD SLID INTO THE SPACE AND SUFFOCATE.
- IF REFINISHING, USE A NON-TOXIC FINISH SPECIFIED FOR CHILDREN'S PRODUCTS. TO WASH, CLEAN WITH MILD SOAP AND DAMP CLOTH. TO STORE, PLEASE KEEP IN A COOL PLACE.

MADE IN CHINA


COMPONENT PARTS

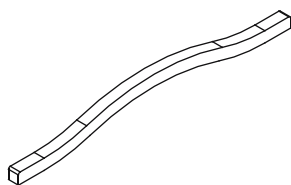


(A1)Top cap (1pc)
(B1)Top cap (1pc)

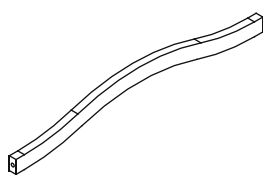


(A2) Top rail (1pc)
(B2) Top rail (1pc)

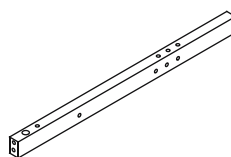


(A3)Headboard left leg(1pc)

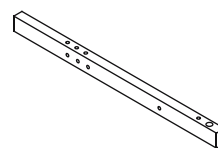


(A4)Headboard right leg(1pc)

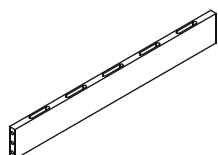


(A5)Headboard base rail(1pc)
(B5)Headboard base rail{1pc}

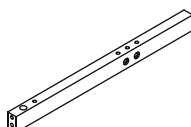


(B3) Footboard left leg(1pc)




(B4)Footboard left leg(1pc)




(A6)Headboard cross bar(2pc)




(B6)Headboard cross bar(2pc)




(A7)Headboard cross bar(2pc)




(B7)Headboard cross bar(2pc)




(A8)Headboard cross bar(1pc)



(B8)Headboard cross bar(1pc)

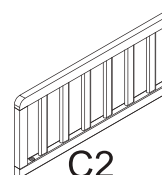


C2

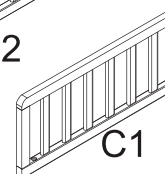


C1

(C1) Right Bed Rail (1pc)


(C2) Left Bed Rail (1pc)

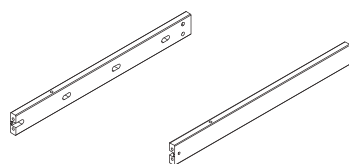


(D1) Right Side Rail (1pc)

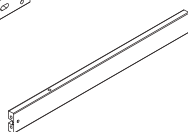


(D2) Left Side Rail (1pc)

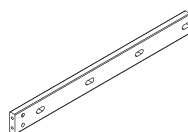


(E) Side Rail (2pcs)

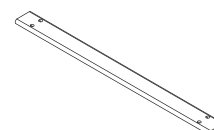

(F) Cross Middle Bar (1pc)

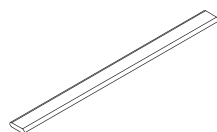


(G) Cross Bar (8pcs)




(H) Split Leg (2pcs)


COMPONENT PARTS




(a) Bolt 2-3/5' (22pcs)




(b) Barrel nut (14pcs)



(c) Allen Wrench (1pc)




(d) Bolt 1-3/5' (4pcs)

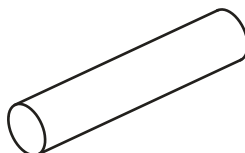


(e) Wood Dowel (4pcs)




(f) Selfdrilling Screw (8pcs)




(h) Cam lock (4pcs)




(i) Cam pin (4pcs)

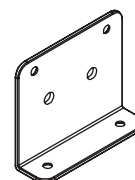

(g) L Metal Plate (2pcs)





PHILLIPS-HEAD SCREWDRIVER REQUIRED
FOR ASSEMBLY — NOT INCLUDE





(j) Wood Dowel (12pcs)

STEP#1





Insert the cross bar (A6, A7, A8) to top rail (A2) and headboard base rail (A5),
Connect headboard left leg (A3) and headboard right leg (A4) to headboard with bolt (a) and
wood dowel (j),
Connect top cap (A1) to headboard with cam pin (i) and cam lock (h)

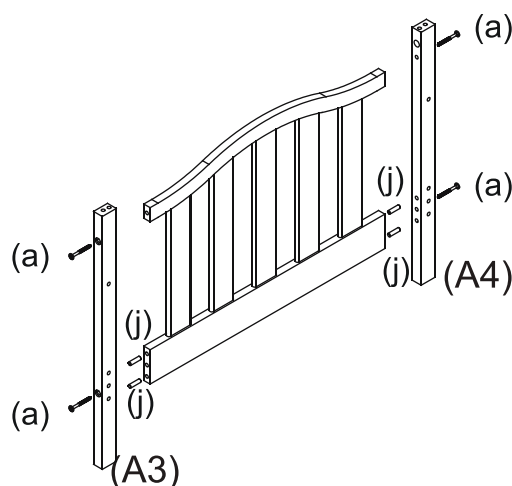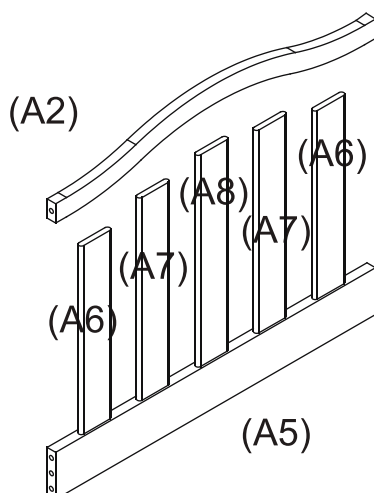

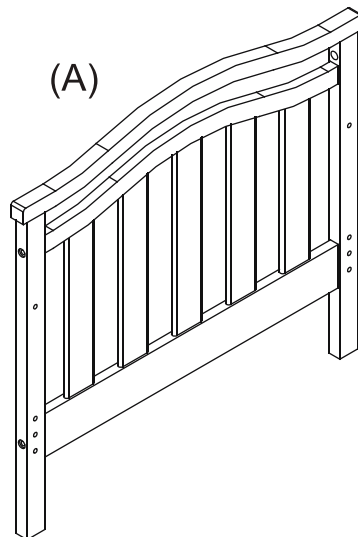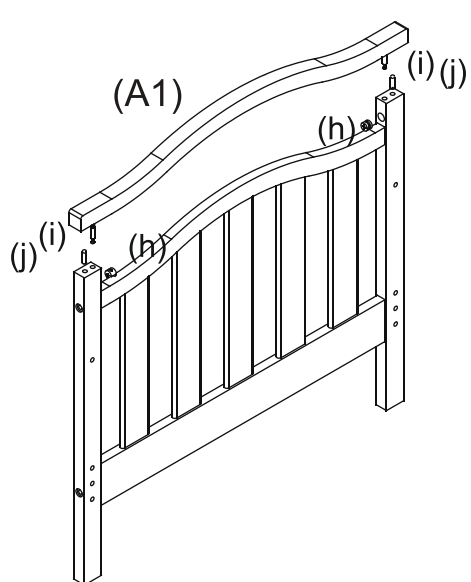


STEP#2

Insert the cross bar (B6, B7, B8) to top rail (B2) and footboard base rail (B5),
 Connect footboard left leg (B3) and footboard right leg (B4) to footboard with bolt (a) and
 wood dowel (j),
 Connect top cap (B1) to footboard with cam pin (i) and cam lock (h)

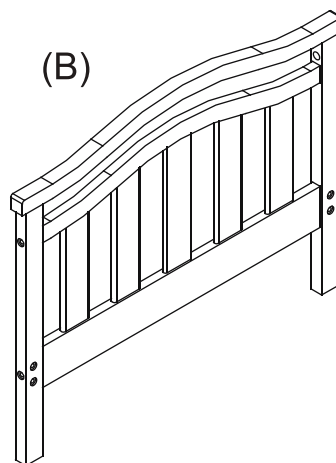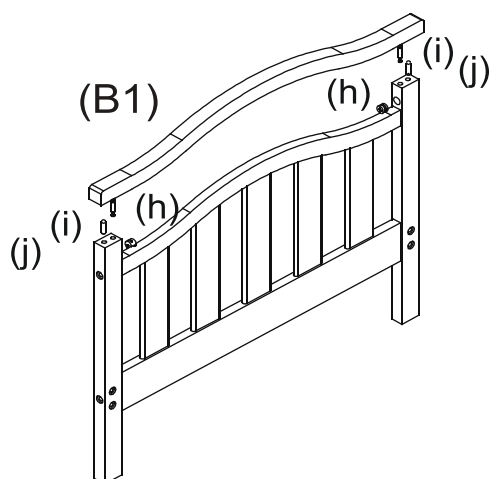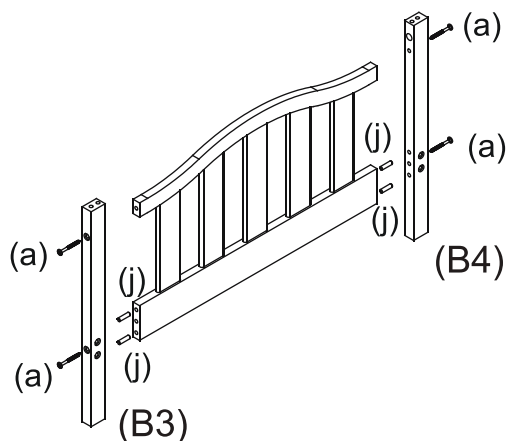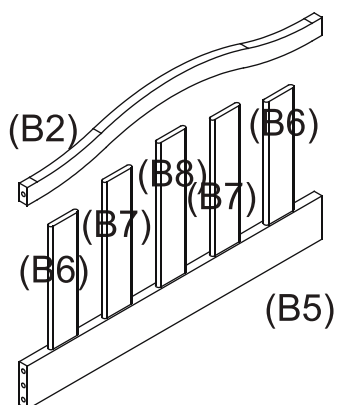

STEP#3


Connect Right Side Bar (D2)& Side Bar (E) and Left Side Bar (D1)& Side Bar (E) with Wood Dowel (e) .

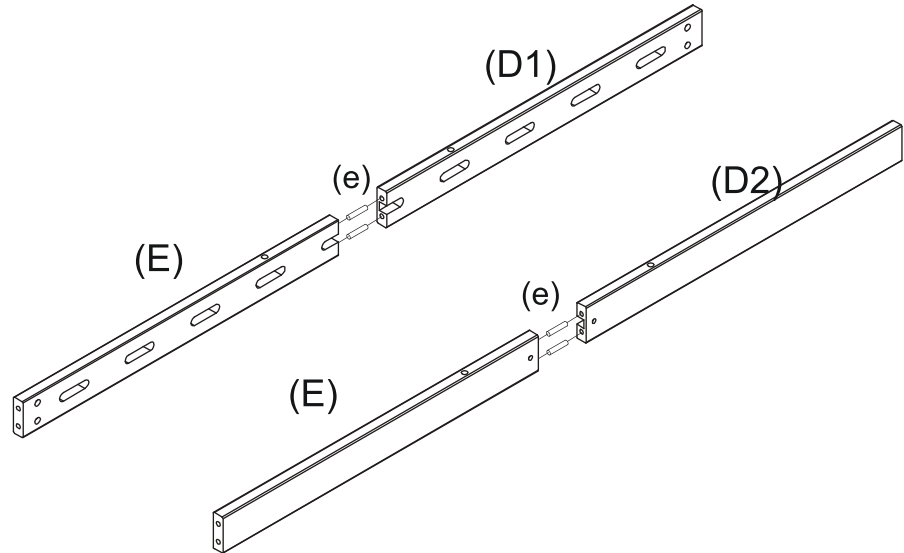

STEP#4


Connect the side bar(D1&D2) to the side bar(E) by L metal plates(g) and selfdrilling screws (f).

NOTE:When attach the L metal plates(g) make sure the L metal plates(g) match to the holes on the side bar (D&E). Then tighten the selfdrilling screws(f).

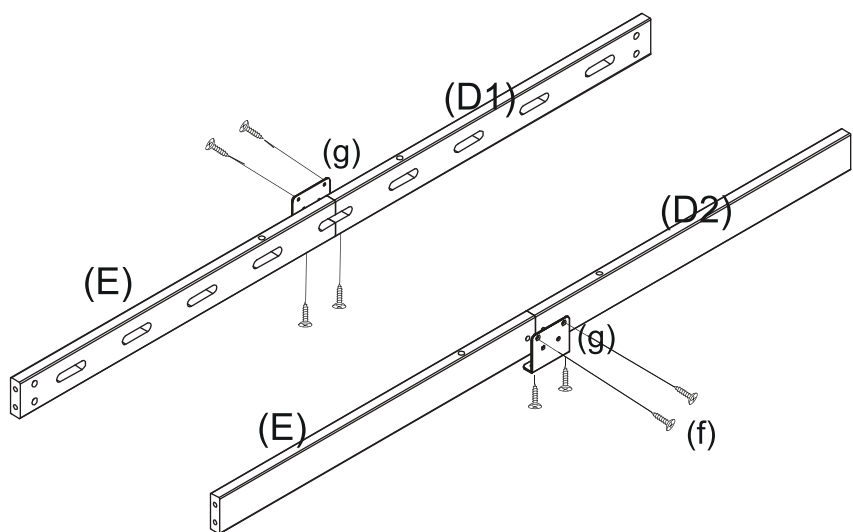


STEP#5

Insert the cross bar (F&G) to the left side bar (D1&E) then attach the split legs (H) to the cross middle bar(F) by bolts (a) and barrel nuts (b).

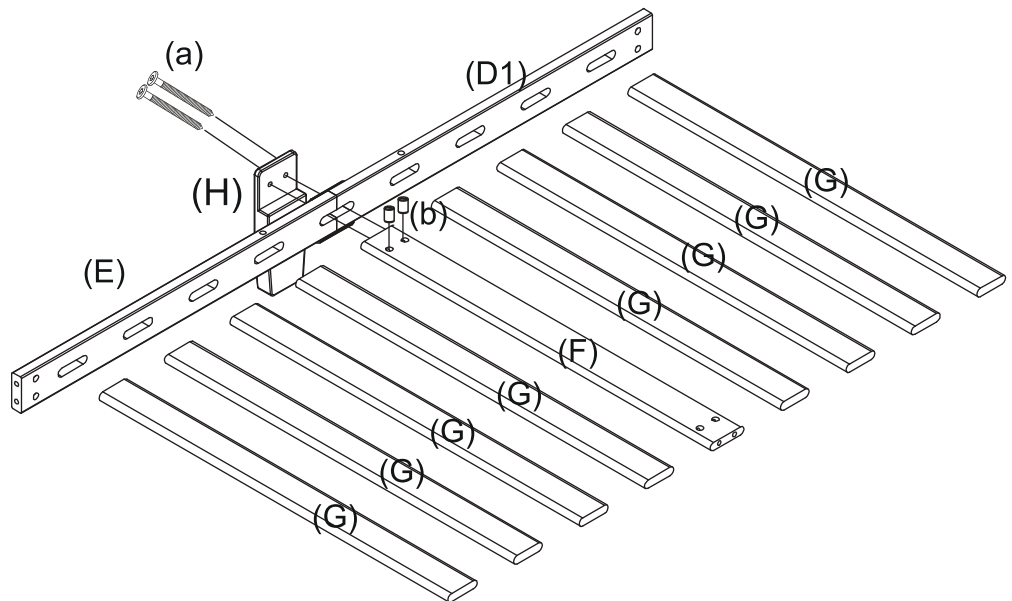


STEP#6

Insert the cross bar (D&E) to the right side bar (D2&E) then attach the split legs (H) to the cross middle bar(F) by bolts (a) and barrel nuts (b).

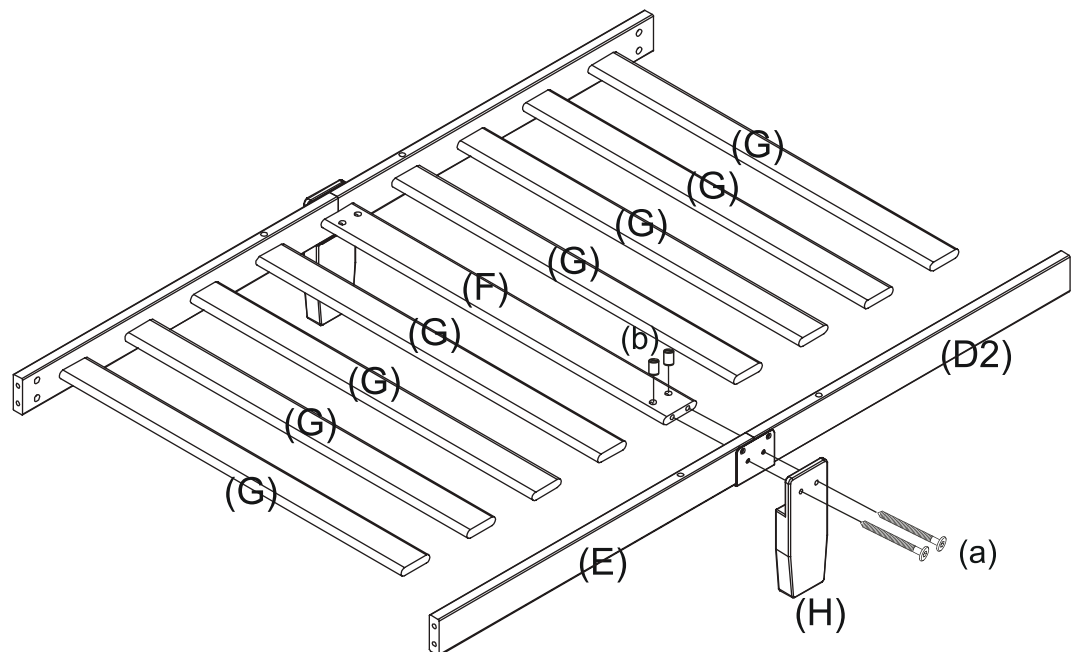


STEP#7

Connect headboard (A) to the left side bar (D1) using bolts (a) and Barrel Nuts(b).
The right side bar (D2) use the same way.

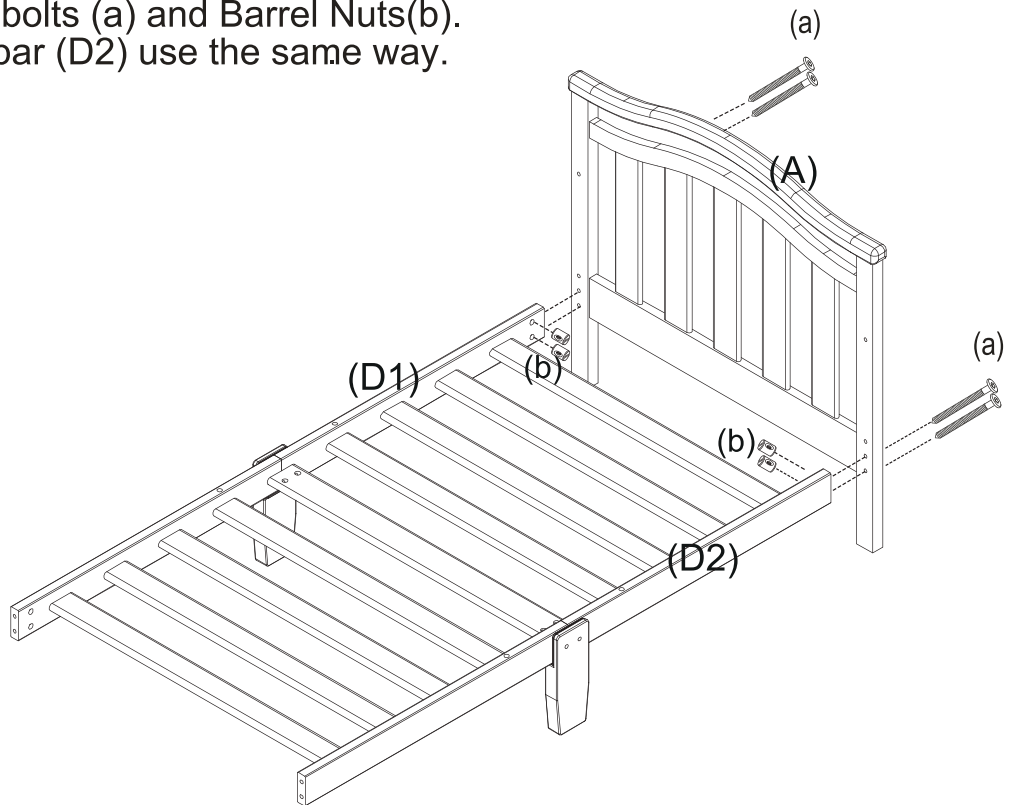

STEP#8


Connect the side bar (E) to the footboard (B) by using bolts (a) and barrel nuts (b) .

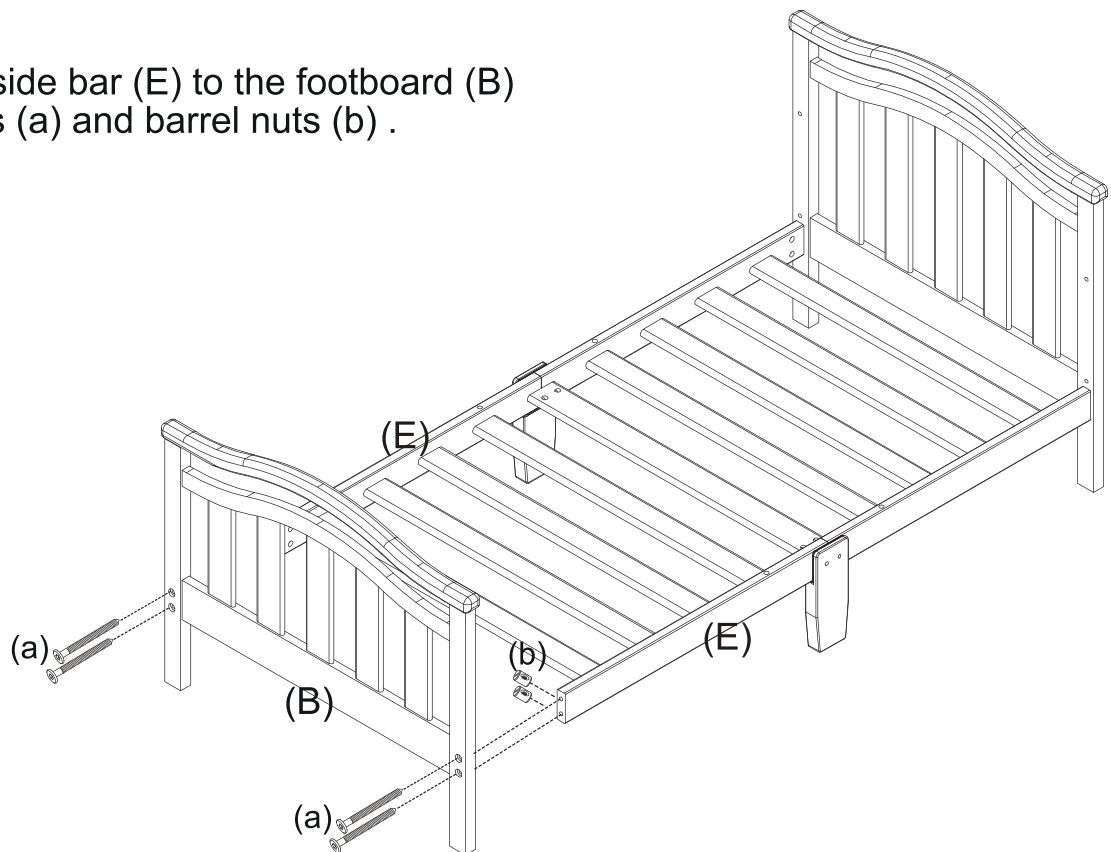

STEP#9


1. Connect right bed rail (C1) to the right side bar (D1) using bolt (d), Then connect the right bed rail (C1) to the headboard (A) by using bolts (a)&(d) and barrel nut (b).

2. Connect left bed rail (C2) to the left side bar (D2) using bolt (d), Then connect the left bed rail (C2) to the headboard (A) by using bolts (a)&(d) and barrel nut (b).

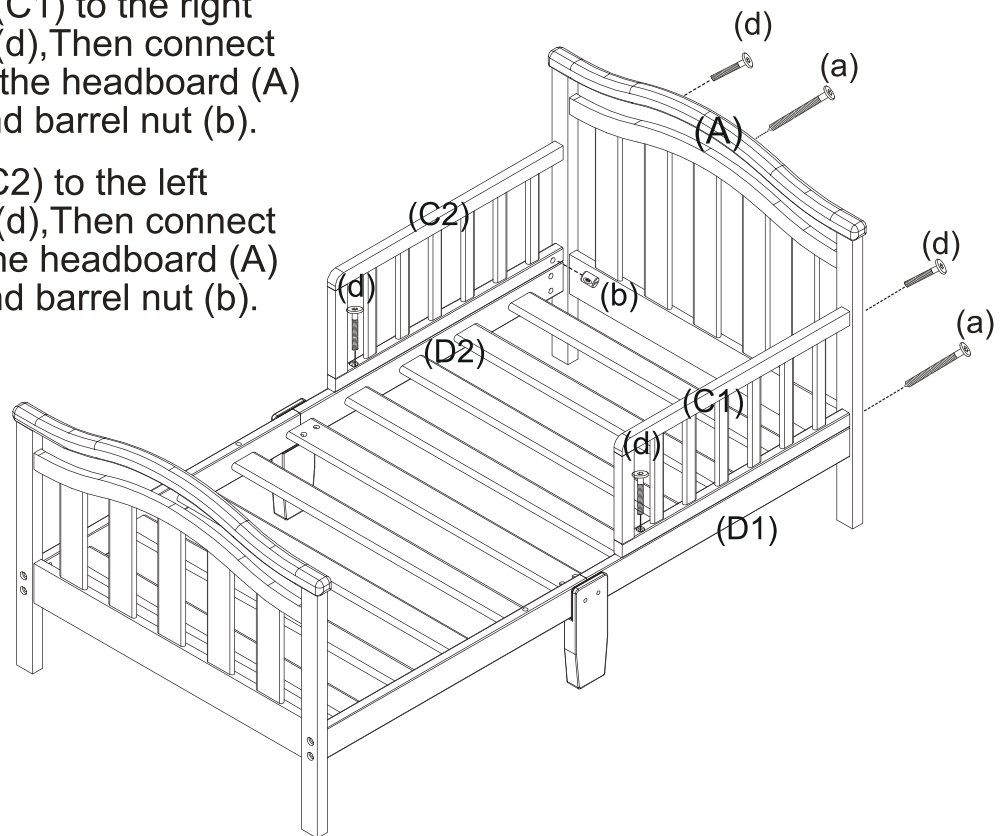

STEP#10

Make sure all bolts are tightened .

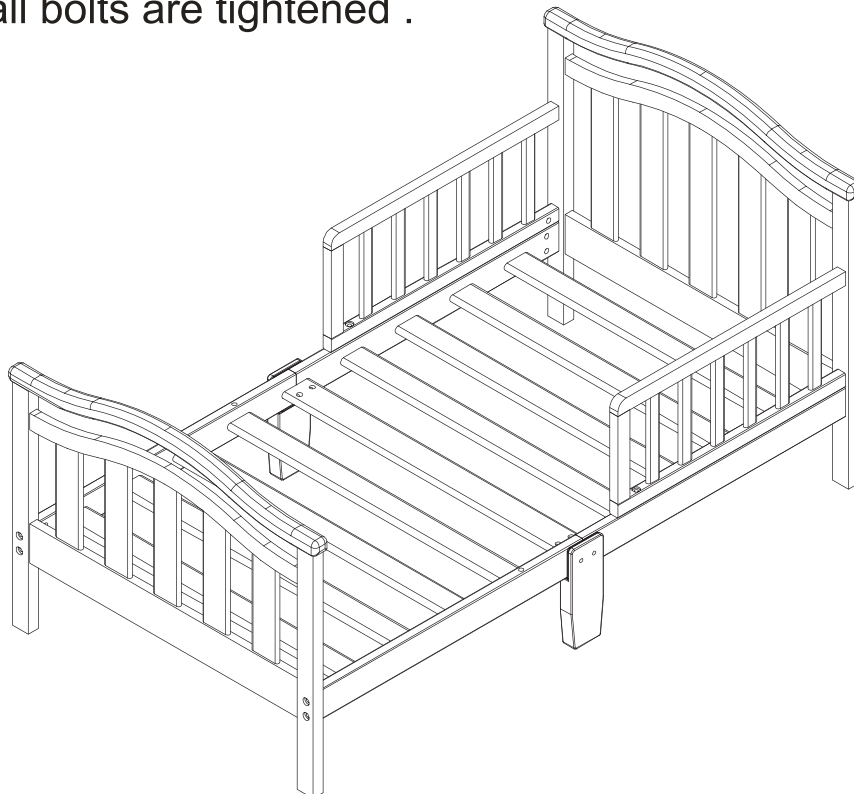

Congratulations, your toddler bed is ready to use.



1532, S. Washington Avenue
Piscataway, NJ 08854
E-mail: info@dreamonme.com

www.dreamonme.com

Follow us on



@dreamonmeinc



@dreamonmeinc

to get your nursery featured on our social media.

Enter our monthly giveaway!

Simply scan the QRcode to register.



Chat with us!

For any questions or concerns or feedback.



DOM
FAMILY



slumber baby


sweetpea baby

évolur
evolving with your baby